
 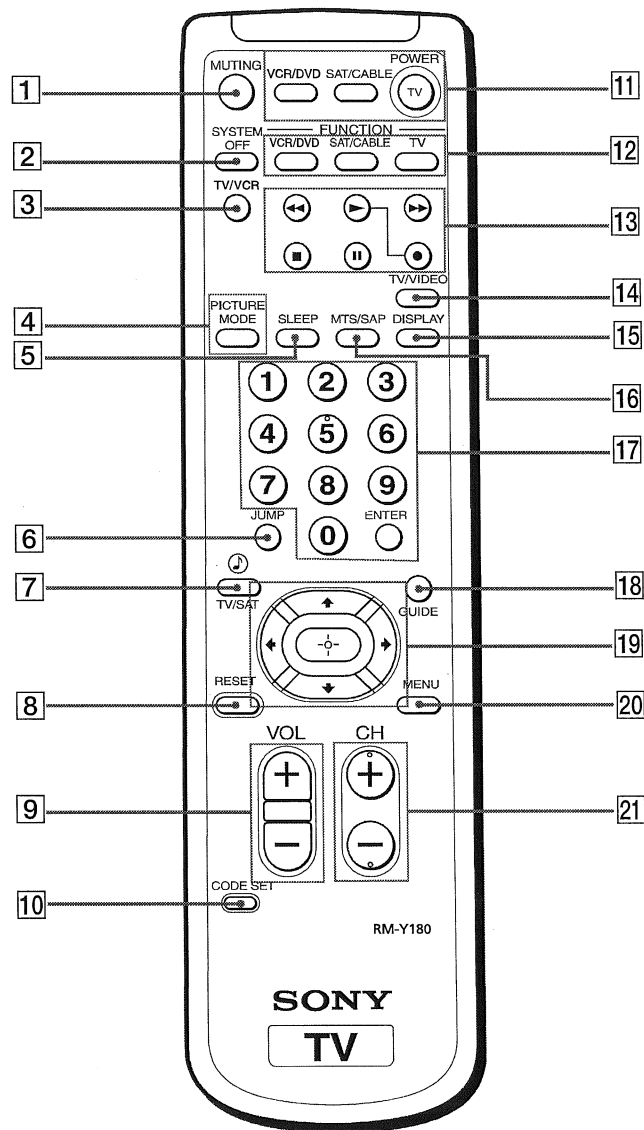


Using the Remote Control and Basic Functions

This section shows you how to use the more advanced buttons on the remote control and how to use the on-screen menus.



Using the Remote Control

1	MUTING	Instantly turns off the sound. Press again or press  to restore the sound.
2	SYSTEM OFF	Powers off all Sony equipment at once (may not work with older equipment).
3	TV/VCR	Press when you are finished using a VCR and you want to switch to the TV Antenna input. Your VCR power will remain on.
4	PICTURE MODE	Cycles through the available Video Mode settings.
5	SLEEP	Turns the TV off automatically in approximately 15, 30, 45, 60 or 90 minutes. Cancel by pressing until SLEEP OFF appears.
6	JUMP	Press to jump back and forth between two channels. The TV alternates between current channel and the last channel that was selected.
7	 TV/SAT	Press for a direct selection of Effect settings (Simulated, WOW, SRS, Off) (see page 20).
8	RESET	Press to return to factory settings while in an on-screen menu.
9	VOL (volume)	Press when you want to adjust the volume.
10	CODE SET	Use to program your remote control to operate connected video equipment (see page 32).
11	POWER	Press when you want to turn connected equipment on or off.
12	FUNCTION	Press when you want to control connected equipment with your remote control.
13	VCR/DVD (operating)	Operates VCR or DVD. Use when you want to operate connected VCR or DVD with your remote control.
14	TV/VIDEO	Cycles through available video inputs.
15	DISPLAY	Press once to show current time (if set) and channel number. Press again to turn DISPLAY off.
16	MTS/SAP	Cycles through the Multi-channel TV Sound (MTS) options: Stereo, Mono, and Auto SAP (Second Audio Program).
17	0-9 and ENTER	Change the channels directly. Press 0-9 buttons to select a channel, then press ENTER.
18	GUIDE	Brings up the custom guide of your satellite receiver.
19		Moves the cursor in the on-screen menus. Press the arrow buttons to move the cursor. Press the center button to select or access an option.
20	MENU	Displays the on-screen menu. Press again to exit the menu at any time.
21	CH (channel)	Press when you want to change channels.

 If you lose your remote control, see page 36.

Other Information

Programming the Remote Control

You can use the supplied remote control to operate Sony or non-Sony video equipment.

- 1 Press .
- 2 Press  or  (FUNCTION).
- 3 Use the - buttons to key in the code number from the following chart.
- 4 Press .

VCR codes

Sony	301, 302, 303	JCPenney	309, 305, 304, 330, 314, 336, 337
Admiral (M.Ward)	327	JVC	314, 336, 337, 345, 346, 347
Aiwa	338, 344	Kenwood	314, 336, 332, 337
Audio Dynamic	314, 337	LXI (Sears)	332, 305, 330, 335, 338
Broksonic	319, 317	Magnavox	308, 309, 310
Canon	309, 308	Marantz	314, 336, 337
Citizen	332	Marta	332
Craig	302, 332	Memorex	309, 335
Criterion	315	Minolta	305, 304
Curtis Mathis	304, 338, 309	Mitsubishi/MGA	323, 324, 325, 326
Daewoo	341, 312, 309	Multitech	325, 338, 321
DBX	314, 336, 337	NEC	314, 336, 337
Dimensia	304	Olympic	309, 308
Emerson	319, 320, 316, 317, 318, 341	Optimus	327
Fisher	330, 335	Panasonic	308, 309, 306, 307
Funai	338	Pentax	305, 304
General Electric	329, 304, 309	Philco	308, 309
Go Video	322, 339, 340	Philips	308, 309, 310
Goldstar	332	Pioneer	308
Hitachi	306, 304, 305, 338	Quasar	308, 309, 306
Instant Replay	309, 308	RCA/PROSCAN	304, 305, 308, 309, 311, 312, 313, 310, 329

Operating Instructions

VCR codes

Realistic	309, 330, 328, 335, 324, 338
Samsung	322, 313, 321
Sansui	314
Sanyo	330, 335
Scott	312, 313, 321, 335, 323, 324, 325, 326
Sharp	327, 328
Shintom	315
Signature 2000 (M.Ward)	338, 327
SV2000	338
Sylvania	308, 309, 338, 310

Cable box codes

Sony	230
Hamlin/Regal	222, 223, 224, 225, 226
Jerrold/G. I.	201, 202, 203, 204, 205, 206, 207, 208, 218
Oak	227, 228, 229
Panasonic	219, 220, 221
Pioneer	214, 215
Scientific Atlanta	209, 210, 211
Tocom	216, 217
Zenith	212, 213

Laser Disc Player codes

Sony	701
Panasonic	704, 710
Pioneer	702

DBS codes

DIRECTV	809
Echostar/Dish Network	810

Symphonic	338
Tashiro	332
Tatung	314, 336, 337
Teac	314, 336, 338, 337
Technics	309, 308
Toshiba	312, 311
Wards	327, 328, 335, 331, 332
Yamaha	314, 330, 336, 337
Zenith	331

Satellite receiver codes

Sony	801
General Electric	802
Hitachi	805
Hughes	804
Panasonic	803
RCA/PROSCAN	802, 808
Toshiba	806, 807

DVD codes

Sony	751
JVC	756
Mitsubishi	761
Onkyo	762
Oritron	759
Panasonic	753
Philips/ Magnavox	757
Pioneer	752
RCA	755
Samsung/Hitachi	758
Toshiba	754
Zenith	760

✎ If more than one code number is listed, try entering them one by one until you come to the correct code for your equipment.

✎ Whenever you remove the batteries, the code numbers may revert to the factory setting and must be reset.

✎ In some rare cases, you may not be able to operate your equipment with the supplied remote control. In this case, use the equipment's supplied remote control.

Operating a VCR

Press	To
VCR/DVD 	Power on the VCR
0-9	Select channels directly
CH + -	Change channels
▶	Play video tape
■	Stop
◀◀ or ▶▶	Search forward or backward
	Pause
● and ▶	Record
TV/VCR +○	Change between VCR and TV inputs

Operating a DVD

Press	To
VCR/DVD 	Power on the DVD
0-9	Select chapters directly
CH + -	Search chapters forward or backward
▶	Play DVD
■	Stop
	Pause
↑, ↓, ←, →	Move the cursor in the menu
MENU 	Display the DVD menu

Operating a Laser Disc

Press	To
VCR/DVD 	Power on the laser disc
CH + -	Search chapters forward or backward
▶	Play disc
■	Stop
	Pause