 



Using Your Remote Control

Inserting the Batteries

Before you can use the remote control, you must insert the supplied batteries. If you want to use this remote control to operate other audio/video equipment, such as a TV or VCR, you must set up the remote control (see page 19).

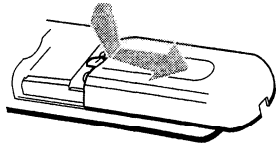

 - 1 Push and slide open the battery compartment.

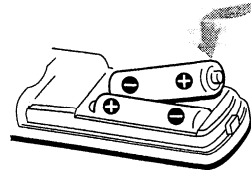

- 2 Insert two size AA batteries (supplied). Be sure to match the + and – marks on the batteries with the + and – marks inside the battery compartment.

 
Notes

- When the batteries become weak, the Function button indicators flash. If the remote control does not work properly, the batteries may be weak.
- When replacing batteries, replace both batteries with new ones. Do not mix different types of batteries together.
- When you remove the batteries, any manufacturer codes you've set up may be erased. To set up the remote control again, see "Setting Up the Remote Control" on page 19.


Selecting Items

In on-screen displays such as the Main Menu and program guides, you must first move the highlight to the item you want, then select the item.

RM-Y808 Remote Control

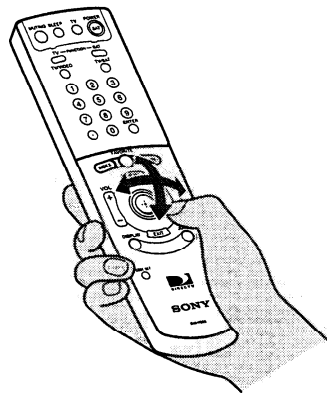


 - 1 Move the joystick in any direction to move the highlight to the item you want.

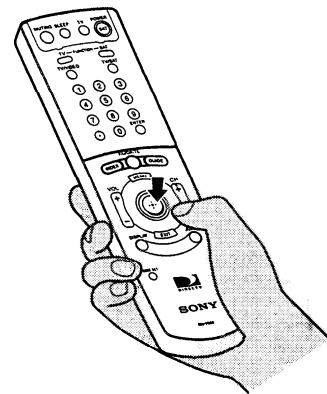

- 2 Press down on the joystick to select the item.

 Understanding the Buttons

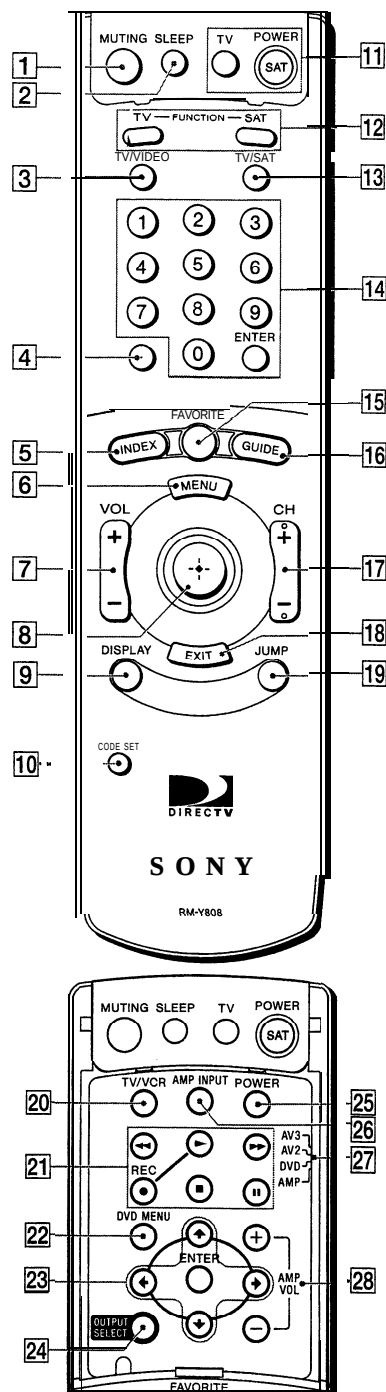

Note

You may need to set up the remote control to operate your other audio/video equipment. See "Setting Up the Remote Control" on page 19 for details.

1 MUTE button

Mutes the volume. Press again to restore the volume. To operate your TV, you must first set up the remote control (see page 19).

2 SLEEP button

Sets the TV to turn off automatically after a certain amount of time (if your TV has the Sleep feature). To operate your TV, you must first set up the remote control (see page 19).

3 TV/VIDEO button

Switches between the various inputs of your TV. To operate your TV, you must first set up the remote control (see page 19).

4 (Dot) button

Use with the 0-9 and ENTER buttons to select subchannels (for example, 2.1).

5 INDEX button

Opens the Station Index.

6 MENU button

Opens the Main Menu.

7 VOL (Volume) +/- button

Adjusts the volume. To operate your TV, you must first set up the remote control (see page 19).

8 Joystick

Moving the joystick up, down, left, and right moves the highlight in on-screen displays. Press the joystick to select the highlighted item.

9 DISPLAY button

Opens the program information display for the current program.

10 CODE SET button

Lets you program the remote control to operate your TV and other audio/video equipment (see page 19).

11 POWER buttons

Turn on and off the Digital Satellite Receiver and TV. To operate your TV, you must first set up the remote control (see page 19).

Understanding the Buttons (continued)

12 FUNCTION buttons

Select the equipment (TV or SAT) that you want to operate. The indicators light up to show which device the remote control is operating. To operate your TV, you must first set up the remote control (see page 19).

13 TV/SAT button

Switches the signal being output by the VHF(SAT)/UHF OUT jack (see page 85).

14 O-9 and ENTER buttons

Change channels directly, and enter numerical values in on-screen displays.

15 FAVORITE button

Opens the Favorite Stations guide.

16 GUIDE button

Opens the Program Guide.

17 CH (Channel) +/- button

Changes channels. When a program guide is open, pressing the CH button pages through the guide.

18 EXIT button

Closes all on-screen displays including program guides and menus.

19 JUMP button

Changes channels to the previously tuned channel.

20 TV/VCR button

Switches between the inputs of your VCR. To operate your VCR, you must first set up the remote control (see page 19).



VCR/DVD Control buttons

Operate VCR/DVD features such as play, record, pause, stop, and fast wind. To operate your VCR/DVD, you must first set up the remote control (see page 19).

(22) DVD MENU button

Opens the menu system of the current DVD. To operate your DVD player, you must first set up the remote control (see page 19).

23 DVD Control buttons

Let you highlight and select items in **DVD** Menus. To operate your DVD player, you must first set up the remote control (see page 19).

24 OUTPUT SELECT button

Changes the video output of your Digital Satellite Receiver (see page 11). The available settings are:

- Video 1/2, VHF/UHF 480i
- Video 3 480i
- Video 3 variable
- Video 3 1080i
- VGA 1080i

25 POWER button

Turns on or off other devices in your A/V system selected with the AV3/AV2/DVD/AMP switch. To operate these other devices, you must first set up the remote control (see page 19).

26 AMP INPUT button

Selects the main input of your audio receiver. To operate your audio receiver, you must first set up the remote control (see page 19).



 
AV3/AV2/DVD/AMP switch

Sets the remote to operate other devices in your home theater. To operate these other devices, you must first set up the remote control (see page 19).

28 AMP VOL (Amplifier Volume) +/- buttons

Adjust the volume of your audio receiver. To operate your audio receiver, you must first set up the remote control (see page 19).

Setting Up the Remote Control

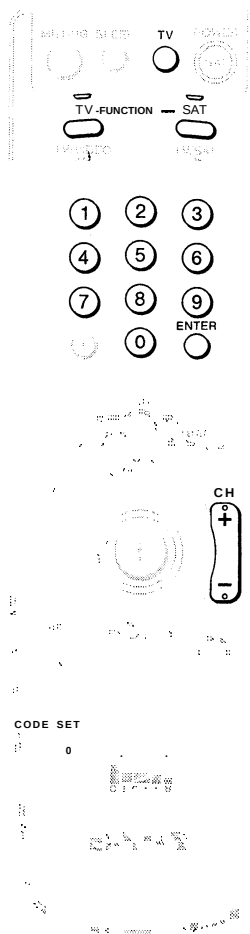

The RM-Y808 remote control can be programmed to operate most audio/video equipment.

The remote control comes from the factory ready to control most Sony TVs, VCRs, DVD players, and amplifiers.

1 Find the code(s) for the manufacturer of the device you want to operate with this remote control.

You can find these codes on pages 20 and 21.

 
2 Press the CODE SET button.

The TV function indicator begins flashing.



3 Press the 0-9 buttons to input the manufacturer code, then press the ENTER button.

The function indicator goes off, and the remote is setup to operate that device.



4 Test the remote control.

Press the POWER button for that equipment, then press other operation controls such as the CH (channel) +/- button.

If the device does not respond to the remote control, repeat from step 2 and enter a different manufacturer code in step 3.

Tips

- Remember to aim the remote control at the device you are trying to operate.
- To control extra VCRs, a DVD player or an audio receiver (AMP) with the RM-Y808 remote control, slide the device switch to AV2, AV3, DVD or AMP after you have set up the remote with the correct manufacturer code.

Manufacturer Codes

The RM-Y808 remote control is compatible with most models of the following brands.

TV Codes

Manufacturer	Code
Sony	101
Admiral (M. Wards)	102, 114, 109
ABC	112
Bell & Howell (M. Wards)	114, 109, 138
Broksonic	103, 112
Craig	122, 123, 120, 121
Croslex	111
Curtis Mathis	103, 119, 123
Daewoo	135, 136, 103
Daytron	113
Emerson	122, 113, 120, 121, 123, 103, 115
Fisher	125
General Electric	102, 118, 103, 107
Goldstar	103, 113, 112, 130
Hitachi	131, 113, 103, 132
JCPenney	103, 102, 130, 107
JVC	128, 129
KTV	133, 113, 103, 123, 134
Loewe	111
LXI (Sears)	102, 103, 111, 125, 119, 112
Magnavox	111, 112, 113, 107
Mitsubishi/MGA	124, 103, 112
NEC	103, 112
Panasonic	118, 116, 117, 107
Philco	111, 118, 109
Philips	111
Pilot	103
Pioneer	137, 118, 119
Portland	103, 108
Quasar	110, 107
Radio Shack	102, 112, 124, 123
RCA/Proscan	102, 103, 104, 105, 106, 107, 108
Samsung	126, 112, 113, 103
Sanyo	125
Scott	123, 112
Sharp	114, 113, 115
Signature 2000 (M. Wards)	114, 109
Sylvania	111, 112, 108
Symphonic	123, 139
Teknika	109
Toshiba	119, 114
Videch	131, 103, 112
Wards	113, 103, 115, 112
Zenith	108, 110

VCR Codes

Manufacturer	Code
Sony	301, 302, 303
Aiwa	338
Audio Dynamic	314, 347
Bell & Howell (M. Wards)	330, 343
Broksonic	317, 319
Canon	309, 308
Citizen	332
Craig	315, 302, 332
Curtis Mathis	304, 338, 309
Daewoo	341, 312, 309
DBX	314, 336, 337
Dimensia	304
Emerson	319, 320, 316, 317, 318, 341
Fisher	330, 334, 335, 333
Funai	338
General Electric	329, 304, 309
Go Video	322, 339, 340
Goldstar	332
Hitachi	306, 304, 305, 338
HQ	315
Instant Replay	309, 308
JCPenney	309, 305, 304, 330, 314, 336, 337
JVC	314, 336, 337
Kenwood	314, 336, 332, 337
LXI (Sears)	332, 305, 333, 334, 330, 335, 338
Magnavox	310, 308, 309
Marantz	314, 336, 337
Marta	332
Memorex	309, 335
Minolta	305, 304
Mitsubishi/MGA	323, 324, 325, 326
Multitech	325, 338, 321
NEC	314, 336, 337
Olympic	309, 308
Optimus	327
Panasonic	308, 309, 306, 307
Pentax	305, 304
Philco	308, 309
Philips	310, 308, 309
Pioneer	308
Quasar	306, 308, 309
RCA/Proscan	304, 305, 308, 309, 310, 311, 312, 313

VCR Codes (continued)

Manufacturer	Code
Realistic	309, 330, 328, 335, 324, 338
Sansui	314
Singer	315
Samsung	322, 313, 321
Sanyo	330, 335
Scott	312, 313, 321, 335, 323, 324, 325, 326
Sharp	327, 325, 328
Shintom	315
Signature 2000 (M. Wards)	336, 327
Sylvania	310, 308, 309, 338
Symphonic	338
Tashiro	332
Tatung	314, 336, 337
Teac	314, 336, 338, 337
Technics	309, 308
Teknika	338, 342
Toshiba	312, 311
Wards	327, 328, 335, 331, 332
Yamaha	330, 314, 336, 337
Zenith	331

DVD Codes

Manufacturer	Code
Sony	601
Panasonic	604
Pioneer	605
RCA	602
Toshiba	603

AMP (Amplifier) Codes

Manufacturer	Code
Sony	501
Denon (Sharp)	516, 517, 518
Harmon	519
JVC	506, 507, 508
Kenwood	504, 505
McIntosh	520
Onkvo	512, 513
Pioneer	502, 503
Technics	509, 510, 511
Yamaha	514, 515