


Programming the

If you have video equipment that you want to control with the LCD projection TV's remote control, use the following procedures to program the remote control.

- ✎ The equipment must have infrared (IR) remote capability in order to be used with the remote control.

From the "Manufacturer's Codes" listed on page 83, select the three-digit code number for the manufacturer's code for your component. If more than one code number is listed, start with the number listed first. Use the code number to complete the following procedure.

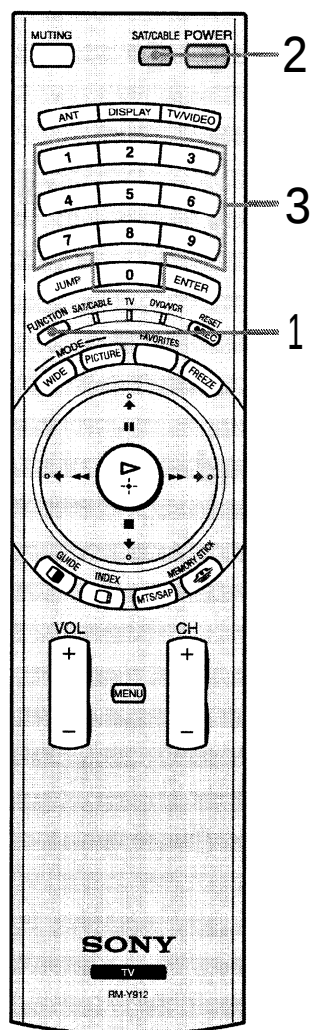

1 Press FUNCTION repeatedly to select your desired input.

2 Press SAT/CABLE for five seconds.
The indicator of the selected input flashes.

Input the three-digit manufacturer's code number.

- ✎ When no code number is input for 30 seconds or invalid or incorrect numbers are input, the remote control is reset to the normal TV remote control mode.

tips

If more than one code number is listed, try entering them one by one until you come to the correct code for your component.

If you enter a new code number, the code number you previously entered at that setting is erased.

In some rare cases, you may not be able to operate your component with the Sony remote control. In this case, use the component's own remote control unit.

Sony	301
Admiral	327
(M. Ward)	
Aiwa	338,344
Audio Dynamic	3 14,337
Broksonic	319,317
Canon	309,308
Citizen	332
Craig	302,332
Criterion	315
Curtis Mathes	304, 338, 309
Daewoo	341, 312, 309
DBX	314, 336, 337
Dimensia	304
Emerson	319, 320,316, 317, 318, 341
Fisher	330,335
Funai	338
General Electric	329, 304, 309
Go Video	322, 339, 340
Goldstar	332
Hitachi	306, 304, 305, 338
Instant Replay	309,308
JC Penney	309, 305, 304, 330, 314, 336, 337
JVC	314, 336,337, 345, 346, 347
Kenwood	314, 336,332, 337
LXI (Sears)	332, 305, 330, 335,338
Magnavox	308, 309, 310
Marantz	314, 336, 337
Marta	332
Memorex	309,335

Operating a VCR

Press **FUNCTION** until the DVD/VCR indicator lights up.

Turn on/off	SAT/CABLE (POWER)
Change channels	CH +/-
Record	▶ and REC simultaneously
Play	▶
stop	■
Fast forward	▶▶
Rewind the tape	◀◀
Pause	 (press again to resume normal playback)
Search the picture forward or backward	▶▶ or ◀◀ during playback (release to resume normal playback)

Operating a DVD Player

Press **FUNCTION** until the DVD/VCR indicator lights up.

Turn on/off	SAT/CABLE (POWER)
Play	▶
stop	■
Pause	 (press again to resume normal playback)
Step through different tracks of an audio disc	▶▶ to step forward or ◀◀ to step backward
Step through different chapters of a video disc	CH+ to step forward or CH- to step backward

Operating a Cable Box

Press **FUNCTION** until the SAT/CABLE indicator lights up.

Turn on/off	SAT/CABLE (POWER)
Select Cable Box	SAT/CABLE (FUNCTION)
Select a channel	0-9 buttons, ENTER
Change channels	CH +/-
Back to previous channel	JUMP

Operating a Satellite Receiver

Press **FUNCTION** until the SAT/CABLE indicator lights up.

Turn on/off	SAT/CABLE (POWER)
Select Satellite Receiver	SAT/CABLE (FUNCTION)
Select a channel	0-9 buttons, ENTER
Change channels	CH +/-
Back to previous channel	JUMP
Display channel number	DISPLAY
Display DBS menu	MENU
Select item	