 


Using the Features

Using the Remote Control

The following table describes the buttons on the remote control and their functions.


Button Descriptions

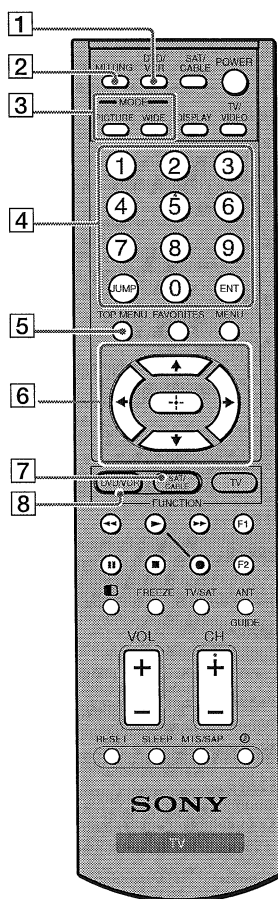


Button	Description
1 DVD/VCR (GREEN)	Press to turn on/off the DVD or VCR player.
2 MUTING	Press to mute the sound. "MUTING" will appear on the screen. Press again or press VOL + to restore the sound.
3 WIDE MODE	Press to step through the wide screen modes: Wide Zoom, Normal, Full and Zoom. For details, see "Using Wide Screen Mode" on page 58.
PICTURE MODE	Press repeatedly to step through the available video picture modes: Vivid, Standard and Pro. Also available in the Video menu. For details, see "Selecting Video Options" on page 60.
4 0 - 9	Press 0 - 9 to select a channel, the channel changes after 2 seconds.
ENT	Press to select channel immediately after entering numbers.
JUMP	Press to jump back and forth between two channels. The LCD projection TV alternates between the current channel and the last channel that was selected.
5 TOP MENU	When DVD is connected, the title menu list will appear.
6 ↑/↓/←/→	When the menu is displayed, press to move the on-screen cursor.
	When the menu is displayed, press to select the item.
7 SAT/CABLE FUNCTION	Press to select satellite or cable TV.
8 DVD/VCR FUNCTION	Press to select the DVD/VCR.

(Continued)

 Using the Features

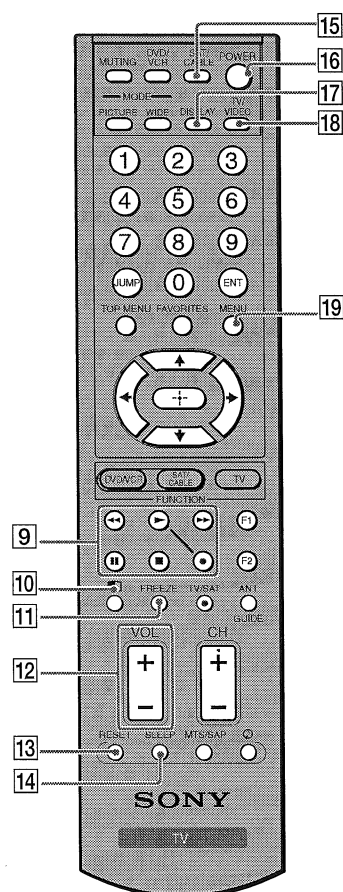

- | | |
|---|--|
| <p>9      </p> <p>10 </p> <p>11 FREEZE</p> <p>12 VOL +/-</p> <p>13 RESET</p> <p>14 SLEEP</p> | <p>15 PAUSE
 : Pause
 : Stop
 : Rewind
 : Play
 : Fast-Forward
 : Record by pressing  and </p> <p>Press to turn on/off Twin View. For details, see “Using Twin View” on page 54.</p> <p>Press to freeze the current frame. This is useful when you need to copy down information that appears on the LCD projection TV’s screen (see “Using the Freeze Function” on page 57). Press again to restore the picture.</p> <p>Press to adjust the volume (+ up or – down).</p> <p>Press when in a menu to reset the settings to the factory defaults.</p> <p>Press repeatedly until the LCD projection TV displays the amount of time (15, 30, 45, 60, or 90 minutes) that you want the LCD projection TV to remain on before shutting off automatically. To cancel Sleep timer, press SLEEP repeatedly until “SLEEP OFF” appears. Pressing POWER also cancels the Sleep timer and turns off the power. While the Sleep feature is set, press once to view the remaining time.</p> |
| <p>15 SAT/CABLE (GREEN)</p> <p>16 POWER (GREEN)</p> <p>17 DISPLAY</p> <p>18 TV/VIDEO</p> <p>19 MENU</p> <p>20 FAVORITES</p> | <p>Press to turn on/off the satellite or cable TV.</p> <p>For instructions, see “Programming the Remote Control” on page 77.</p> <p>Press to turn on/off the LCD projection TV. If a video input indication (e.g., VIDEO 1, VIDEO 2) appears on the screen, press TV/VIDEO or CH +/- until a channel number appears.</p> <p>Press once to display the current time and channel label (if set) and channel number. Press again to turn Display off. See page 75 for details on setting the time.</p> <p>Press to cycle through the video equipment connected to your LCD projection TV’s video inputs: TV, VIDEO 1, VIDEO 2, VIDEO 3, VIDEO 4, VIDEO 5, VIDEO 6 and VIDEO 7. If you select Skip as a Video Label in the Setup menu, your LCD projection TV will skip the video input you selected (see “Video Label” on page 74).</p> <p>Press to display the LCD projection TV on-screen menu. Press again to exit from the menu.</p> <p>Press to display the Favorite Channels list. For details, see “Using Favorite Channels” on page 53.</p> |

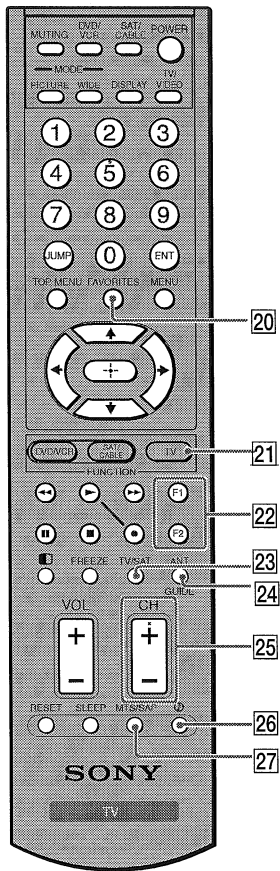 

- | | | |
|----|--------------------|---|
| 21 | TV FUNCTION | Press to select the TV. The indicator lights up momentarily when pressed to show which equipment the remote control is operating. |
| 22 | F1 and F2 | Press F1 or F2 to control the connected components (DVD/VCR or DVD/HDD). For details, see "Using Other Equipment with Your LCD Projection TV Remote Control" on page 79. |
| 23 | TV/SAT | Press to select the TV or satellite receiver. |
| 24 | ANT | Press to change between the VHF/UHF input and the AUX input. |
| | GUIDE | Displays the program guide of your satellite receiver. |
| 25 | CH +/- | Press to scan one-by-one through channels.
<div style="display: flex; align-items: center;"> <div style="margin-right: 5px;"> </div> To scan rapidly through the channels, press and hold down CH + or CH - (+ up or - down). </div> |
| 26 | | Press to scroll an audio option: TruSurround, Simulated, and Off. |
| 27 | MTS/SAP | Press to scroll through the Multi-channel TV Sound (MTS) options: Stereo, Auto SAP and Mono (see "MTS" on page 63). |

Other Information

Programming the Remote Control

The remote control is preset to operate Sony brand video equipment.

Sony Equipment	Programmable Code Number
DVD/VCR	601 (Sony Dream System)
SAT/CABLE	801 (Sony Satellite Receiver)

If you have video equipment other than Sony brand that you want to control with the LCD projection TV's remote control, use the following procedure to program the remote control.

 The equipment must have infrared (IR) remote capability in order to be used with the remote control.

From the "Manufacturer's Codes" listed on page 78, select the three-digit code number for the manufacture's code of your equipment. If more than one code number is listed, try entering them one by one until you come to the correct code for your equipment. Use the code number to complete the following procedure.

- 1** Press the DVD/VCR (FUNCTION) and RESET buttons simultaneously, or press the SAT/CABLE (FUNCTION) and RESET buttons simultaneously. The DVD/VCR and SAT/CABLE buttons flash.
- 2** Press the function button you want to program.
To program a cable box or a satellite receiver
Press SAT/CABLE (FUNCTION).
To program video equipment
Press DVD/VCR (FUNCTION).
- 3** Enter the three-digit manufacture's code number using the 0 - 9 buttons.
- 4** Press ENT (enter).

 If no code number is input within 10 seconds, or an invalid or incorrect code number is input, the remote control automatically goes back to the previous setting.

- 5** To check if the code number works, aim the TV's remote control at the equipment and press DVD/VCR and/or SAT/CABLE (POWER) that corresponds with that equipment. If it responds, the programming is completed. If not, try using the other codes listed for that manufacturer.

 In some cases, you may not be able to operate your equipment with the supplied remote control. In such cases, use the equipment's own remote control unit.

Other Information

Manufacturer's Codes

DVD Players

<i>Manufacturer</i>	<i>Code</i>
Sony	751
General Electric	755
Hitachi	758
JVC	756
Magnvox	757
Mitsubishi	761
Panasonic	753
Philips	757
Pioneer	752
RCA/PROSCAN	755
Samsung	758
Toshiba	754
Zenith	760

DVD Changers

<i>Manufacturer</i>	<i>Code</i>
Sony	765
Panasonic	766

DVD/VCR Combo Units

<i>Manufacturer</i>	<i>Code</i>
Sony	767
Broksonic	776
JVC	775
Panasonic	777
Samsung	774
Toshiba	773
Zenith	768

HDD/DVD Combo Units

<i>Manufacturer</i>	<i>Code</i>
Sony	770, 771, 772

5.1ch DVD AV System

<i>Manufacturer</i>	<i>Code</i>
Sony (DAV)	601, 602, 603, 604

AV Receivers

<i>Manufacturer</i>	<i>Code</i>
Sony	764

VCRs

<i>Manufacturer</i>	<i>Code</i>
Sony	301, 302, 303
Admiral (M. Ward)	327
Aiwa*	338, 344
Audio Dynamic	314, 337

<i>Manufacturer</i>	<i>Code</i>
Broksonic	319, 317
Canon	309, 308
Citizen	332
Craig	302, 332
Curtis Mathes	304, 338, 309
Daewoo	341, 312, 309
DBX	314, 336, 337
Dimensia	304
Emerson	319, 320, 316, 317, 318, 341
Fisher	330, 335
Funai	338
General Electric	329, 304, 309
Go Video	322, 339, 340
Goldstar	332
Hitachi	306, 304, 305, 338
Instant Replay	309, 308
JC Penney	309, 305, 304, 330, 314, 336, 337
JVC	314, 336, 337, 345, 346, 347
Kenwood	314, 336, 332, 337
LG	332
LXI (SEARS)	332, 305, 330, 335, 338
Magnavox	308, 309, 310
Marantz	314, 336, 337
Marta	332
Memorex	309, 335
Minolta	305, 304
Mitsubishi/MGA	323, 324, 325, 326
Multitech	325, 338, 321
NEC	314, 336, 337
Olympic	309, 308
Optimus	327
Orion	317
Panasonic	308, 309, 306, 307
Pentax	305, 304
Philco	308, 309
Philips	308, 309, 310
Pioneer	308
Quasar	308, 309, 306
RCA/PROSCAN	304, 305, 308, 309, 311, 312, 313, 310, 329
Realistic	309, 330, 328, 335, 324, 338
Sansui	314
Samsung	322, 313, 321

<i>Manufacturer</i>	<i>Code</i>
Sanyo	330, 335
Scott	312, 313, 321, 335, 323, 324, 325, 326
Sharp	327, 328
Signature 2000 (M. Ward)	338, 327
SV2000	338
Sylvania	308, 309, 338, 310
Symphonic	338
Tashiro	332
Tatung	314, 336, 337
Teac	314, 336, 338, 337
Technics	309, 308
Toshiba	312, 311
Wards	327, 328, 335, 331, 332
Yamaha	314, 330, 336, 337
Zenith	331

Cable Boxes

<i>Manufacturer</i>	<i>Code</i>
Sony	230
Hamlin/Regal	222, 223, 224, 225, 226
Jerrold/G. I./ Motorola	201, 202, 203, 204, 205, 206, 207, 208, 218, 222
Oak	227, 228, 229
Panasonic	219, 220, 221
Pioneer	214, 215
Scientific Atlanta	209, 210, 211
Tocom	216, 217
Zenith	212, 213

Satellite Receivers

<i>Manufacturer</i>	<i>Code</i>
Sony	801
Dish Network	810
Echostar	810
General Electric	802
Hitachi	805
Hughes	804
Mitsubishi	809
Panasonic	803
RCA/PROSCAN	802, 808
Toshiba	806, 807

* If an Aiwa VCR does not work even though you enter the code for Aiwa, enter the code for Sony instead.

Using Other Equipment with Your LCD Projection TV Remote Control

To operate other connected equipment with your LCD projection TV remote control, first turn to page 77 and program the necessary code. For operating video equipment, press TV/VIDEO repeatedly till you see the video input on the screen for your connected equipment. Remote control operation tips are provided below.

Operating a Cable Box

To Do This ...	Press
Turn on/off	SAT/CABLE (POWER)
Select cable box	SAT/CABLE (FUNCTION)
Select a channel	0-9, ENT
Change channels	CH +/-
Back to previous channel	JUMP

Operating a Satellite Receiver

To Do This ...	Press
Turn on/off	SAT/CABLE (POWER)
Select satellite receiver	SAT/CABLE (FUNCTION)
Select a channel	0-9, ENT
Change channels	CH +/-
Back to previous channel	JUMP
Display channel number	DISPLAY
Display SAT Guide	GUIDE
Display SAT Menu	MENU
Move highlight (cursor)	⬆ ⬇ ⬅ ➡
Select item	ⓈⓂ

Operating a VCR

To Do This ...	Press
Turn on/off	DVD/VCR (POWER)
Change channels	CH +/-
Record	● and ► simultaneously
Play	►
Stop	■
Fast forward	►►
Rewind the tape	◄◄
Pause	
Search the picture forward or backward	►► or ◄◄ during playback (release to resume normal playback)

Operating a DVD Player or DVD Changer

To Do This ...	Press
Turn on/off	DVD/VCR (POWER)
If you have a DVD changer, to skip disks	F1
Play	►
Stop	■
Pause	(press again to resume normal playback)
Step through different tracks of the disc	►► to step forward or ◄◄ to step backward
Step through different chapters of a video disc	CH + to step forward or CH - to step backward
Display the DVD menu	TOP MENU

Operating a 5.1ch DVD AV System (Sony DAV)

To Do This ...	Press
Turn on/off	DVD/VCR (POWER)
Select other equipment connected to the DAV	F1
Skip a disk	F2
Display the DVD menu	TOP MENU
Display the menu (Setup)	MENU
Move highlight (Cursor)	⬆ ⬇ ⬇ ⬆
Select item	Ⓢ
Change the volume	VOL +/-, MUTING

Operating a DVD/ VCR or HDD/DVD Combo Unit

To Do This ...	Press	
Turn on/off	DVD/VCR (POWER)	
If you have a DVD/VCR combo component,		
Select the DVD	F1	
Select the VCR	F2	
If you have a HDD/DVD combo component,		
Select the DVD	F1	
Select the HDD	F2	
Record	● and ► simultaneously	(VCR)
Play	►	(VCR)
Stop	■	(VCR)
Fast forward	►►	(VCR)
Rewind the tape	◄◄	(VCR)
Pause		(VCR)
Search the picture forward or backward	►► or ◄◄ during playback (release to resume normal playback)	(VCR)
Display the DVD menu	TOP MENU	
Play	►	(DVD)
Stop	■	(DVD)
Pause		(DVD)
Step through different tracks of the disc	►► to step forward or ◄◄ to step backward	(DVD)
Step through different chapters of a video disc	CH + to step forward or CH – to step backward	(DVD)

Other Information

Operating an AV Receiver

To Do This ...	Press
Turn on/off	DVD/VCR (POWER)
Change the volume	VOL +/-, MUTING