 


Watching the TV

Button Descriptions

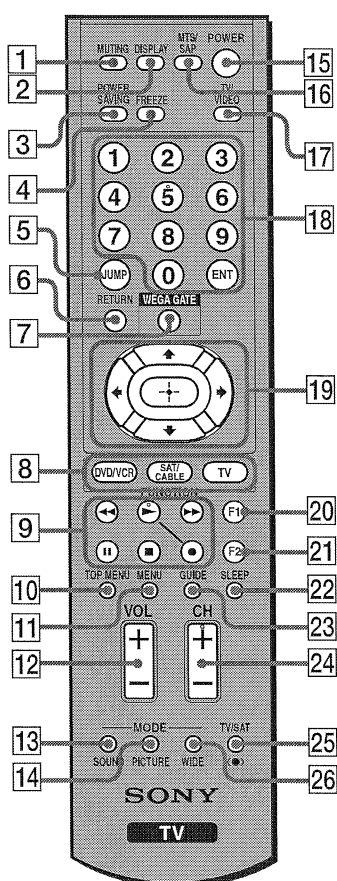


💡 The 5 button, CH + button, ► (Play) button and MTS/SAP button have a tactile dot. Use them as a reference when operating the TV.

Button	Description
1 MUTING	Press to mute the sound. Press again or press VOL + to restore the sound.
2 DISPLAY	Press once to display the current channel number, channel label, time and Wide Mode settings. The OSD (on screen display) will be canceled after a few seconds or press again to immediately cancel the display.
3 POWER SAVING	Press repeatedly to cycle through the power saving modes: Standard, Reduced, Picture Off. See Power Saving on page 61.
4 FREEZE	Press to freeze the picture. The current program appears in the sub screen when freeze is selected. Press again to restore the picture. You can use this feature to write down information such as phone numbers, recipes, etc. ⚠ Some functions will not be available in freeze.
5 JUMP	Press to jump back and forth between two channels. The TV alternates between the current channel and the last channel that was selected.
6 RETURN	Press to go back to the previous screen when displaying settings.
7 WEGA GATE	Press to navigate to TV functions. See "Introducing WEGA GATE" on page 42.
8 FUNCTION Buttons	Press to have the remote control operate the equipment you want. See "Programming the Remote Control" on page 34.
9 DVD/VCR Operating Buttons	When FUNCTION is switched on DVD/VCR, these buttons operate the video equipment you have programmed into the remote control. See "Using Other Equipment with Your Remote Control" on page 36. ◀◀ Rewind ▶ Play ▶▶ Fast forward ⏸ Pause ■ Stop ● Record
10 TOP MENU	Press to display the top menu of your DVD/VCR.
11 MENU	Press to display the menu of your DVD or Satellite Receiver. Press again to exit from the menu.
12 VOL +/-	Press to adjust the volume.

Button	Description
13 SOUND	Press repeatedly to cycle through the sound modes: Dynamic, Natural, Clear Voice. See "Selecting Audio Options" on page 49.
14 PICTURE	Press repeatedly to cycle through the available video picture modes: Vivid, Standard, Pro. The video picture modes can be also accessed in the Video settings. See "Selecting Video Options" on page 48.
15 POWER	Press to turn on and off the TV.
16 MTS/SAP	Press repeatedly to cycle through the Multi-channel TV Sound (MTS) options: Stereo, Auto SAP (Second Audio Program), and Mono. The MTS setting can be also accessed in the Audio settings. See "Selecting Audio Options" on page 49.
17 TV/VIDEO	Press repeatedly to cycle through the video equipment connected to the TV's video inputs.  See page 61 on setting up the video input labels, including skip function.
18 0 - 9 ENT	Press 0 - 9 to select a channel; the channel changes after 2 seconds. Press ENT to change channels immediately.
19  	Press  to move the on-screen cursor. To select an item, press  .
20 F1	Press to select the function of your video equipment which is programmed on the TV's remote control. See pages 36, 37 for specific functions.
21 F2	Press to select the function of your video equipment which is programmed on the TV's remote control. See pages 36, 37 for specific functions.
22 SLEEP	Press repeatedly until the TV displays the time in minutes (15, 30, 45, 60 or 90) that you want the TV to remain on before shutting off. To cancel Sleep Timer, press SLEEP repeatedly until Sleep Off appears.
23 GUIDE	Press to display the program guide of your satellite program provider.
24 CH +/-	Press to scan through channels. To scan quickly through channels, press and hold down either CH.
25 TV/SAT	Press to switch between the TV and the satellite receiver when FUNCTION is switched on SAT/CABLE.
	Press to select the sound effect modes: TruSurround, Simulated, Off. The sound effect modes can be also accessed in the Audio settings. See "Selecting Audio Options" on page 49.
26 WIDE	Press repeatedly to step through the Wide Screen Mode settings: Wide Zoom, Normal, Full, Zoom. The Wide Screen Mode settings can be also accessed in the Screen settings. See page 51.
 GUIDE and TV/SAT buttons are functional when the SAT/CABLE function button is selected.	

 Programming the Remote Control

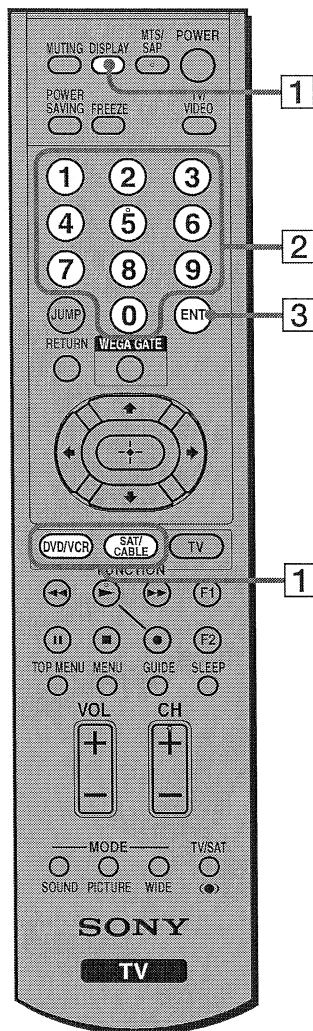

The remote control is preset to operate Sony brand video equipment.

Sony Equipment	Programmable Code Number
DVD/VCR	601 (Sony Dream System)
SAT/Cable	801 (Sony Satellite Receiver)

Follow the steps below to program your TV's remote control to operate the non-Sony video equipment.

Find the three-digit code for your equipment from the "Manufacturer's Codes" listed on page 35. If more than one code number is listed, try entering from the code listed first.

- 1 Press and hold the **(DVD/VCR)** or **(SAT/CABLE)** FUNCTION button you want to program on the remote control and press the **DISPLAY** button simultaneously. The selected FUNCTION button (DVD/VCR or SAT/CABLE) will flash.
- 2 Enter the three-digit manufacturer's code number using the **0-9** buttons while the button is lit, approximately 10 seconds.
- 3 Press **(ENT)** button.

 
When the programming is correct, the selected FUNCTION button will flash twice slowly, and when not, flashes five times quickly.

To check if the code works

Aim your TV's remote control at the equipment, and press the green **POWER** button. If the equipment responds, the programming is completed. If not, try the next code listed.

- ⚠ If no code is input within the above specified time, or an invalid or incorrect code number is input, the remote control automatically goes back to the previous setting.
- ⚠ In some cases, you may not be able to program your remote control to operate other equipment. In such cases, use the equipment's own remote control.
- ⚠ Dead batteries or removing the batteries may cause the programmable codes to be lost and revert back to factory settings. Reprogramming the codes may be necessary.

Insert two size AA batteries (supplied) by matching the **+** and **-** on the batteries to the diagram inside the remote control's battery compartment.



Manufacturer's Codes

DVD Players

Manufacturer	Code
Sony	751
General Electric	755
Hitachi	758
JVC	756
Magnavox	757
Mitsubishi	761
Panasonic	753
Philips	757
Pioneer	752
RCA/PROSCAN	755
Samsung	758
Toshiba	754
Zenith	760

DVD Changers

Manufacturer	Code
Sony	765
Panasonic	766

DVD/VCR Combo Units

Manufacturer	Code
Sony	767
Zenith	768
Toshiba	773
Samsung	774
JVC	775
Broksonic	776
Panasonic	777

HDD/DVD Combo Units

Manufacturer	Code
Sony	770, 771, 772

5.1ch DVD AV System

Manufacturer	Code
Sony (DAV)	601, 602, 603, 604

AV Receivers

Manufacturer	Code
Sony	764

VCRs

Manufacturer	Code
Sony	301, 302, 303
Admiral (M. Ward)	327
Aiwa*	338, 344
Audio Dynamic	314, 337
Broksonic	319, 317
Canon	309, 308

Manufacturer	Code
Citizen	332
Craig	302, 332
Curtis Mathes	304, 338, 309
Daewoo	341, 312, 309
DBX	314, 336, 337
Dimensia	304
Emerson	319, 320, 316, 317, 318, 341
Fisher	330, 335
Funai	338
General Electric	329, 304, 309
Go Video	322, 339, 340
Goldstar	332
Hitachi	306, 304, 305, 338
Instant Replay	309, 308
JC Penney	309, 305, 304, 330, 314, 336, 337
JVC	314, 336, 337, 345, 346, 347
Kenwood	314, 336, 332, 337
LG	332
LXI (SEARS)	332, 305, 330, 335, 338
Magnavox	308, 309, 310
Marantz	314, 336, 337
Marta	332
Memorex	309, 335
Minolta	305, 304
Mitsubishi/MGA	323, 324, 325, 326
Multitech	325, 338, 321
NEC	314, 336, 337
Olympic	309, 308
Optimus	327
Orion	317
Panasonic	308, 309, 306, 307
Pentax	305, 304
Philco	308, 309
Philips	308, 309, 310
Pioneer	308
Quasar	308, 309, 306
RCA/PROSCAN	304, 305, 308, 309, 311, 312, 313, 310, 329
Realistic	309, 330, 328, 335, 324, 338
Sansui	314
Samsung	322, 313, 321
Sanyo	330, 335
Scott	312, 313, 321, 335, 323, 324, 325, 326

Manufacturer	Code
Sharp	327, 328
Signature 2000 (M. Ward)	338, 327
SV2000	338
Sylvania	308, 309, 338, 310
Symphonic	338
Tashiro	332
Tatung	314, 336, 337
Teac	314, 336, 338, 337
Technics	309, 308
Toshiba	312, 311
Wards	327, 328, 335, 331, 332
Yamaha	314, 330, 336, 337
Zenith	331

Cable Boxes

Manufacturer	Code
Sony	230
Hamlin/Regal	222, 223, 224, 225, 226
Jerrold/G. I./	201, 202, 203, 204,
Motorola	205, 206, 207, 208, 218, 222
Oak	227, 228, 229
Panasonic	219, 220, 221
Pioneer	214, 215
Scientific Atlanta	209, 210, 211
Tocom	216, 217
Zenith	212, 213

Satellite Receivers

Manufacturer	Code
Sony	801
Dish Network	810
EchoStar	810
General Electric	802
Hitachi	805
Hughes	804
Mitsubishi	809
Panasonic	803
RCA/PROSCAN	802, 808
Toshiba	806, 807
Philips	811
Samsung	812

* If an Aiwa VCR does not work even though you enter the code for Aiwa, enter the code for Sony instead.

Watching the TV

Using Other Equipment with Your Remote Control

To operate other connected equipment with your TV, first turn to page 35 and program the necessary code. For operating video equipment, press TV/VIDEO repeatedly until you see the video input on the screen for your connected equipment. Remote control operation tips are provided below.

 Some functions cannot be operated depending on the equipment. In that case, operate by the remote control supplied with the equipment.

Operating a Cable Box

To Do This ...	Press ...
Activate the remote control to operate the cable box	SAT/CABLE (FUNCTION)
Turn on/off	POWER

To Do This ...	Press ...
Select a channel	0-9, ENT
Change channels	CH +/-
Back to previous channel	JUMP

Operating a Satellite Receiver

To Do This ...	Press ...
Activate the remote control to operate the satellite receiver	SAT/CABLE (FUNCTION)
Turn on/off	POWER
Select a channel	0-9, ENT
Change channels	CH +/-
Back to previous channel	JUMP
Display channel number	DISPLAY

To Do This ...	Press ...
Display SAT Guide	GUIDE
Display SAT Menu	MENU
Move highlight (cursor)	↑ ↓ ← →
Select item	
Switch between the TV and satellite broadcasts	TV/SAT

Operating a VCR

To Do This ...	Press ...
Activate the remote control to operate the VCR	DVD/VCR (FUNCTION)
Turn on/off	POWER
Change channels	CH +/-
Record	 while pressing 
Play	
Stop	

To Do This ...	Press ...
Fast forward	
Rewind the tape	
Pause	 (press again to resume normal playback)
Search the picture forward or backward	 or  during playback (release to resume normal playback)

Operating a DVD Player or DVD Changer

To Do This ...	Press ...
Activate the remote control to operate the DVD	DVD/VCR (FUNCTION)
Turn on/off	POWER
If you have a DVD changer, to skip disk	F1
Play	
Stop	
Pause	 (press again to resume normal playback)

To Do This ...	Press ...
Step through different tracks of the disc	 to step forward or  to step backward
Step through different chapters of the disc	CH + to step forward or CH - to step backward
Select a track directly	0-9, ENT
Display the menu (setup)	MENU
Display the top menu	TOP MENU
Operate the DVD menu	↑ ↓ ← →, 