 


Remote Control and TV Controls/Indicators

 
 
Inserting Batteries into the Remote control

Insert two size AA batteries (supplied) by matching $\oplus$ and $\ominus$ on the batteries to the diagram inside the battery compartment of the remote control.

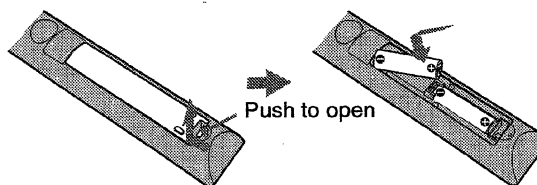


Remote Control

Buttons located at the top of the TV will operate the same as these buttons on the remote control.

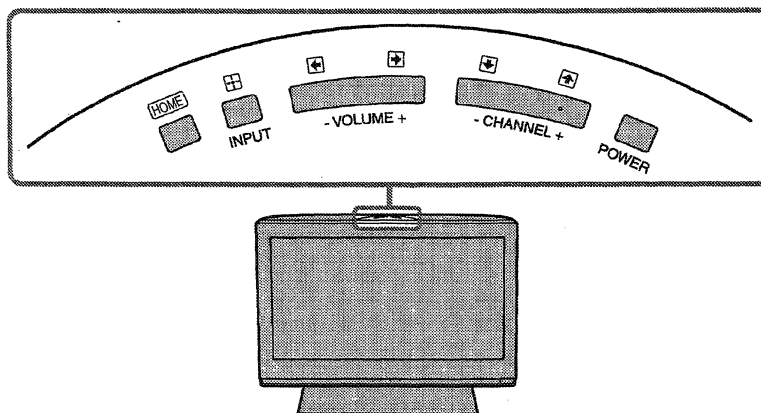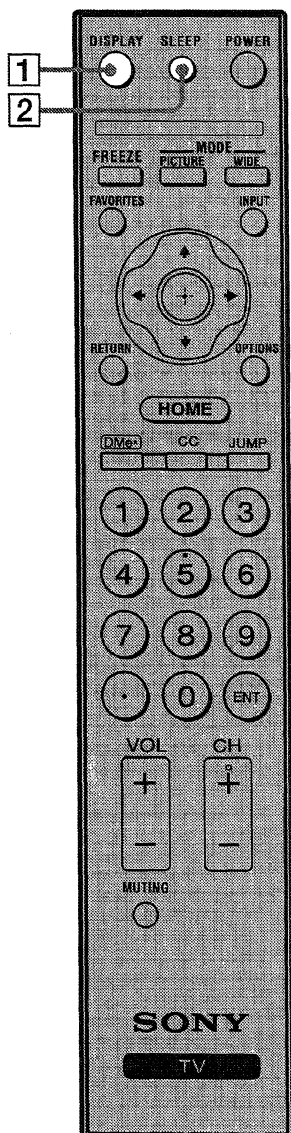


- The **5** button and **CH +** have a tactile dot. Use them as a reference when operating the TV.
- This remote control cannot be programmed to use with other equipment.

Button	Description
1 DISPLAY	Press once to display the information pertaining to the channel and/or program when available. The OSD (On Screen Display) will time out in a few seconds or press again to immediately turn off the display. You can also set the display to show minimal information. See Info Banner on page 40.
2 SLEEP	Press repeatedly until the TV displays the time in minutes (Off , 15min , 30min , 45min , 60min , 90min or 120min) that you want the TV to remain on before shutting off. To cancel Sleep Timer , press SLEEP repeatedly until Off appears.

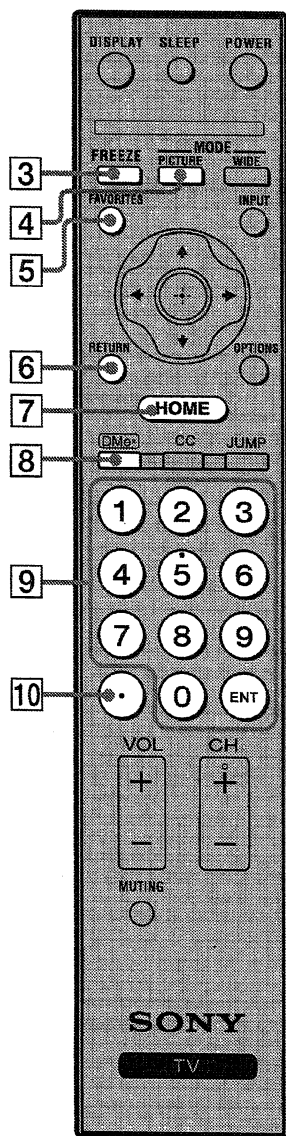 

Button	Description
--------	-------------

 - 3 FREEZE** Press once to display a frozen image with the current program in a window. Press again to fill the screen with the frozen image. Press 3rd time to return to the current program.

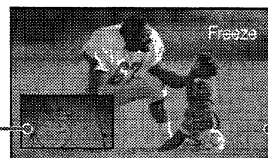

Current program

Frozen picture

Press the $\uparrow/\downarrow/\leftarrow/\rightarrow$ to move the small window showing current program to a different location on the screen.



- With the **Freeze** feature active, some features are unavailable.
- While the **Freeze** feature is active, pressing **HOME** will deactivate the **Freeze** and display the **XMB™**.
- If **Parental Lock** settings are in use, only the frozen picture view is available and the audio is disabled.

- 4 PICTURE** Press repeatedly to cycle through the available picture modes: **Vivid, Standard, Cinema, Video, Text**. (Available options depend on the current mode.) The picture modes can also be accessed in the **Picture** settings. For details, see **Picture** settings on page 30.

- 5 FAVORITES** Press once to display the stored favorite channel list. You can store up to 30 channels in your **Favorites** list.

How to Add to Favorites

While tuned to the channel you want to add to the list, press **OPTIONS** and highlight "Add to Favorites", then press $\oplus$. A confirmation message of "Channel added to Favorites" will appear for a few seconds.

How to Remove from Favorites

 
While tuned to a channel that exists in the **Favorites** list, press **OPTIONS** and highlight "Remove from Favorites", then press $\oplus$. A confirmation message of "Channel removed from Favorites" will appear for a few seconds.



Your **Favorites** list will be cleared each time you run **Auto Program** (see pages 21 and 35 for **Auto Program**).

- 6 RETURN** Press to go back to the previous screen or exit from the screen when displaying menu items and settings.

- 7 HOME** Press to display the **TV Home Menu/XMB™** (XrossMediaBar) to access the **TV Home Menu** items such as the **TV Settings**, **TV channels** and **External Inputs** list (see pages 9 and 28).

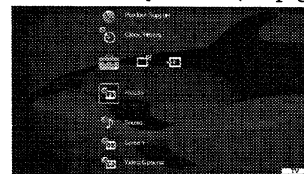


- 8 DMe^x** Press to access features in the optional BRAVIA external module (e.g. DMX-NV1). See your dealer or www.sony.com/bravia for more information. The module may not be available in your region.

- 9 0-9 ENT** Press **0-9** to select a channel; the channel changes after two seconds. Press **ENT** to change channels immediately.

- 10** $\odot$ Use with **0-9** and **ENT** to select digital channels. For example, to enter 2.1, press $\odot$, $\odot$, $\odot$ and **ENT**.

 (Continued)

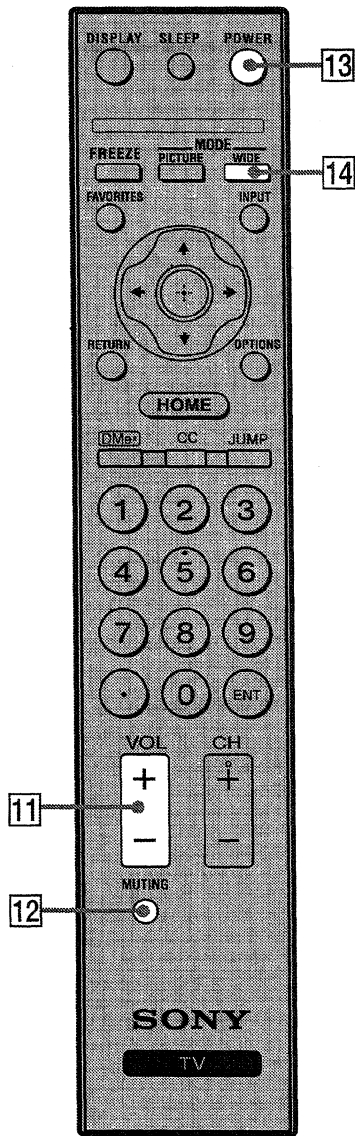

Button	Description
11 VOL +/-	Press to adjust the volume.
12 MUTE	Press to mute the sound. Press again or press VOL + to restore the sound.
13 POWER	Press to turn on and off the TV.
14 WIDE	Press repeatedly to step through the Wide Mode settings: Wide Zoom , Normal , Full , Zoom . The Wide Mode settings can be also accessed in the Screen settings (see page 32).

Changing the Wide Screen Mode

(For PC timing, see below)


4:3 Original source Standard-definition source	16:9 Original source High-definition source
Wide Zoom 	Wide Zoom
Normal 	Normal This mode is not available
Full 	Full
Zoom 	Zoom



- When the TV receives a 720p, 1080i or 1080p signal, **Normal** cannot be selected.

Changing the Wide Screen Mode for PC timing

Incoming PC signal 800 × 600	Incoming PC signal 1280 × 768
Normal 	Normal
Full 1 	Full 1
Full 2 	Full 2

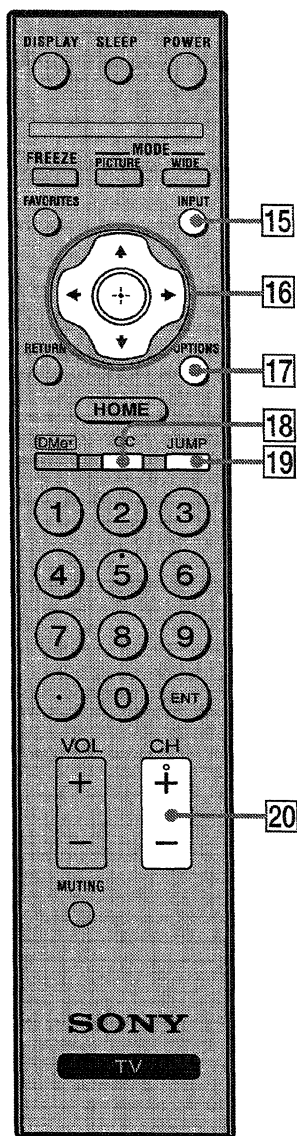 

Button	Description
--------	-------------

- 15 INPUT** Press to display the list of **External Inputs** and TV mode. Press repeatedly to toggle through the inputs.



- See page 39 on setting up the **External Inputs** labels, including the **Skip** feature.

- 16** Press to move the on-screen cursor. Press to select/confirm an item.

- 17 OPTIONS** Press to display a list of convenient functions and menu shortcuts. The **OPTIONS** menu items vary based on input and content.

Menu Item	Reference Page
Picture	See page 30
Sound	See page 32
P&P or PIP	See page 27
Audio Swap	See page 27
Exit P&P or Exit PIP	See page 27
Speakers	See page 34
Add to Favorites/ Remove from Favorites	See page 23
MTS	See page 34
Alternate Audio	See page 34
Digital Rating	See page 37
Screen	See page 32

- 18 CC** Press to turn on and off the Closed Captions (CC). To change or customize the **CC Display**, see page 36.

- 19 JUMP** Press to jump back and forth between two channels. The TV alternates between the current channel and the last channel that was selected.



- 20 CH +/-** Press to scan through channels. To scan quickly through channels, press and hold down either **+/-**.