

Getting Started

Checking the accessories

Remote control (1)*¹

Size AAA batteries (2)

Table-Top Stand (1)*²

Fixing screws for Table-Top Stand

(M5 × 16) (3) (except KDL-60EX72x)

Assembling screws for Table-Top

Stand (M6 × 14) (4) (for

KDL-60/55/46EX72x/KDL-55/46HX72x/

KDL-55/46EX62x)

Assembling screws for Table-Top

Stand (M6 × 14) (3) (for

KDL-40/32EX72x/KDL-40EX62x)

Hexagon wrench (1)

 
Operating Instructions (this manual)
and other documents

*1 Please refer to the model name printed on the remote control.

*2 Assembling the Table-Top Stand is required. Refer to the supplied Table-Top Stand leaflet to assemble the Table-Top Stand.


Inserting batteries into the remote control

► KDL-60/55/46/40/32EX72x and
KDL-55/46HX72x

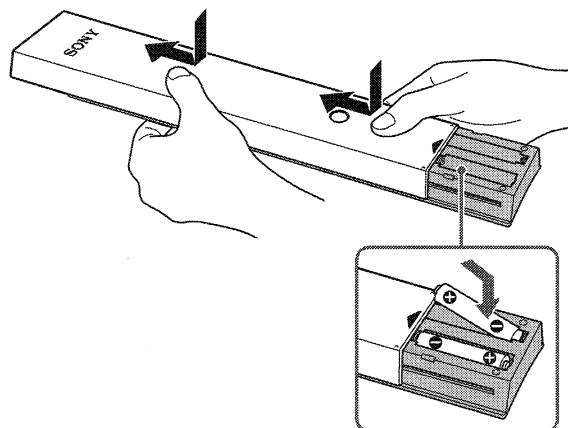

- 1 Remove the protection sheet.
- 2 Push and slide the cover upward.

 
► KDL-55/46/40EX62x

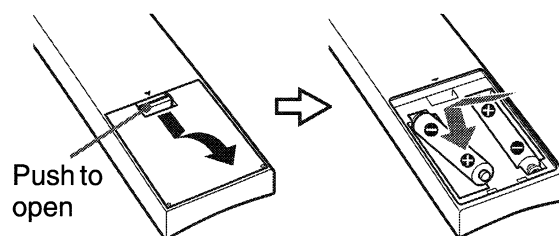

- 1 Remove the protection sheet.
- 2 Push and lift the cover to open.

Guidelines for Remote Control

 - Point your remote control directly at the IR sensor located on your TV.
- Make sure that no objects are blocking the path between the remote control and the IR sensor on your TV.

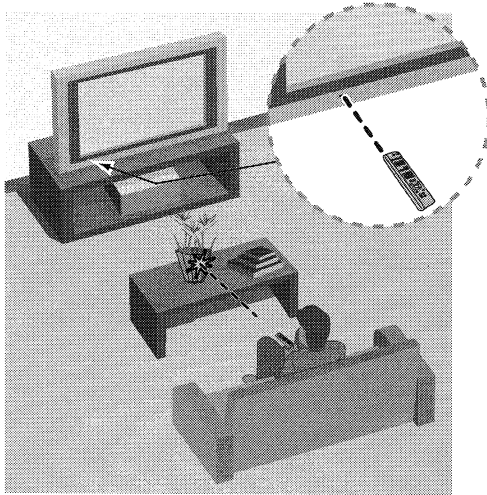


- Fluorescent lamps can interfere with your remote control; try turning off the fluorescent lamps.
- If you are having problems with the remote control, reinsert or replace your batteries and make sure that they are correctly inserted.

Before setting up your TV

Some TV models are packaged with a detached Table-Top Stand so you can mount your TV to a wall right away. If you are not mounting the TV to a wall, you will need to attach the Table-Top Stand. You will need a Phillips screwdriver (not supplied) and maybe also a hexagon wrench (supplied with some models) and the supplied screws to complete the task. Look for the supplied Table-Top Stand instruction leaflet.


Be sure to consider the following while setting up your TV:

 - Disconnect all cables when carrying the TV.
- Carry the TV with the adequate number of people; larger size TVs require two or more people.
- Correct hand placement while carrying the TV is very important for safety and to avoid damage.

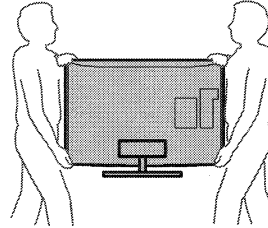

- Ensure your TV has adequate ventilation, see page 18.
- For best picture quality, do not expose the screen to direct illumination or sunlight.
- Avoid installing the TV in a room with reflective wall and floor materials.
- Avoid moving the TV from a cold area to a warm area. Sudden room temperature changes may cause moisture condensation. This may cause the TV to show poor picture and/or poor color. Should this occur, allow moisture to evaporate completely before powering the TV on.
- Ensure that there are no objects in front of the TV.
- Do not expose the Presence Sensor to direct sunlight or other strong light, as malfunction may occur.

 IR Sensor

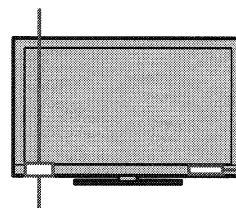


Presence Sensor


3D Sync Transmitter
(KDL-60/55/46/40/
32EX72x, KDL-55/
46HX72x only)

Parts and controls of the remote control

 Use the supplied remote control to control your TV. Basic remote control operations are explained here. For details on all of the remote control functions, press **i-MANUAL** and see the built-in manual (i-Manual) (page 24).

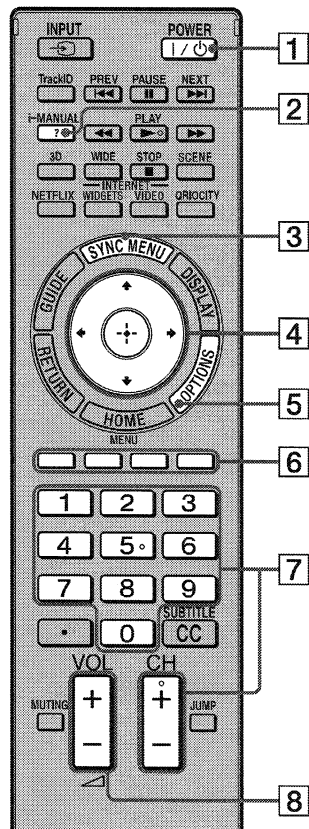

 For KDL-60/55/46/40/32EX72x
and KDL-55/46HX72x

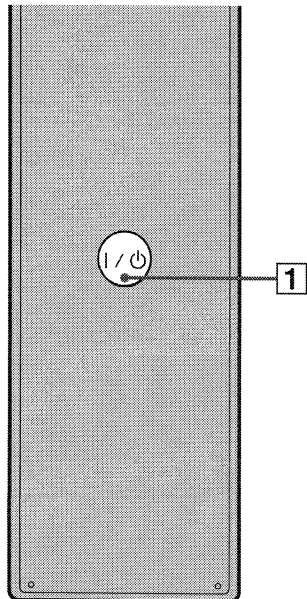

Rear of Remote Control

1 I/O

Press to turn the TV on and off from standby mode.

2 i-MANUAL

Displays the built-in manual (i-Manual).

3 SYNC MENU

Displays the BRAVIA Sync Menu to operate the BRAVIA Sync-compatible equipment that is connected to the TV.

4 $\uparrow/\downarrow/\leftarrow/\rightarrow/\oplus$

Moves the on-screen cursor, and confirms the item.

5 OPTIONS

Displays a list of convenient functions and menu shortcuts. The menu items vary based on the current input and/or content.

6 Color buttons

When the color buttons are available, an operation guide appears on the screen.

7 CH +/-/Number buttons

 
Select channels in the TV mode.

8 VOL/ $\triangle$ +/-

Adjusts the volume.

Displaying Operating Instructions (i-Manual)


Operating instructions are built into your BRAVIA TV and can be displayed on the screen. To learn more about your TV features, access your i-Manual with the touch of a button.

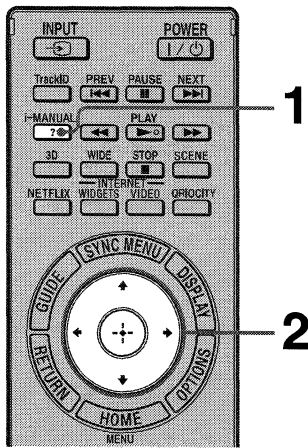

1 Press i-MANUAL.



 2 Press $\uparrow/\downarrow/\leftarrow/\rightarrow/\oplus$ to navigate and select items.



To select items in the i-Manual

① Press $\uparrow/\downarrow$ to select an item.

The contents are displayed to the right as the second layer.

② Press $\rightarrow$ to move to the second layer.

③ Press $\uparrow/\downarrow$ to select an item from the second layer.

A description of the item is displayed to the right.

If a third layer is available, repeat this step to display the details.

④ Press $\rightarrow$ to select an item.

The content is displayed.

