

Getting Started

Checking the accessories

Remote control (1)*¹

Size AAA batteries (2)

Table-Top Stand (1)*²

Fixing screws for Table-Top Stand

(M5 × 16) (3) (except KDL-60EX72x)

Assembling screws for Table-Top

Stand (M6 × 14) (4) (for

KDL-60/55/46EX72x/KDL-55/46HX72x/

KDL-55/46EX62x)

Assembling screws for Table-Top

Stand (M6 × 14) (3) (for

KDL-40/32EX72x/KDL-40EX62x)

Hexagon wrench (1)

 
Operating Instructions (this manual)
and other documents

*1 Please refer to the model name printed on the remote control.

*2 Assembling the Table-Top Stand is required. Refer to the supplied Table-Top Stand leaflet to assemble the Table-Top Stand.


Inserting batteries into the remote control

► KDL-60/55/46/40/32EX72x and
KDL-55/46HX72x

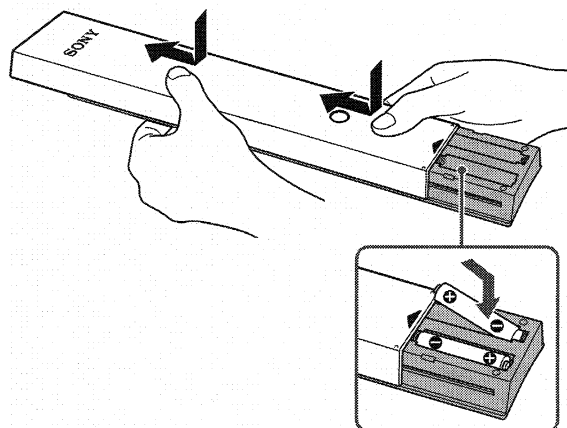

- 1 Remove the protection sheet.
- 2 Push and slide the cover upward.

 
► KDL-55/46/40EX62x

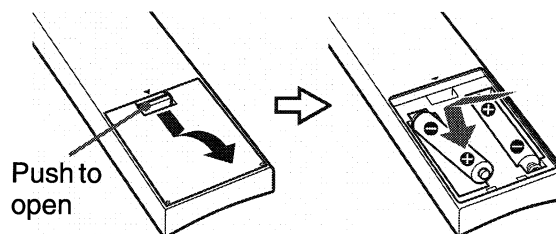


- 1 Remove the protection sheet.
- 2 Push and lift the cover to open.

Parts and controls of the remote control

 Use the supplied remote control to control your TV. Basic remote control operations are explained here. For details on all of the remote control functions, press **i-MANUAL** and see the built-in manual (i-Manual) (page 24).

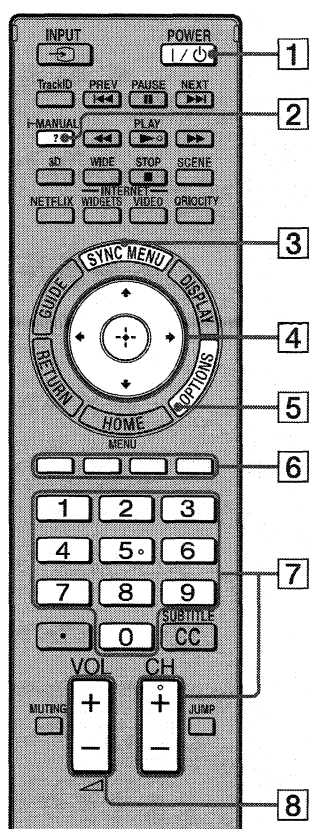

 **For KDL-60/55/46/40/32EX72x
and KDL-55/46HX72x**

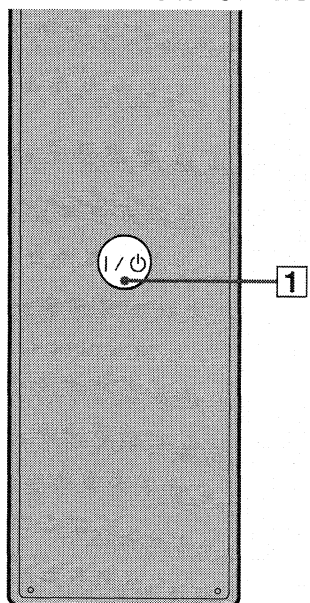

Rear of Remote Control

1 I/O

Press to turn the TV on and off from standby mode.

2 i-MANUAL

Displays the built-in manual (i-Manual).

3 SYNC MENU

Displays the BRAVIA Sync Menu to operate the BRAVIA Sync-compatible equipment that is connected to the TV.

4 ⬆/⬇/⬅/➡/⬆➡

Moves the on-screen cursor, and confirms the item.

5 OPTIONS

Displays a list of convenient functions and menu shortcuts. The menu items vary based on the current input and/or content.

6 Color buttons

When the color buttons are available, an operation guide appears on the screen.

7 CH +/-/Number buttons

Select channels in the TV mode.

8 VOL/⏏ +/-

Adjusts the volume.