


Guide to Parts and Controls

For more information, see the pages in parentheses.

Remote

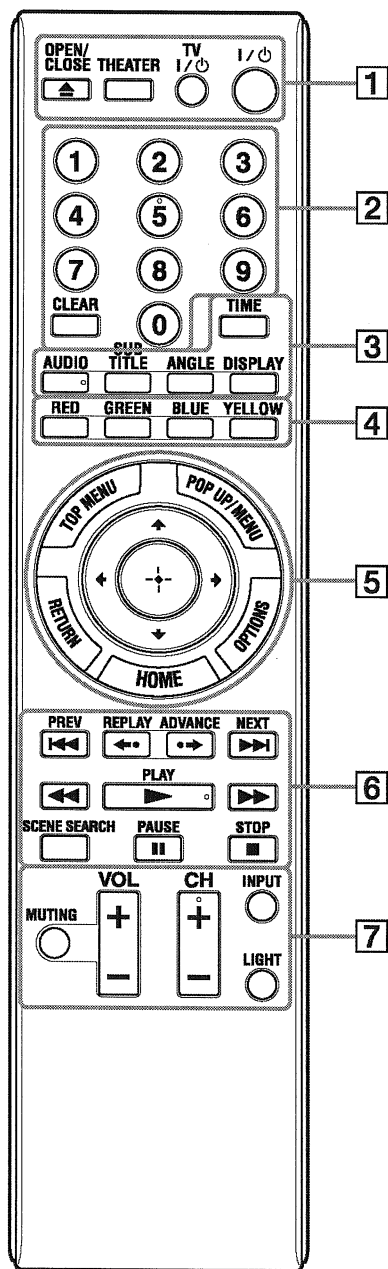

Number 5, AUDIO, CH +, and ► PLAY buttons have a tactile dot. Use the tactile dot as a reference when operating the player.

1 ▲ OPEN/CLOSE (page 33)

Opens or closes the disc tray.

THEATER (page 16)

Switches to the optimum video mode for watching movies automatically. When connected with an AV amplifier (receiver) using the HDMI cable, the speaker output also switches automatically. Press the button again to return to the original setting.

When connected with a Theater Mode-compatible TV using the HDMI cable, the TV's video mode switches to Theater Mode.



The THEATER button functions only when connected to a Theater Mode-compatible TV.

TV I/O (on/standby) (page 28)

Turns on the TV, or sets to standby mode.

I/O (on/standby) (page 30)

Turns on the player, or sets to standby mode.

2 Number buttons (page 37, 59)

Enters the title/chapter numbers, etc.

CLEAR

Clears the entry field.

3 TIME (page 11)

Displays the elapsed/remaining playback time in the front panel display. Each time you press the button, the display switches between elapsed playback time and remaining playback time.

AUDIO (page 54)

Selects the language track when multi-lingual tracks are recorded on BD-ROMs/DVD VIDEOS.

Selects the sound track on CDs.

SUBTITLE (page 54)

Selects the subtitle language when multi-lingual subtitles are recorded on BD-ROMs/DVD VIDEOS.

ANGLE

Switches to other viewing angles when multi-angles are recorded on BD-ROMs/DVD VIDEOS.

DISPLAY (page 37)

Displays the playback information on the screen.

**4 Color buttons (RED/GREEN/
BLUE/YELLOW)**

Short cut keys for selecting items on some BD's menus (can also be used for BD's Java interactive operations).

5 TOP MENU (page 35)

Opens or closes the BD's or DVD's Top Menu.

POP UP/MENU (page 35)

Opens or closes the BD-ROM's Pop-up Menu, or the DVD's menu.

OPTIONS (page 35, 41)

The options menu that can be selected appears on the screen.

HOME (page 43)

Enters the player's home menu.
Exits the home menu when a CD is inserted.

RETURN

Returns to the previous display.



Moves the highlight to select a displayed item.

Center button (ENTER)

Enters the selected item.

**6 I◀◀ PREV/NEXT ▶▶I (previous/
next)**

Skips to the previous/next chapter, track, or file.

To go to the beginning of the previous track, press I◀◀ PREV twice.

**◀• REPLAY/ADVANCE •▶
(instant replay/instant advance)**

Replays the scene/briefly fast forwards the scene.



(fast reverse/fast forward)

Fast reverses/fast forwards the disc when pressed during playback.

Each time you press the button, search speed changes as follows*:

Playback direction

▶▶1 (x10) → ▶▶2 (x30) → ▶▶3 (x120)

Reverse direction

◀◀1 (x1) → ◀◀2 (x10) → ◀◀3 (x120)

When you press and hold the button, fast forward/fast reverse continues at the selected speed until you release the button.

* Search speed does not change when playing CDs.

Speed multiple values are approximate.

– To resume normal playback, press

▶▶ PLAY.

▶▶ PLAY (page 33)

Starts or re-starts playback.

Resumes playback from the point where you press ■ STOP (Resume Play).

Plays a slideshow when a disc containing JPEG image files is inserted.

SCENE SEARCH (page 36)

Switches to Scene Search mode that lets you move quickly between scenes within the title currently being played back.

II PAUSE

Pauses or re-starts playback.

■ STOP

Stops playback and remembers the stop point (resume point) (page 34, 40).

The resume point for a title/track is the last point you played or the last photo for a photo folder.

**7 For TVs operable with the following
buttons, see page 28.**

MUTING

Mutes the TV sound.

VOL (volume) +/-

Adjusts the TV volume.

CH (channel) +/-

Selects the TV channels up and down.

INPUT (input select)


Switches between TV and other input sources.

LIGHT

Lights up the [5] and [6] buttons (except ←/↑/↓/→ and ENTER) and is useful for operation in the dark.

Step 6: Preparing the Remote

You can control the player using the supplied remote. Insert two Size AA (R6) batteries by matching the $\oplus$ and $\ominus$ ends on the batteries to the markings inside the battery compartment. When using the remote, point it at the remote sensor  on the player (page 10).

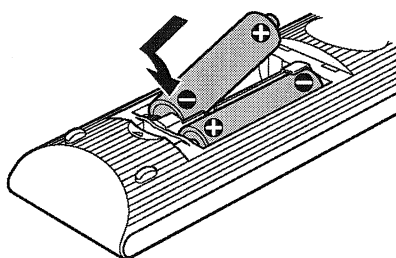


- Use the batteries correctly to avoid possible leakage and corrosion. Should leakage occur, do not touch the liquid with bare hands. Observe the following:
 - Do not use a new battery with an old battery, or batteries of different manufacturers.
 - Do not attempt to recharge the batteries.
 - If you do not intend to use the remote for an extended period of time, remove the batteries.
 - If battery leakage occurs, wipe out any liquid inside the battery compartment, and insert new batteries.
- Do not expose the remote sensor (marked  on the front panel) to strong light, such as direct sunlight or a lighting apparatus. The player may not respond to the remote.

Controlling TVs with the remote

You can control the volume, input source, channel, and power switch of your Sony TV with the supplied remote.



When you replace the batteries of the remote, the code number may be reset to the default setting. Set the appropriate code number again.

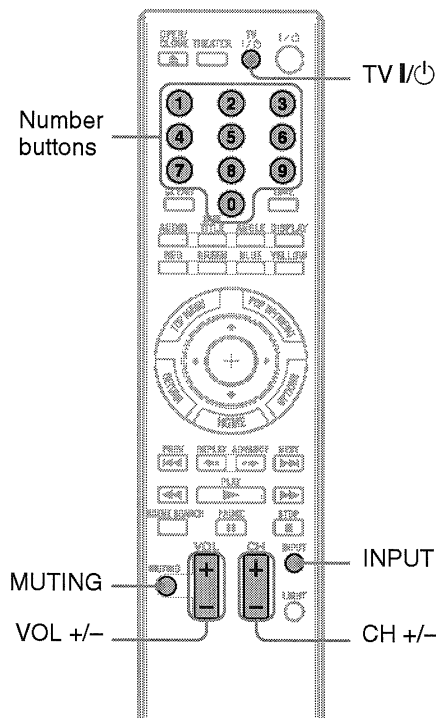

Available buttons

Depending on the connected unit, you may not be able to control your TV with some or all of the buttons (TV I/O, CH +/-, VOL +/-, MUTING, or number buttons).

Buttons	Operations
TV I/O	Turns your TV on or off.
VOL (volume) +/-	Adjusts the volume of your TV.
CH (channel) +/-	Selects the channel on your TV.
INPUT (input select)	Switches your TV's input source between the TV and other input sources.
MUTING	Mutes the sound.

To control other TVs with the remote

You can control the volume, input source, channel, and power switch of non-Sony TVs as well.

If your TV is listed in the table below, set the appropriate manufacturer's code.



If you enter a new code number, the code number previously entered will be erased.

- 1 While holding down TV , enter the TV's manufacturer code using the number buttons.
For instance, to enter "09," press "0" then "9."

Code numbers of controllable TVs

If more than one code number is listed, try entering them one at a time until you find the one that works with your TV.

Manufacturer	Code number
Sony	01 (default)
Admiral	10, 18
Akai	04, 12
AOC	04
Bell & Howell	18
Broksonic	04, 12
CCE	08, 22
Craig	14
Croslex	08
Crown	14
Curtis Mathis	04, 07, 12, 14
Daewoo	04, 12, 22
Daytron	03
Emerson	03, 04, 05, 12, 14, 23
Fisher	11
Funai	23
General Electric	04, 06, 10, 12
LG/Goldstar	03, 04, 12, 17
Gradients	09
Hitachi	02, 03, 04
J.C.Penney	04, 10, 12, 17
JVC	09

Manufacturer	Code number
KTV	03, 04, 12, 14
LXI (Sears)	04, 07, 08, 10, 11, 12
Magnavox	03, 04, 06, 08, 12, 21
Marantz	13
Mitsubishi/MGA	04, 12, 13
NEC	04, 12
Panasonic	06, 19
Philco	02, 03, 04, 08, 12
Philips	08, 21
Pioneer	06, 07, 16
Portland	04, 12
Quasar	06
Radio Shack	04, 05, 10, 13, 14
RCA/PROSCAN	04, 10, 12
Samsung	03, 04, 12, 20
Sanyo	11, 14
Scott	04, 12, 14
SEMP Toshiba	07
Sharp	03, 05, 18
Signature2000	18
Sylvania	04, 08, 12, 23
Symphonic	14
Toshiba	07, 18
Videch	02, 04, 12
Wards	03, 04, 12
Zenith	15

- 2 Release TV .

Language Code List

For details, see page 54.

The language spellings conform to the ISO 639: 1988 (E/F) standard.

Number, Language (BD Language Code/DVD Language Code)			
1027, Afar (aar/aa)	1194, Galician (glg/gl)	1350, Malayalam (mal/ml)	1506, Slovenian (slv/sl)
1028, Abkhazian (abk/ab)	1196, Guarani (grn/gn)	1352, Mongolian (mon/mn)	1507, Samoan (smo/sm)
1032, Afrikaans (afr/af)	1203, Gujarati (guj/gu)	1353, Moldavian (mol/mo)	1508, Shona (sna/sn)
1039, Amharic (amh/am)	1209, Hausa (hau/ha)	1356, Marathi (mar/mr)	1509, Somali (som/so)
1044, Arabic (ara/ar)	1217, Hindi (hin/hi)	1357, Malay (msa/ms)	1511, Albanian (sqi/sq)
1045, Assamese (asm/as)	1226, Croatian (hrv/hr)	1358, Malese; Maltese (mlt/mt)	1512, Serbian (srp/sr)
1051, Aymara (aym/ay)	1229, Hungarian (hun/hu)	1363, Burmese (mya/my)	1513, Siswati; Swati (ssw/ss)
1052, Azerbaijani (aze/az)	1233, Armenian (hye/hy)	1365, Nauru (nau/na)	1514, Sesotho; Sotho southern (sot/st)
1053, Bashkir (bak/ba)	1235, Interlingua (ina/ia)	1369, Nepali (nep/ne)	1515, Sundanese (sun/su)
1057, Byelorussian (bel/be)	1239, Interlingue (ile/ie)	1376, Dutch (nld/nl)	1516, Swedish (swe/sv)
1059, Bulgarian (bul/bg)	1245, Inupiak (ipk/ik)	1379, Norwegian (nor/no)	1517, Swahili (swa/sw)
1060, Bihari (bih/bh)	1248, Indonesian (ind/id)	1393, Occitan (oci/oc)	1521, Tamil (tam/ta)
1061, Bislama (bis/bi)	1253, Icelandic (isl/is)	1403, Oromo (orm/om)	1525, Telugu (tel/te)
1066, Bengali (ben/bn)	1254, Italian (ita/it)	1408, Oriya (ori/or)	1527, Tajik (tgk/tg)
1067, Tibetan (bod/bo)	1257, Hebrew (heb/he)	1417, Punjabi; Panjabi (pan/pa)	1528, Thai (tha/th)
1070, Breton (bre/br)	1261, Japanese (jpn/ja)	1428, Polish (pol/pl)	1529, Tigrinya (tir/ti)
1079, Catalan (cat/ca)	1269, Yiddish (yid/yi)	1435, Pashto; Pushto (pus/ps)	1531, Turkmen (tuk/tk)
1093, Corsican (cos/co)	1283, Javanese (jav/jv)	1436, Portuguese (por/pt)	1532, Tagalog (tgl/tl)
1097, Czech (ces/cs)	1287, Georgian (kat/ka)	1463, Quechua (que/qu)	1534, Setswana; Tswana (tsn/tn)
1103, Welsh (cym/cy)	1297, Kazakh (kaz/kk)	1481, Rhaeto-Romance (roh/rm)	1535, Tonga; Tonga islands (ton/to)
1105, Danish (dan/da)	1298, Greenlandic; Kalaallisut (kal/kl)	1482, Kirundi; Rundi (run/rn)	1538, Turkish (tur/tr)
1109, German (deu/de)	1299, Cambodian; Khmer (khm/km)	1483, Romanian (ron/ro)	1539, Tsonga (tso/ts)
1130, Bhutani; Dzongkha (dzo/dz)	1300, Kannada (kan/kn)	1489, Russian (rus/ru)	1540, Tatar (tat/tt)
1142, Greek (ell/el)	1301, Korean (kor/ko)	1491, Kinyarwanda (kin/rw)	1543, Twi (twi/tw)
1144, English (eng/en)	1305, Kashmiri (kas/ks)	1495, Sanskrit (san/sa)	1557, Ukrainian (ukr/uk)
1145, Esperanto (epo/eo)	1307, Kurdish (kur/ku)	1498, Sindhi (snd/sd)	1564, Urdu (urd/ur)
1149, Spanish (spa/es)	1311, Kirghiz (kir/ky)	1501, Sangho; Sango (sag/sg)	1572, Uzbek (uzb/uz)
1150, Estonian (est/et)	1313, Latin (lat/la)	1502, Serbo-Croatian (scr/hr)	1581, Vietnamese (vie/vi)
1151, Basque (eus/eu)	1326, Lingala (lin/ln)	1503, Singhalese; Sinhalese (sin/si)	1587, Volapük (vol/vo)
1157, Persian (fas/fa)	1327, Laotian; Lao (lao/lo)	1505, Slovak (slk/sk)	1613, Wolof (wol/wo)
1165, Finnish (fin/fi)	1332, Lithuanian (lit/lt)		1632, Xhosa (xho/xh)
1166, Fiji (fij/fj)	1334, Latvian (lav/lv)		1665, Yoruba (yor/yo)
1171, Faroese (fao/fo)	1345, Malagasy (mlg/mg)		1684, Chinese (zho/zh)
1174, French (fra/fr)	1347, Maori (mri/mi)		1697, Zulu (zul/zu)
1181, Frisian (fry/fy)	1349, Macedonian (mkd/mk)		1703, not specified

Parental Control/Area Code

For details, see page 54.

Number, Area (Code)		
2044, Argentina (ar)	2200, Greece (gr)	2379, Norway (no)
2047, Australia (au)	2219, Hong Kong (hk)	2427, Pakistan (pk)
2046, Austria (at)	2248, India (in)	2424, Philippines (ph)
2057, Belgium (be)	2238, Indonesia (id)	2428, Poland (pl)
2070, Brazil (br)	2239, Ireland (ie)	2436, Portugal (pt)
2079, Canada (ca)	2254, Italy (it)	2489, Russia (ru)
2090, Chile (cl)	2276, Japan (jp)	2501, Singapore (sg)
2092, China (cn)	2304, Korea (kr)	2149, Spain (es)
2093, Colombia (co)	2333, Luxembourg (lu)	2499, Sweden (se)
2115, Denmark (dk)	2363, Malaysia (my)	2086, Switzerland (ch)
2165, Finland (fi)	2362, Mexico (mx)	2543, Taiwan (tw)
2174, France (fr)	2376, Netherlands (nl)	2528, Thailand (th)
2109, Germany (de)	2390, New Zealand (nz)	2184, United Kingdom (gb)