


Remote

The available functions of the remote differ depending on the file or the situation.

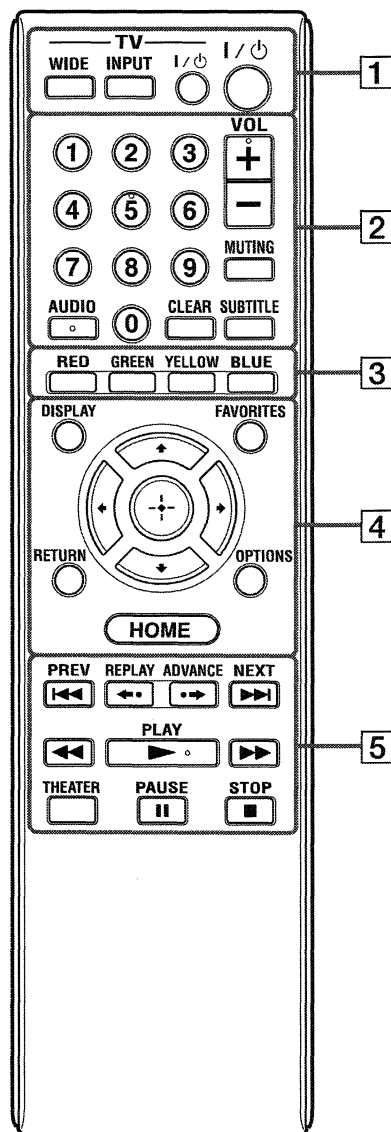

Number 5, AUDIO, VOL +, and ► PLAY buttons have a tactile dot. Use the tactile dot as a reference when operating the player.

The player automatically returns to standby mode

If any button on the remote is not pressed for more than 30 minutes, the player automatically returns to standby mode.

1 -TV- WIDE

Changes the screen format.

-TV- INPUT

Switches between TV and other input sources.

-TV- I/⏻ (on/standby)

Turns on the TV, or sets to standby mode.

I/⏻ (on/standby)

Turns on the player, or sets to standby mode.

2 Number buttons (0 - 9)

Enters the title/chapter numbers, etc.

VOL +/-

Adjusts the TV volume.

MUTING

Mutes the sound.

AUDIO

Selects the language track when multi-lingual tracks are recorded.

CLEAR

Erases input characters. Each time you press the button, one character is erased.

SUBTITLE

Selects the subtitle language when multi-lingual subtitles are recorded.

3 Color buttons (RED/GREEN/YELLOW/BLUE)

Short cut keys for interactive functions.

4 DISPLAY (page 14)

Displays the playback information on the screen.

FAVORITES (page 16)

Displays the Internet content added to the Favorites List. You can save up to 18 of your favorite Internet content programs.

OPTIONS (page 16)

The options menu that can be selected appears on the screen.

HOME

Enters the player's home menu.

Displays the wall paper when pressed on the category icon of the home menu.

RETURN

Returns to the previous display.



Moves the highlight to select a displayed item.

Center button (ENTER)

Enters the selected item.

5 I◀◀ PREV/NEXT ▶▶I

Skips to the previous/next chapter, track, or file.

◀◀• REPLAY/ADVANCE •▶▶

Depending on the contents, these buttons may not function.

◀◀/▶▶ (fast reverse/fast forward)

- Fast reverses/fast forwards when pressed during playback. Each time you press the button during playback of videos, the search speed changes.
- Plays in slow motion, when pressed for more than one second in pause mode.
- Plays one frame at a time, when pressed briefly in pause mode.

▶▶ PLAY

Starts or re-starts playback.

THEATER (page 27)

Switches to the optimum video mode for watching movies automatically.

The THEATER button functions only when connected to a Sony Theater Mode-compatible AV amplifier (receiver) or Sony Theater Mode-compatible TV.

II PAUSE

Pauses or re-starts playback.


■ STOP

Stops playback and remembers the stop point (resume point).

The resume point for a title/track is the last point you played or the last photo for a photo folder.

Home menu display

The home menu appears when you press HOME. Select a category using ◀/▶. Select an item using ↑/↓, and press ENTER.

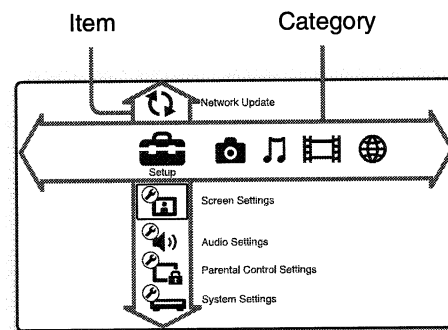

- (Setup): Adjusts the player settings.
- (Photo): Displays photos.
- (Music): Plays music.
- (Video): Plays videos.
- (Network): Displays network items.

Hookups and Settings

Step 1: Preparing the Player


Checking the supplied accessories

Check that you have the following items:

- Audio/video cable (phono plug x3) (1)
- AC power cord (1)
- AC adapter (1)
- Remote control (remote) (1)
- Size AA (R6) batteries (2)

Preparing the remote

Insert two Size AA (R6) batteries by matching the $\oplus$ and $\ominus$ ends on the batteries to the markings inside the battery compartment.

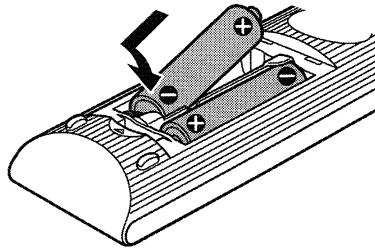

Code numbers of controllable TVs

While holding down -TV- , enter the TV's manufacturer code using the number buttons.

Manufacturer	Code number
Sony	01 (default)
Hitachi	02
LG/Goldstar	04
Loewe	45
Mitsubishi/MGA	13
Panasonic	19
Philips	21
Pioneer	16
RCA	10
Samsung	20
Sharp	18
Toshiba	07

Parental control/area code

For details, see "Parental Control Area Code" (page 20).

Number, Area (Code)

2044, Argentina (ar)
 2047, Australia (au)
 2046, Austria (at)
 2057, Belgium (be)
 2070, Brazil (br)
 2090, Chile (cl)
 2092, China (cn)
 2093, Colombia (co)
 2115, Denmark (dk)
 2165, Finland (fi)
 2174, France (fr)
 2109, Germany (de)
 2200, Greece (gr)
 2219, Hong Kong (hk)
 2248, India (in)
 2238, Indonesia (id)
 2239, Ireland (ie)
 2254, Italy (it)
 2276, Japan (jp)
 2304, Korea (kr)
 2333, Luxembourg (lu)
 2363, Malaysia (my)
 2362, Mexico (mx)
 2376, Netherlands (nl)
 2390, New Zealand (nz)
 2379, Norway (no)
 2427, Pakistan (pk)
 2424, Philippines (ph)
 2428, Poland (pl)
 2436, Portugal (pt)
 2489, Russia (ru)
 2501, Singapore (sg)
 2149, Spain (es)
 2499, Sweden (se)
 2086, Switzerland (ch)
 2543, Taiwan (tw)
 2528, Thailand (th)
 2184, United Kingdom (gb)