

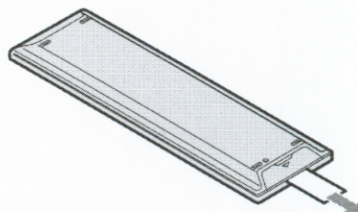
Using TV Features

Overview of the Remote Control and TV Controls/Indicators

Inserting Batteries into the Remote Control


When using the remote control for the first time

Pull the insulation film out from the remote control.




When changing the battery

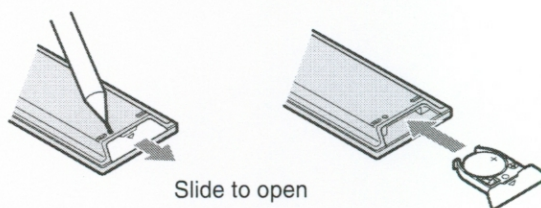Unlock the battery holder by pushing a pen tip into the hole located on the rear of the remote control. Slide the battery holder out. Replace the battery with CR2032 (lithium) battery with **+** side up in the battery holder of the remote control.




Remote Control

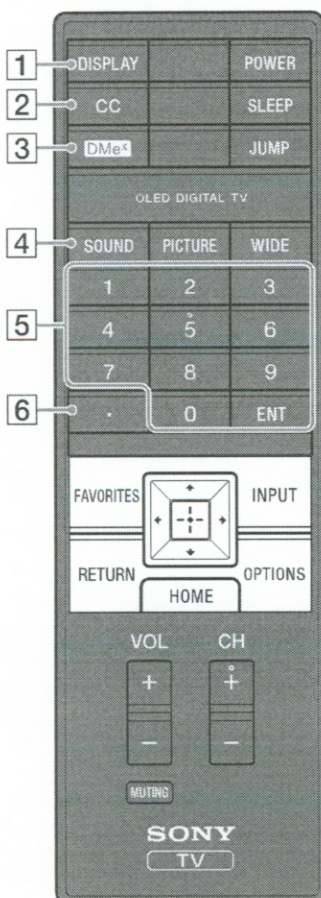


- This remote control cannot be programmed to use with other equipment.
- The **5** button and **CH +** have a tactile dot. Use them as a reference when operating the remote control.
- This remote control is designed to operate at fairly close range from the TV. If you use with other Sony TVs, operate it near the TV you want to control.


Button	Description
1 DISPLAY	Press once to display the information pertaining to the channel and/or program when available. The OSD (On Screen Display) will time out in a few seconds or press again to immediately turn off the display. You can also set the display to show minimal information. See Info Banner on page 41.
2 CC	Press to turn on and off the Closed Captions (CC). To change or customize the CC Display , see page 38.
3 DMe^x	Press to access features in the optional BRAVIA external module (e.g. DMX-NV1). See your dealer or www.sony.com/bravia for more information. The module may not be available in your region.
4 SOUND	Press to cycle through different sound settings: Dynamic for enhancing treble and bass, Standard for spoken dialog and Custom for flat setting (see page 34).
5 0-9 ENT	Press 0-9 to select a channel; the channel changes after two seconds. Press ENT to change channels immediately.
6 	Use with 0-9 and ENT to select digital channels. For example, to enter 2.1, press  ,  ,  and ENT .









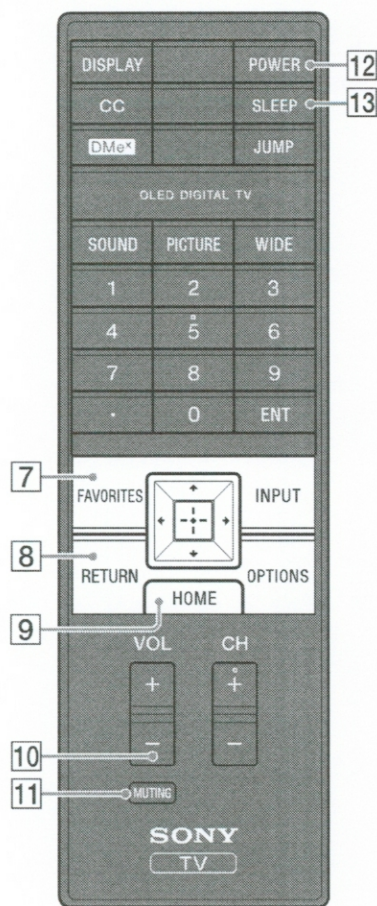


Button	Description
7 FAVORITES	Press once to display the stored favorite channel list. You can store up to 30 channels in your Favorites list. How to Add to Favorites While tuned to the channel you want to add to the list, press OPTIONS and highlight "Add to Favorites", then press [+]. A confirmation message of "Channel added to Favorites" will appear for a few seconds. How to Remove from Favorites While tuned to a channel that exists in the Favorites list, press OPTIONS and highlight "Remove from Favorites", then press [+]. A confirmation message of "Channel removed from Favorites" will appear for a few seconds.  Your Favorites list will be cleared each time you run Auto Program (see pages 18 and 37 for Auto Program).
8 RETURN	Press to go back to the previous screen.
9 HOME	Press to display the TV Home Menu/XMB™ (XrossMediaBar) to access the TV Home Menu items such as the TV Settings , Photo , Music , TV channels and External Inputs list (see page 25).
10 VOL +/-	Press to adjust the volume.
11 MUTING	Press to mute the sound. Press again or press VOL + to restore the sound.  If no operation is performed (such as switching the channels or adjusting the volume control) for more than 5 minutes, "Muting" disappears from the screen. Press ▲/▼/◀/▶ or [+] to display it again.
12 POWER	Press to turn on and off the TV.
13 SLEEP	Press repeatedly until the TV displays the time in minutes (Off , 15min , 30min , 45min , 60min , 90min or 120min) that you want the TV to remain on before shutting off. To cancel Sleep Timer , press SLEEP repeatedly until Off appears.

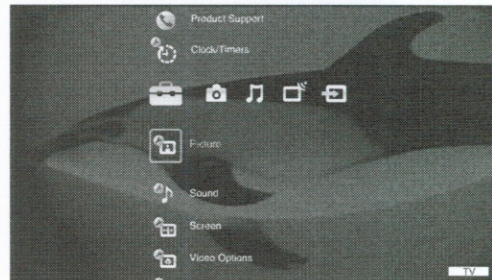


(Continued)

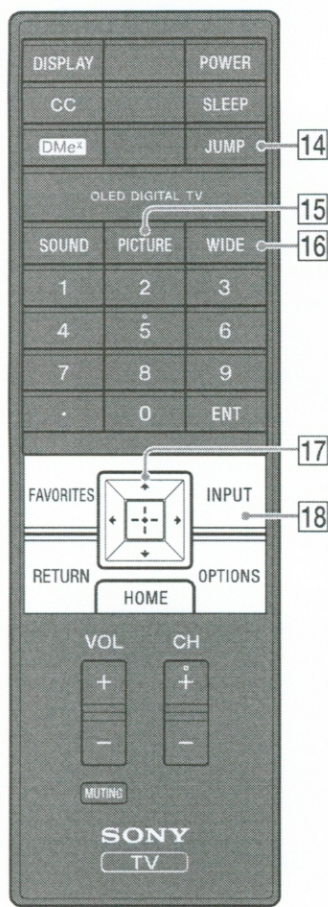

         Button	Description												
14 JUMP	Press to jump back and forth between two channels. The TV alternates between the current channel and the last channel that was selected. 												
15 PICTURE	Press repeatedly to cycle through the available picture modes: Vivid, Standard, Custom, Photo . (Available options depend on the current mode.) The picture modes can also be accessed in the Picture settings. For details, see Picture settings on page 32.												
16 WIDE	Press repeatedly to step through the Wide Mode settings: Wide Zoom, Normal, Full, Zoom . The Wide Mode settings can also be accessed in the Screen settings (see page 34). Changing the Wide Screen Mode <table border="1"> <thead> <tr> <th>4:3 Original source Standard-definition source</th><th>16:9 Original source High-definition source</th></tr> </thead> <tbody> <tr> <td></td><td></td></tr> <tr> <td>Wide Zoom </td><td>Wide Zoom </td></tr> <tr> <td>Normal </td><td>Normal This mode is not available</td></tr> <tr> <td>Full </td><td>Full </td></tr> <tr> <td>Zoom </td><td>Zoom </td></tr> </tbody> </table>	4:3 Original source Standard-definition source	16:9 Original source High-definition source			Wide Zoom 	Wide Zoom 	Normal 	Normal This mode is not available	Full 	Full 	Zoom 	Zoom 
4:3 Original source Standard-definition source	16:9 Original source High-definition source												
													
Wide Zoom 	Wide Zoom 												
Normal 	Normal This mode is not available												
Full 	Full 												
Zoom 	Zoom 												
17 	Press  to move the on-screen cursor. Press  to select/confirm an item.												
18 INPUT	Press once to display the External Inputs list. Press repeatedly to toggle through the HDMI inputs, then press  to select/confirm an item.												



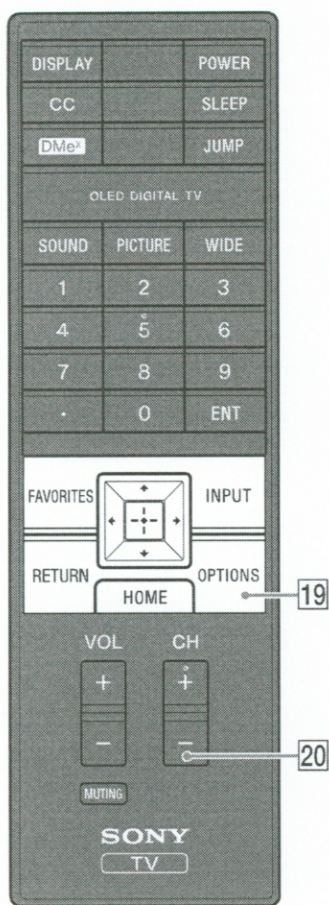- When the TV receives a 720p, 1080i or 1080p signal, **Normal** cannot be selected.



Button	Description																				
19 OPTIONS	Press to display a list of convenient functions and menu shortcuts. The OPTIONS menu items vary based on input and content.  If the OPTIONS menu is displayed for more than 2 to 3 minutes, and no operation is performed (such as switching the channels or adjusting the volume control), the screen returns to the previously viewed screen. <table border="1"> <thead> <tr> <th>Menu Item</th><th>Reference Page</th></tr> </thead> <tbody> <tr> <td>Picture</td><td>See page 32</td></tr> <tr> <td>Sound</td><td>See page 34</td></tr> <tr> <td>Add to Favorites/ Remove from Favorites</td><td>See page 21</td></tr> <tr> <td>MTS</td><td>See page 36</td></tr> <tr> <td>Alternate Audio</td><td>See page 36</td></tr> <tr> <td>Digital Rating</td><td>See page 39</td></tr> <tr> <td>Screen</td><td>See page 34</td></tr> <tr> <td>Menus for Photo</td><td>See page 27</td></tr> <tr> <td>Menus for Music</td><td>See page 27</td></tr> </tbody> </table>	Menu Item	Reference Page	Picture	See page 32	Sound	See page 34	Add to Favorites/ Remove from Favorites	See page 21	MTS	See page 36	Alternate Audio	See page 36	Digital Rating	See page 39	Screen	See page 34	Menus for Photo	See page 27	Menus for Music	See page 27
Menu Item	Reference Page																				
Picture	See page 32																				
Sound	See page 34																				
Add to Favorites/ Remove from Favorites	See page 21																				
MTS	See page 36																				
Alternate Audio	See page 36																				
Digital Rating	See page 39																				
Screen	See page 34																				
Menus for Photo	See page 27																				
Menus for Music	See page 27																				
20 CH +/-	Press to scan through channels. To scan quickly through channels, press and hold down either +/-.																				