

Universal Remote Control

TV Model: (_____) **Code:** _____

The Remote must be programmed with the proper remote code before being used with any other devices. Please follow the programming procedure below.

- 1. Press and Hold the “TV button. While still holding down TV button press and hold the Power & MENU” buttons at the same time.**
- 2. Hold until the TV button light turns off. Once off, release all three buttons. If the TV button light does not turn off, release all three buttons and repeat step 1.**
- 3. Enter the 4 digit remote code.**
- 4. The TV button should now flash 3 times to confirm that a code was programmed.**

| Model | Code | Model | Code |
|--------------------------------|-------------|----------------------|-------------|
| SYTPT3218AB (Ver 1)ATI-1HDMI | 0000 | DYLT32A (Ver 1) DVI | 0005 |
| SYTPT3718AB (Ver 1)ATI-1HDMI | | DYLT37A | |
| SYTPT4218AB (Ver 1) ATI-1HDMI | | | |
| GVTL3218AB | | DYLT032C | 0006 |
| GVTL3718AB | | DYLT032D | |
| GVTL4218AB | | | |
| SYTPT3227AB (Ver 1) ATI-1HDMI | | DYLT32A (Ver 2) HDMI | 0007 |
| SYTPT3727AB (Ver 1) ATI-1HDMI | | DYLT32B | |
| SYTPT4227AB (Ver 1) ATI-1 HDMI | | | |
| PRTPT2629AB | | DYLT3280 | 0008 |
| PRTPT3229AB | DYLT3288 | | |
| | | | |
| GV-2318NB | 0001 | GVKL2048NB | 0009 |
| | | GVKL2049NB | |
| DYLT4218A | 0002 | | |
| | | DYLT3260 | 0010 |
| | | GVNL3268AB | |
| DYLT3212 | 0003 | GVNL3768 | |
| DYLT3218 | | | |
| | | GVKL3278AB | 0011 |
| SYTPT2627AB MS-3 HDMI | 0004 | | |
| SYTPT3227AB (Ver 2)MS-3 HDMI | | SYXRT4791AB | 0012 |
| SYTPT3727AB (Ver 2)MS-3 HDMI | | | |
| SYTPT4227AB (Ver 2)MS-3 HDMI | | | |
| | | | |