


6. TV+6 TV/VIDEO KEY = DTV/ TV, PICTURE KEY = SOURCE, V-CHIP KEY = SIZE, SIZE KEY = PIC.

MODE, I KEY = PIP, ■ KEY = S.MODE, SOUND KEY = PC/ H DMI,

TEXT KEY = S.VIDEO, COMPONENT, ENTER KEY = 

HERE IS THE STEP YOU NEED TO FOLLOW AFTER CHANGING THE BATTERY ON THE REMOTE CONTROL,

PLEASE CLICK ON TV+6