


BRIEF MODEL MATCHING FOR REMOTE CONTROL SVA-U01

1. TV+1 « KEY = PIP
2. TV+2 HERE IS THE STEP YOU NEED TO FOLLOW AFTER CHANGING THE BATTERY ON THE REMOTE CONTROL. PLEASE CLICK ON TV+2
3. TV+3 TEXT KEY = SIZE, ENTER KEY = CC, EPG KEY = BRIGHT
HERE IS THE STEP YOU NEED TO FOLLOW AFTER CHANGING THE BATTERY ON THE REMOTE CONTROL.
PLEASE CLICK ON TV+3,
4. TV+4 OK KEY = MENU, MENU KEY = PICTURE
HERE IS THE STEP YOU NEED TO FOLLOW AFTER CHANGING THE BATTERY ON THE REMOTE CONTROL.
PLEASE CLICK ON TV+4,
5. TV+5 CH- = - / -, ▼ KEY = CH-, ▲ KEY = CH+, ▲ KEY = VOL-, ▽ KEY = VOL+
HERE IS THE STEP YOU NEED TO FOLLOW AFTER CHANGING THE BATTERY ON THE REMOTE CONTROL.
PLEASE CLICK ON TV+5
6. TV+6 TV/VIDEO KEY = DTV/ TV, PICTURE KEY = SOURCE, V-CHIP KEY = SIZE, SIZE KEY = PIC.
MODE, I KEY = PIP, ■ KEY = S.MODE, SOUND KEY = PC/HDMI,
TEXT KEY = S.VIDEO, COMPONENT, ENTER KEY = 
HERE IS THE STEP YOU NEED TO FOLLOW AFTER CHANGING THE BATTERY ON THE REMOTE CONTROL.
PLEASE CLICK ON TV+6

Note: Please set your code every time when your remote battery has been changed. TV+4

VR-20