




## ✓ Remote Control Function

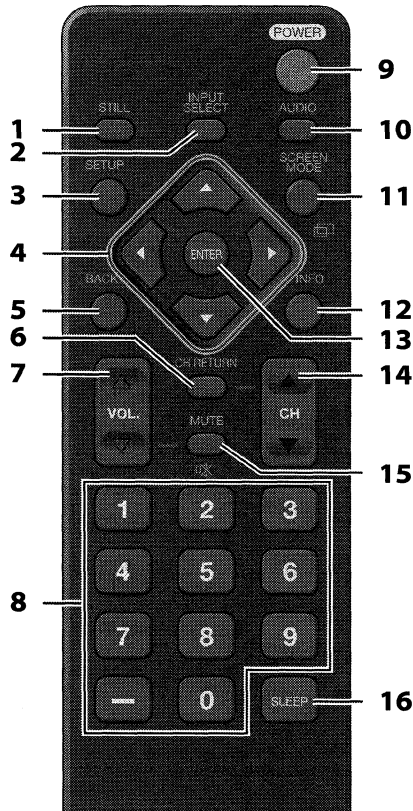

1. **STILL** (p. 15)  
Press to pause screen image.
2. **INPUT SELECT** (p. 15)  
Press to access connected external devices like a BD/DVD recorder.
3. **SETUP** (p. 13)  
Press to display the main menu.
4. **◀/▶ / ▲/▼** (p. 13)  
Press to move left / right / up / down through the items.
5. **BACK** (p. 16)  
Press to return to the previous menu operation.
6. **CH RETURN** (p. 14)  
Press to return to previously viewed channel.


7. **VOL. ▲/▼** (p. 14)  
Press to adjust the volume.
8. **Number buttons** (p. 14)  
• Press to select channels.  
– (hyphen)  
• Press to shift the subchannel from the main channel.
9. **POWER** (p. 13)  
Press to turn the unit on and off.
10. **AUDIO** (p. 15)  
**Digital mode (DTV)**  
• Press to select the audio language.  
**Analog mode (TV)**  
• Press to select the audio mode.
11. **SCREEN MODE**  (p. 17)  
Press to select aspect ratio available for the TV screen.
12. **INFO** (p. 16)  
• **Digital mode (DTV)**  
Press to display the channel information, signal type and TV setting.  
• **Analog mode (TV)**  
Press to display the channel number, signal type and TV setting.  
• **External input mode**  
Press to display the external input mode, signal type and TV setting.
13. **ENTER** (p. 13)  
Press to decide the command of setting when the main menu is displayed.
14. **CH ▲/▼** (p. 15)  
Press to select channels and the external input mode.
15. **MUTE**  (p. 14)  
Press to turn the sound on and off.
16. **SLEEP** (p. 14)  
Press to activate the sleep timer.

### When using a universal remote control to operate this unit.

- Make sure the component code on your universal remote control is set to our brand.
- Refer to the manual accompanying your remote control for more details.
- We do not guarantee 100% interoperability with all universal remote controls.

## ✓ Installing the Batteries

Install the batteries (AAA x 2) matching the polarity indicated inside battery compartment of the remote control.

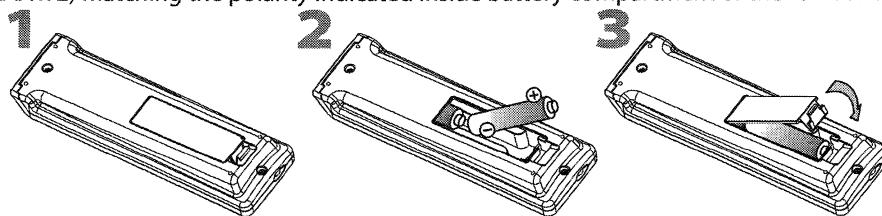

### Battery Precautions:

- Be sure to follow the correct polarity as indicated in the battery compartment. Reversed batteries may cause damage to the device.
- Do not mix different types of batteries together (e.g., Alkaline and Carbon-Zinc, or rechargeable batteries like ni-cad, ni-mh, etc) or old batteries with fresh ones.
- If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
- Do not try to recharge batteries; they can overheat and rupture.