

Chapter 3: Using the remote control

Controlling other devices

The TV's remote control can operate other devices such as cable converter boxes, satellite receivers, VCRs, DVD players, and HTIBs (home theater in a box).

Toshiba devices:

 
The remote is programmed to operate a variety of devices (see p. 90).

Non-Toshiba devices or Toshiba devices that the remote control is not programmed to operate:

Program the remote (see p. 90).


Installing batteries

- 1 Pull up to open the cover.

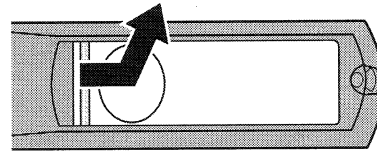

- 2 Install two AA size batteries.

 Note: Use carbon zinc batteries or alkaline batteries.

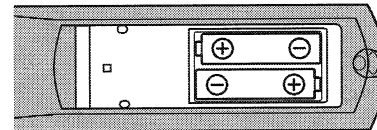

- 3 Slide on the cover.

Caution: Do not expose batteries to excessive heat such as sunshine, fire, or the like.

Note:

- Every time you change the batteries, you must reprogram the remote.
- Dispose of batteries in a designated disposal area.
- Always consider the environment when disposing of batteries. Always follow applicable laws and regulations.
- If the remote does not operate correctly, or if the operating range is reduced, replace the batteries.
- Always replace both batteries with new ones. Never mix battery types or use new and used batteries together.
- Always remove batteries from the remote if they are dead or if the remote control is not to be used for an extended period of time. This prevents battery acid from leaking into the battery compartment.

Learning about the Remote Control

Only the buttons used to operate the TV are described in this section.

For the HDMI® CEC Control functions, see “Using HDMI® CEC Control” (p. 48).

For a complete list of the remote’s functions, see “Remote control functional key chart” (p. 88–89).

Changes the picture mode to **Game** when the input mode is ColorStream HD, PC, VIDEO, or HDMI® (p. 57).

Sets the remote control mode to control the device: **TV, CABLE/SAT, BD/DVD, or AUX**. To control the TV, press **TV**. Then the keypad blinks 3 times.

When the Auto Input feature is set, you can use these keys to change inputs on the TV (p. 33).

Enters 2-part channel numbers (p. 41) / Edits the Favorites List (p. 42).

Reduces or turns off the sound (p. 61).

Adjusts the volume level.

Displays the NET TV™ menu (p. 69).

Accesses Netflix (p. 70).

Accesses the main TV menu system (p. 27–28).

Opens the Channel Browser™ (p. 41) / Scrolls to left.

When a menu is onscreen, these buttons select or adjust programming menus.

Returns to the previous menu.

 
Activates highlighted items in the main menu system.

Accesses the sleep timer (p. 52).

Selects the picture size (p. 54).

Freezes the picture (p. 56).

Switches 3D, 2D, 2D to 3D, or Native mode (p. 37).

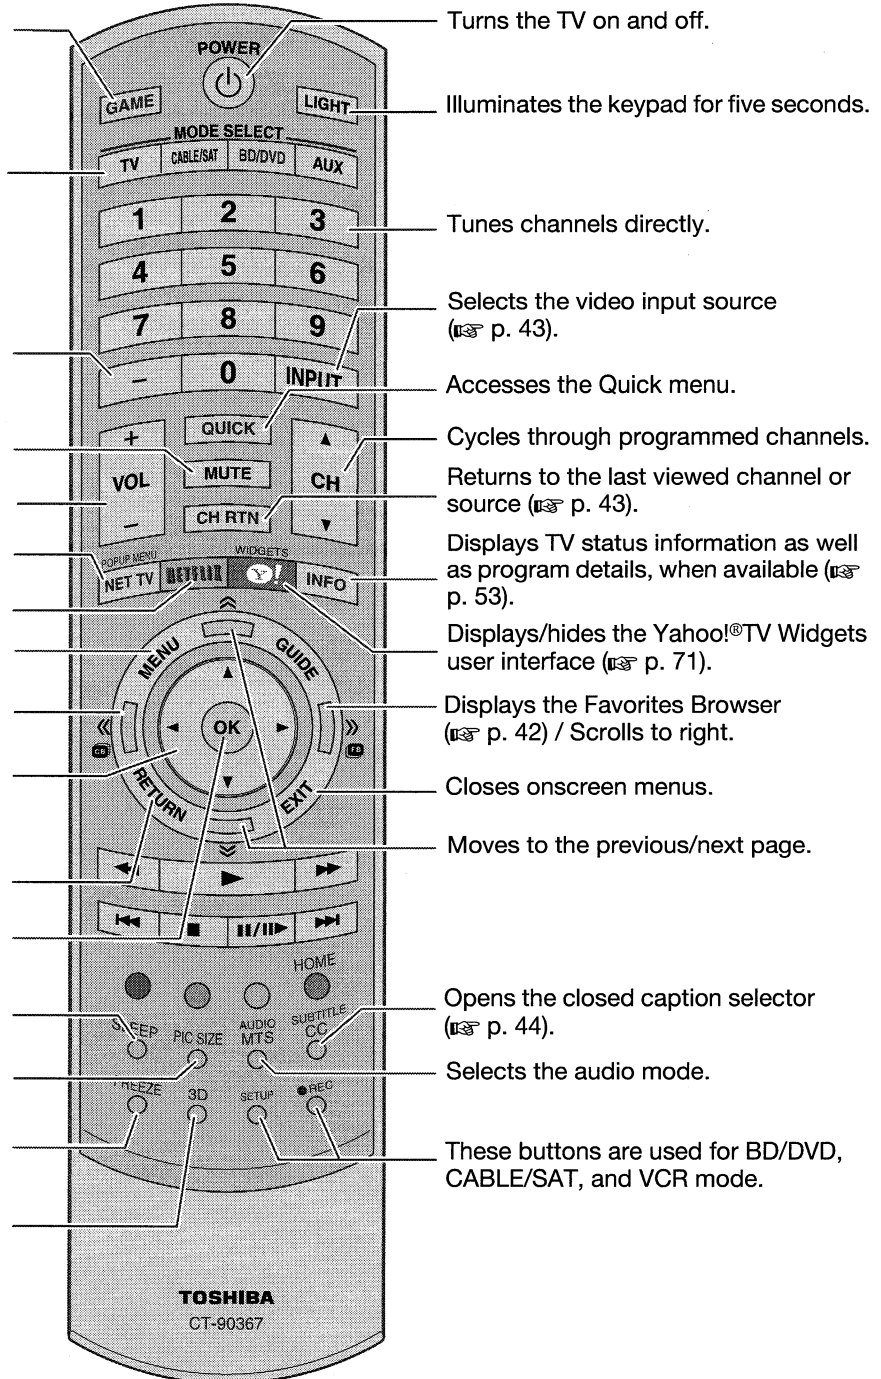

Note: The error message “NOT AVAILABLE” may appear if you press a key for a function that is not available.

TRANSMISSION VERIFICATION REPORT

TIME : 07/20/2012 00:04
NAME :
FAX :
TEL :
SER.# : K0N598719

DATE, TIME	07/20 00:04
FAX NO./NAME	41
DURATION	00:00:00
PAGE(S)	00
RESULT	BUSY
MODE	STANDARD

BUSY: BUSY/NO RESPONSE