 


## Identification of Controls

### Remote Control

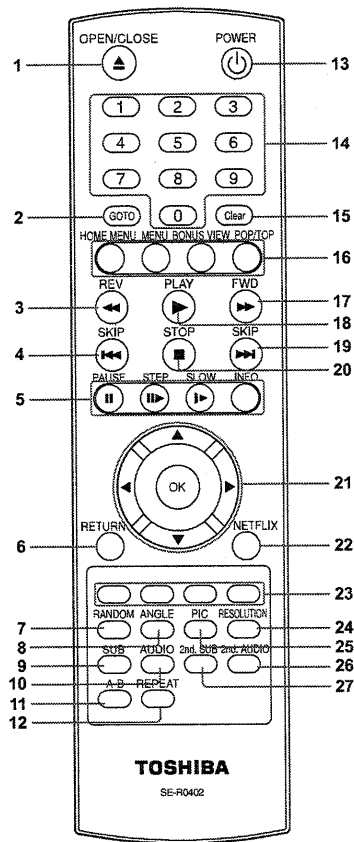

No.	Item	Description
1	<b>OPEN/CLOSE</b> ▲	Press to open or close the disc tray.
2	<b>GOTO</b>	Press to display the search menu.
3	<b>REV</b> ◀◀	During playback, press to fast reverse the playback.  • During playback, press once to return to the beginning of the current title, chapter, track or file. • During playback, press twice to return to the previous title, chapter, track or file. • During the JPEG playback, press to return to the previous file.
4	<b>SKIP</b> ◀◀◀	• During playback, press twice to return to the previous title, chapter, track or file. • During the JPEG playback, press to return to the previous file.
	<b>PAUSE</b>	Press to pause playback.
	<b>STEP</b>   ▶	Press to advance one frame.
5	<b>SLOW</b> ▶▶	Press to play back the disc in slow motion.
	<b>INFO</b>	Press to display disc information.
6	<b>RETURN</b>	Press to return to the previous menu.
7	<b>RANDOM</b>	Press to turn random function on or off for Audio CD, MP3 or WMA disc.
8	<b>ANGLE</b>	Press to select a viewing angle if multiple angles are available on the disc.
9	<b>SUB (SUBTITLE)</b>	Press to display the subtitle menu.
10	<b>AUDIO</b>	Use to select the audio mode.
11	<b>A-B</b>	Press to play back a defined section between point A and B repeatedly.
12	<b>REPEAT</b>	Press to toggle between various repeat modes.
13	<b>POWER</b> ⏻	Press to turn on the unit, or to turn the unit into the standby mode. (To completely turn off the unit, you must unplug the power cord.)

## Identification of Controls

 
No.	Item	Description
14	Number buttons	<ul style="list-style-type: none"> <li>In playback mode, press <b>GOTO</b>, then press the number buttons to enter a title, chapter, track, time or file number.</li> <li>In menu mode, press to enter the parental code password.</li> </ul>
15	<b>CLEAR</b>	Press to clear an input error.
	<b>HOME MENU</b>	Press to display the Connected in home menu.
	<b>MENU</b>	Press to display disc menu.
	<b>BONUSVIEW</b>	Press to switch picture-in-picture feature on or off (only applicable to BD-video which supports the PIP function).
16	<b>POP/TOP</b>	<ul style="list-style-type: none"> <li>During Blu-ray Disc playback, press to open a menu that lets you control Blu-ray Disc playback.</li> <li>During DVD playback, press to open the DVD menu (if available).</li> </ul>
17	<b>FWD</b> ►►	During playback, press to fast forward the playback.
18	<b>PLAY</b> ►	Press to start playback or resume playback.
19	<b>SKIP</b> ►►	<ul style="list-style-type: none"> <li>During playback, press to skip to the next title, chapter, track or file.</li> <li>During the JPEG playback, press to go to the next file.</li> </ul>
20	<b>STOP</b> ■	Press to stop playback.
	▲ / ▼ / ◀ / ▶	Press to select items or settings.
21	<b>OK</b>	Press to confirm or select menu items.
22	<b>NETFLIX</b>	Press to use Netflix service directly. (Make sure your Blu-ray Disc™ player is correctly connected to the internet and network settings are properly configured.)
23	<b>RED / GREEN / BLUE / YELLOW</b>	<ul style="list-style-type: none"> <li>Press to select items on some Blu-ray Disc™ contents.</li> <li>When file list / thumbnail list is shown, press to switch between pages.</li> </ul>
24	<b>RESOLUTION</b>	Press to select the video resolution in full stop mode.

25	<b>PIC</b>	<p>In playback mode, use to adjust picture quality according to your preference (Actual effect to picture may vary depending on TV.):</p> <ul style="list-style-type: none"> <li>E.P.M (Enhanced Picture Mode): The picture is sharper with enhanced color.</li> <li>Sharpness</li> </ul>
26	<b>2nd. AUDIO</b>	In PIP mode, press to turn the audio for the secondary video on or off.
27	<b>2nd. SUB (SUBTITLE)</b>	In PIP mode, press to turn the subtitle for the secondary video on or off.


### Installing batteries

Install the batteries (AAA×2) matching the polarity indicated inside battery compartment of the remote control.

#### 1 Open the cover.



#### 2 Insert batteries.

 

Make sure to match the + and - on the batteries to the marks indicated in the battery compartment.

#### 3 Close the cover.

**Caution:** Never throw batteries into a fire.

 
#### Notes:

- Do not mix different battery types or combine used batteries with new ones.
- If the remote control does not operate correctly, or if the operating range becomes reduced, replace both batteries with new ones.
- If the batteries are dead or if you will not be using the remote control for a long time, remove the batteries to prevent battery acid from leaking into the battery compartment.

## Identification of Controls

### Operating with the remote control

Point the remote control at the remote sensor and press the buttons.

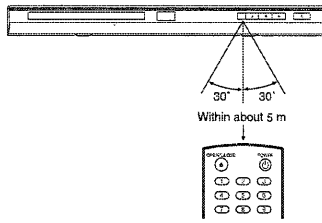

**Distance:** About 5 m from the front of the remote sensor.

**Angle:**  
About 30° in each direction of the front of the remote sensor.

- Do not expose the remote sensor of the Blu-ray Disc™ player to a strong light source such as direct sunlight or other illumination. If you do so, you may not be able to operate the Blu-ray Disc™ player via the remote control.


#### Notes:

 - Direct the remote control at the remote sensor of the Blu-ray Disc™ player.
- When using the remote control, press the buttons at intervals of about 1 second to ensure the correct mode of operation.
- Do not drop or give the remote control a shock.
- Do not leave the remote control near an extremely hot or humid place.
- Do not spill water or put anything wet on the remote control.
- Do not open the remote control.
- If the remote control is not going to be used for a long time, remove the battery to avoid damage caused by battery leakage corrosion.

## Connections

### Connecting to a TV using an HDMI® cable

This connection provides better picture quality and supports up to 1080i/1080p, 1080p/24F resolution. Connect a HDMI cable from the HDMI output jack on this product to the HDMI input jack on the TV.

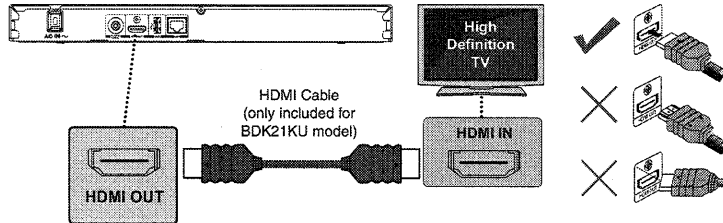

#### Notes:

- HDMI connection is required. Cables are not included for BDX2150KU model. Analog connection is not supported.
- Do not tilt the connector when inserting it into the HDMI jack, and make sure the shapes of the jack and the connector are matched.
- When using a non-HDCP compatible TV, the image will not display properly.
- An HDMI cable carries both video and audio signals. If you want to use TV speakers, you do not need to make an additional audio connection if you are using an HDMI cable.