

Remote Control

REMOTE SIGNAL EMITTER

- Point remote control to the sensor on the front panel

ON / STANDBY

- To switch the BD player to ON or standby mode

SETUP

- Enters or exits the system setup menu

MC(Media Center)

- To OPEN/CLOSE Media Center

PIP AUDIO

- Switch the secondary audio of secondary video(PIP) to on or off

SEARCH

- To search a title, chapter, track or playing time

HDMI

- To change resolution of HDMI video output to fit TV. Such as 1080P, 1080i... etc.

PREV & NEXT

- Skip to previous/next chapter/ title/track

STOP

- Stop playback

Instant replay/instant search

- Instant replay/instant search

F.R & F.F

- Fast reverse/ fast forward

PLAY/PAUSE

- Start/Pause playback

PROGRAM

- To access program list.

BOOKMARK

- To bookmark at any point during playback

ZOOM

- To zoom out/in

DIGEST


- To access JPEG thumbnail view during playback

Number Buttons

- Select numbered items in a menu
- Press to enter track/ chapter/ title numbers/password directly

Slow Forward

- Do a slow forward during normal playback
- Advance the picture frame by frame during pause mode

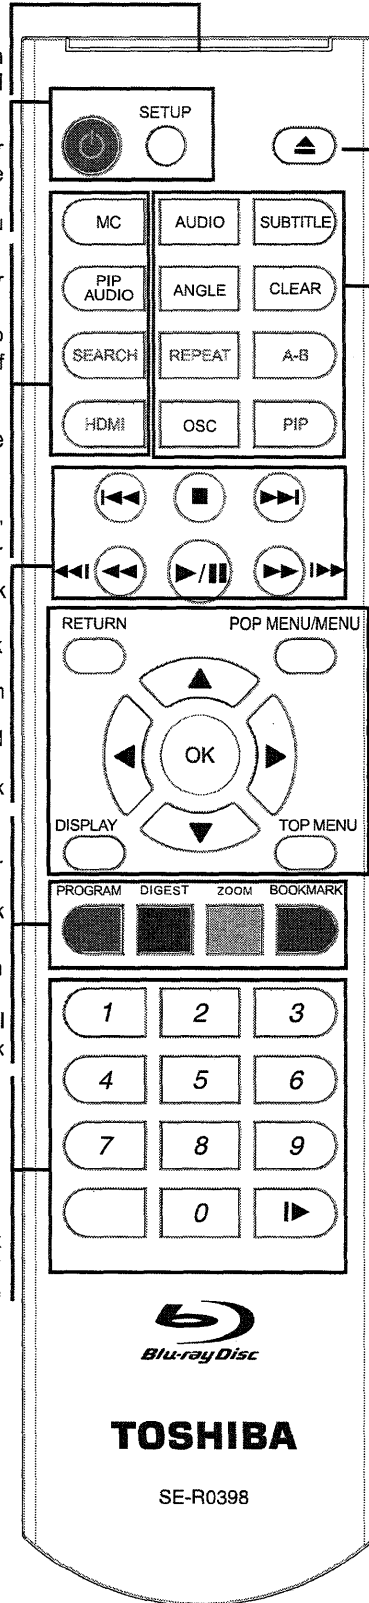

OPEN/CLOSE

- Open/ Close the disc tray

AUDIO

- To select the sound stream; press repeatedly to select different audio streams available in your disc

SUBTITLE

- To display subtitle; press repeatedly to select different subtitles available in your disc

ANGLE

- Switch the camera angle during playback

CLEAR

- To clear an entry or the bookmark and program you set

REPEAT

- Selects various repeat mode.

REPEAT A-B

- To repeat from A to B

PIP (Picture in Picture)

- Switch on or off the secondary video

OSC

- To access On Screen Control menu

RETURN

- Return to previous menu

POP MENU/MENU

- To display a menu included on many BD/DVD video discs

TOP MENU

- To display the disc title during playback

DISPLAY

- To display a window to locate a title, chapter or track

OK

- Acknowledge/ Confirm menu selection

Navigation/ Cursor buttons

- Navigation/ Cursor buttons for moving to the left / right / up / down

- Press ◀/▶ during JPEG playback to rotate the current photo track, but the JPEG playback will be paused



TOSHIBA

SE-R0398