

# Chapter 3: Using the remote control

## Controlling other devices

The TV's remote control can operate other devices such as cable converter boxes, satellite receivers, VCRs, DVD players, and HTIBs (home theater in a box).

 
### Toshiba device:

The remote is programmed to operate these devices (see p. 91).


**Non-Toshiba device or a Toshiba device that the remote control is not programmed to operate:**  
Program the remote (see p. 91).

## Installing batteries

- 1 Slide off the cover.

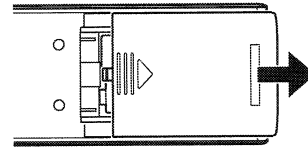

 - 2 Install two AA size carbon zinc batteries.

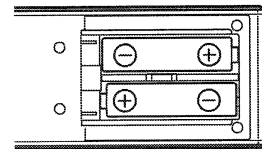

- 3 Slide on the cover.

**Caution:** Do not expose batteries to excessive heat such as sunshine, fire or the like.

### Note:

 
- Every time you change the batteries, you must reprogram the remote.
- Dispose of batteries in a designated disposal area.
- Always consider the environment when disposing of batteries. Always follow applicable laws and regulations.
- If the remote does not operate correctly, or if the operating range becomes reduced, replace the batteries.
- Always replace both batteries with new ones. Never mix battery types or use new and used batteries together.
- Always remove batteries from the remote if they are dead or if the remote control is not being used for an extended period of time. This prevents battery acid from leaking into the battery compartment.

## The remote's buttons

The buttons described in this section operate the TV only.

For the REGZA-LINK functions, see "Using REGZA-LINK®" (p. 43).

For a complete list of the remote's functions, see "Remote control functional key chart" (p. 88-90).

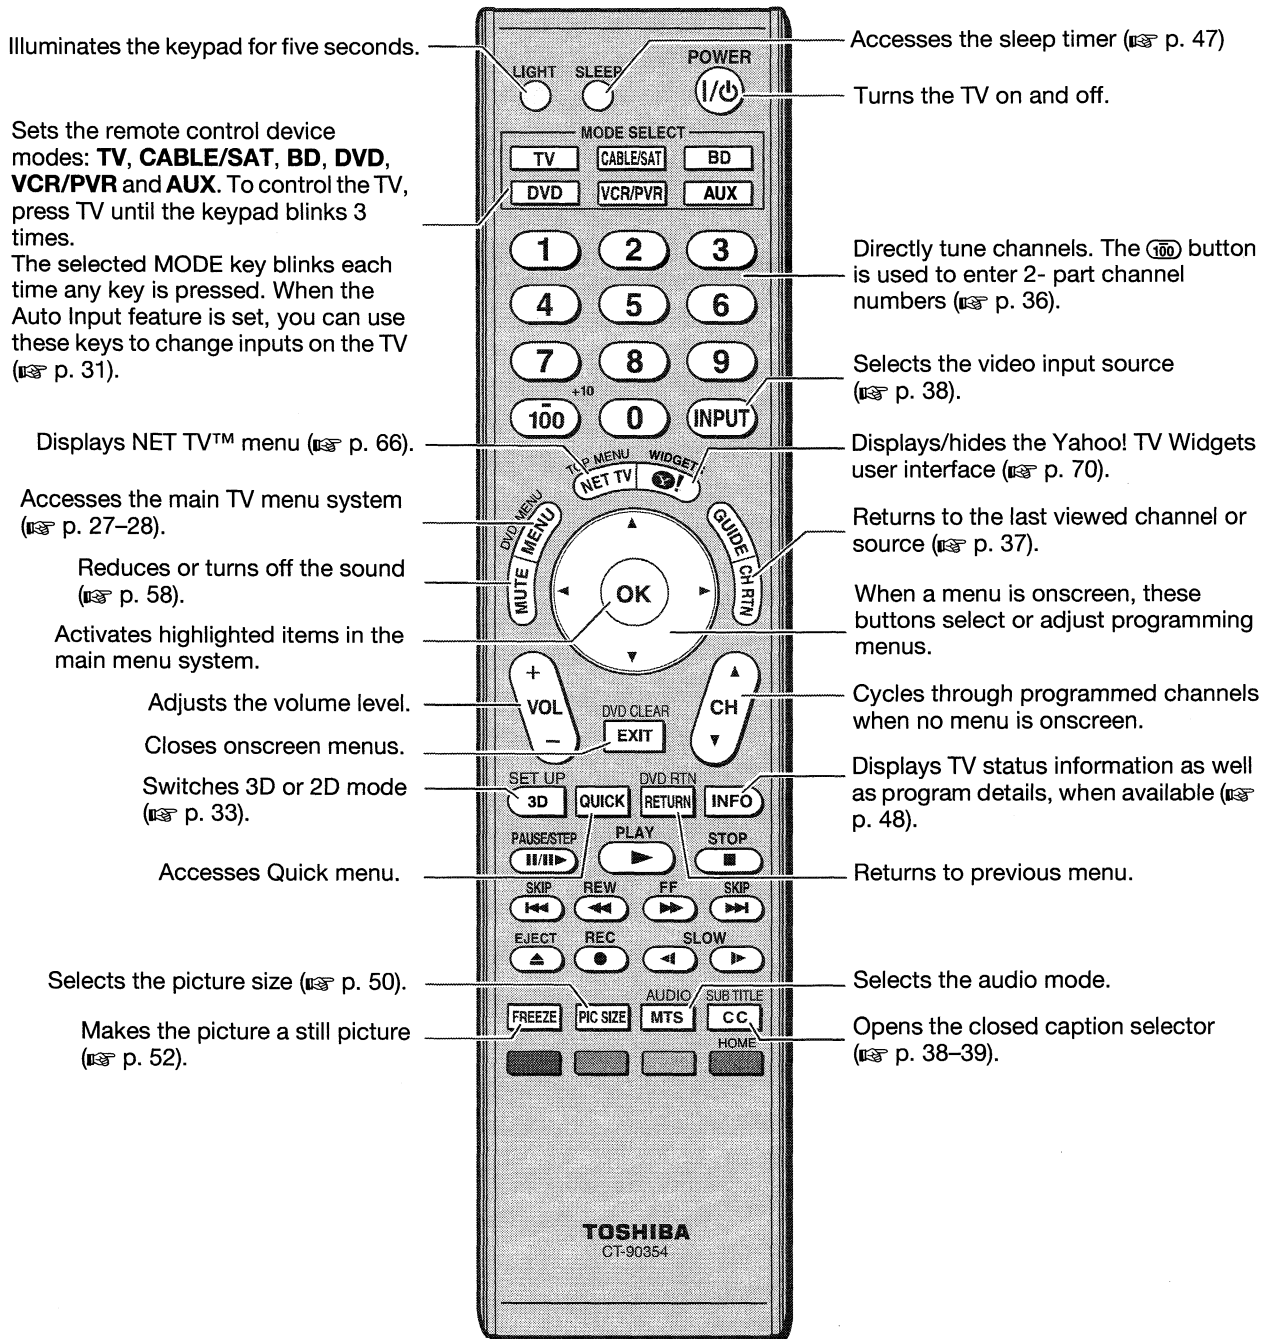

**Note:** The error message "NOT AVAILABLE" may appear if you press a key for a function that is not available.

## Remote control functional key chart

REMOTE CONTROL KEY	Toshiba TV	CABLE	SAT (satellite)	Blu-Ray	DVD/VCR Combo DVD/DVD-R	VCR	PVR	Receiver/AMP	CD
LIGHT	Lights the remote control keys*1								
SLEEP	(TV) Sleep								
POWER	Power								
MODE SELECT	Remote control device mode selection								
1	1	1	1	1	1	1	1	AV input 1	1
2	2	2	2	2	2	2	2	AV input 2	2
3	3	3	3	3	3	3	3	AV input 3	3
4	4	4	4	4	4	4	4	AV input 4	4
5	5	5	5	5	5	5	5	CD	5
6	6	6	6	6	6	6	6	Tuner	6
7	7	7	7	7	7	7	7	Phono	7
8	8	8	8	8	8	8	8	Cassette	8
9	9	9	9	9	9	9	9	AUX	9
0	0	0	0	0	0	0	0	---	0
- /100/ +10	-(digital separator)	---	-/--, +10, +100	-/--, +10, +100	-/--, +10, +100	+100	---	---	---
INPUT	(TV) Input							Input	Input
▲ / ▼	Menu select up/down	Cursor up/down	Cursor up/down	Cursor up/down	Cursor up/down	---	Cursor up/down	---	---
◀ / ▶	Menu select left/right	Cursor left/right	Cursor left/right	Cursor left/right	Cursor left/right	---	Cursor left/right	---	---
OK	OK	Select	Select	Select	Select	---	Select	---	---
NET TV/ TOP MENU	NET TV	---	---	Top Menu	Top Menu	---	---	---	---
Y! WIDGETS	Yahoo! TV Widgets	---	---	---	---	---	---	---	---
Menu/ DVD MENU	Menu	Menu, Cable Menu	Menu, Action Menu	DVD Menu, Menu	DVD Menu, Menu	---	Menu	Menu	Menu
MUTE	Mute	Mute*2	Mute*2	Mute*2	Mute*2	Mute*2	Mute*2	Mute	Mute
GUIDE	Guide	Guide	Guide	---	Guide	---	Guide	---	---
CH RTN	Last channel	Last channel	Last channel	---	---	---	---	---	---