 


PROGRAMMING THE REMOTE CONTROL

- This Remote Control is preprogrammed to operate TOSHIBA VCR's.
- To use VCR's other than Toshiba models (or Cable converter), perform the following procedures before operating.

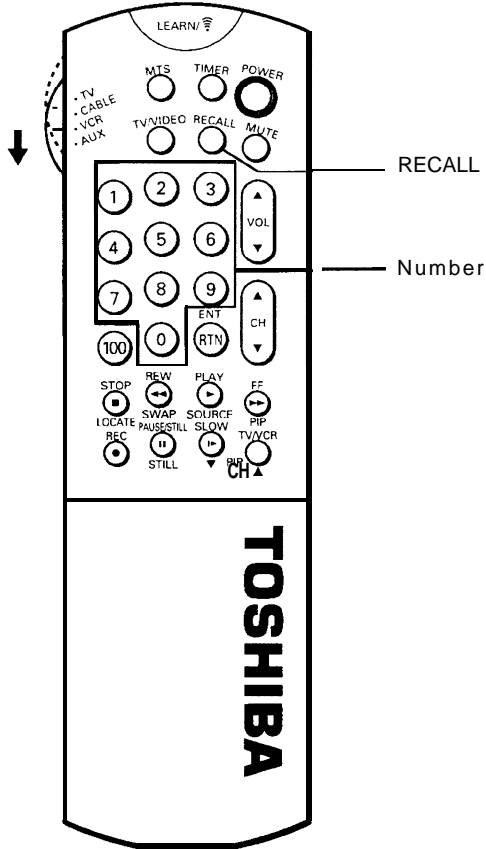

TO CONTROL OTHER BRANDS OF VCR'S AND CABLE TV CONVERTERS

1 Refer to the " *VCR code table*" (or "Cable *TV converter code table*") on pages 16 and 17 to find the code number that corresponds to the brand name of your VCR (or your converter).

If more than one number is listed, try each one separately until you find the one that works.

2 Set the TV/CABLE/VCR/AUX switch to VCR (or CABLE).

3 Hold down RECALL while pressing the **Number** buttons for the three digit code number for your brand of VCR (or converter). The transmit indicator lights up for 1 second when the programming is completed.

When an operation error has occurred, the indicator blinks. Press **RECALL** again to reset.

4 Point the Remote Control at the VCR (or at the converter) and press **POWER** to test the code number.

- If the right number was entered, the VCR should turn on.
- If the VCR does not respond to the Remote Control, repeat steps 1 to 4 with another code number.

Notes:

- You have to reprogram the Remote Control when you change its batteries.
- Some newer VCR's are capable of working on either of two remote codes. These VCR's have a switch labeled "VCR1/VCR2". If your VCR has this kind of switch, and does not respond to all the code numbers for your VCR brand name, set the switch to another position ("VCR1" or "VCR2") and reprogram the Remote Control.

For future reference, write the code you used.

VCR CODE: _____

CABLE CODE: _____

PROGRAMMING THE REMOTE CONTROL (Continued)

- The code numbers listed below are the newest ones at the time of printing. New code numbers may or may not have been added since printing.

VCR code table

BRAND NAME	CODE NUMBER	BRAND NAME	CODE NUMBER	BRAND NAME	CODE NUMBER
Aiko297	Goodmans	019,039,056,081, 09 1,297	Osaki019,056,091
Aiwa019	Gradiente..019	Otto Versand100
Akai060,068,080,125, 261	Graetz.....	.060,123	Pallidium091
Atba..039,228,297	Granada..065,100,123	Panasonic054,096,244
Amstrad019	Grundig..100	Penney..054,056,057,059, 061,259
Anitech091	Harman/Kardon....	.057	Pentax061,084,124
ASA056,100	Hem..091	Perdio..019
Audiovox056	Hinari..091,227	Philco054
Baird..123	Hitachi..019,060,061,084, 124	Philips054,081,100,129
Bell & Howell.....	.123	Imperial..019	Phonola..100
Broksonic..140,203,230	Interfunk..100	Pilot056
Bush091,228,297	ITT060,065,123,125	Pioneer..086,100
Canon054	JCL054	Portland039
Capehart039	Jensen..060	Proline..019
Carver..100	JVC027,060,086	Pulsar..058
CCE.....	.091,297	Kendo.....	.125	Pye	100
CGE019	Kenwood.....	.057,060,065,086	Quartz..065
Cimline..091	Lloyd019	Quasar..054,115
Condor039	Loewe.....	.056	Quelle..100
Craig..066,259	Loeweopta.....	100	Radiola100
Crown297	Logik.....	.019,259	RCA054,061,084,096, 124,168,221
Curtis Mathes054	Luxor062,065,125	RCA Unified..079
Daewoo.....	.039,064,065,297	LXI056	Realistic.....	.019,054,056,065, 066,067,081,085, 123,259
Dansai091	Magnavox..019,054,100,129, 168	Rex060
Daytron039	Mnests064,091	Ricoh053
De Graaf.....	.061	Mrantz.054,057,081,100	Roadsta r.....	.056,091,259
Decca.....	.019,100	Marta.....	.056	Runco058
Dual.....	.060	Matsui227,228	Saba060
Dumont.....	.019,100,123,124	MEI054	Saisho227,228
Dynatech..019	Memorex019,054,056,058, 065,066,067,123	Salora..062,065,125
Electronic..019	MGA.....	.062,080	Samsung..064,259
Emerson..019,021,056,080, 140,203,227,228, 230,231,313	Minolta.....	.061,124	Sansui060.08 6
ESC297	Mitsubishi062,080,086,100, 192,233,261	Sanyo. ..	.065,066,123,259
Ferguson..060	MTC..019,259	SBR100
Fidelity019	Multitech.....	.019,091	Scaub Lorenz019,060
Finlandia100,123,129	Murphy019	Schneider..019,091,100,129
Finlux019.061,100,123, 124	NEC057.059,060,069, 086	Scott064,140,203,229, 231
First line062,091	Neckermann100	Sears054.056,061,065, 066,073,085,123, 124
Fisher065,066,073,085, 123	Nikko056	SEI	100
Frontech.....	.039	Noblex.....	.25 9	Sentra.....	.039
Funai019	Nokia060.065,123,125, 259	Sharp.....	.076,081
GE054,079,084	Nordmende060	Shintom091
GEC100	Optonica067,081	Siemens056,123
General071	Orion140,227,228	Sinudyne..100
Go Video.....	.251,298				
Goldstar.056.05 7				

Cable TV converter code table


BRAND NAME	CODE NUMBER	BRAND NAME	CODE NUMBER	BRAND NAME	CODE NUMBER
Sony..	.051,052,053,054	ABC	026,030,032,036	Unika172
STS..	.061	Archer058,172	United Artists026
Sunstar..	.019	Century172	United Cable.....	.022
Sylvania054,062,100,129	Citizen172	Universal058,096,172,210
Symphonic019	Colour Voice044,050	Viewstar046,079
Tashiko..	.019	Comtronics	059,079	Zenith.....	.019
Tatung..	.019,060,100	Eastern021		
Teac.....	.019,060	Garrard.....	.172		
Technics054	Gemini034,089		
Teknika..	.019,054,056,071	General			
Telefunken060,206	Instrument..	.030		
Tenosal091	Hamlin.....	.028,039,278,292		
Tensai.....	.019	Hitachi030		
Thomson.....	.060	Jasco.172		
Thorn.....	.060	Jerrold..	.022,030,031,033,		
Toshiba060,062,064,085,		034,043,045		
	229,231,385	Mcom052		
Totevision056,259	Magnavox..	.046		
Triumph227	Memorex019		
Unitech.....	.259	Movie Time175		
Universum019,056,068,100,	NSC	089,175		
	125	Oak	026,038		
Vector Research...	.057.05 9	Panasonic040		
Victor.....	027,060,086	Paragon.....	.019		
Video Concepts.059.08 0	Philips044,046,047,048,		
Videosonic259		049,050,079		
Wards.....	.019,054,061,066,	Pioneer..	.163		
	067,081,09	Pulsar019		
	1,168,231,259	PVP Stereo			
Yamaha.....	.057,060	Visual Matrix.02 2		
Yoko	259	RCA040		
Zenith052,053,058	Regal039,278,292		
		Regency021		
		Rembrandt..	.089		
		Runco.....	.029		
		Samsung..	.059,163		
		Scientific Atlanta. .	.025,027,036,29 6		
		Signal	-034,059		
		Signature.....	.030		
		SL Marx.....	.059		
		Sprucer040		
		Standard			
		Components174		
		Starcom	-022,034		
		Stargate034,059		
		STS.....	.175		
		Tocom.....	.031,032,078		
		Toshiba019		

PREPARATION

Programming the Remote Control


PROGRAMMING THE REMOTE CONTROL (Continued)

 - This Remote Control is capable of learning operating codes from most infrared remote control transmitters. You can control the functions of your TV and a variety of video/audio equipment with the supplied Remote Control only.
- The 31 buttons can be used as Learning buttons.

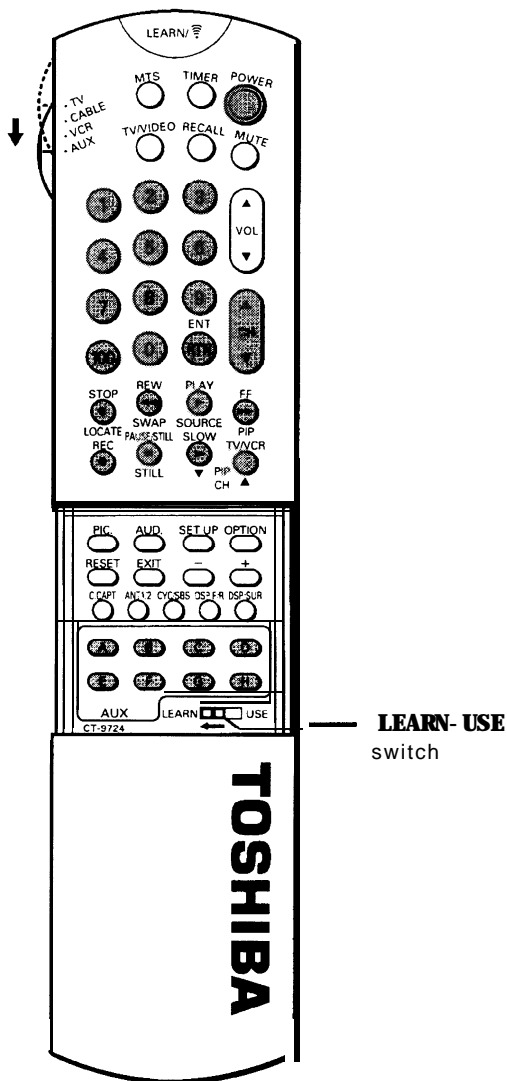

TO LEARN OPERATING CODE OF ANOTHER REMOTE CONTROL

 - 1 Set the TV/CABLE/VCR/AUX switch to "AUX".
- 2 Set the LEARN-USE switch to "LEARN" LEARN USE
- 3 Place the supplied Remote Control and the remote control transmitter to be learned, head to head approximately 1 to 3 inches (3 to 8cm) apart.

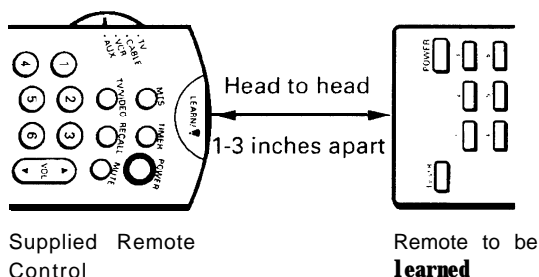


- 4 Hold down the button to **learn** on the supplied **Remote Control** for about 1 second **until the LEARN indicator lights up.** **When you press a button other than a Learning button, the indicator will blink.**
- 5 Hold down the function button to be learned on the remote control transmitter for about 3 seconds until the LEARN indicator goes off.

Note:

If the LEARN indicator **blinks**, the supplied Remote Control cannot learn **the** operating code or **an error has occurred.** Try steps 4 and 5 again.

- 6 Repeat steps 4 and 5 for other function keys.
- 7 Set the LEARN-USE switch to "USE". LEARN USE
- 8 To check your programming, operate the appropriate equipment with the supplied Remote Control. If the equipment does not operate as expected, repeat steps 3 to 7. If needed, try changing the distance between the two remote controls,

 - 9** Attach the supplied template to the Remote Control to enter the function names of the AUX buttons you have programmed. Use a ballpoint pen etc. to write the function names.

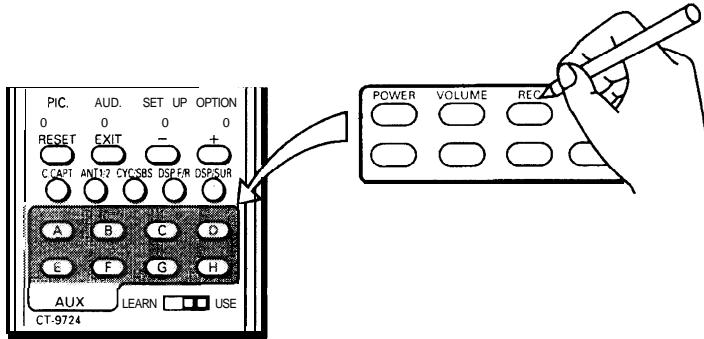

TO CANCEL THE LEARNED OPERATING CODES

- 1** Set the TV/CABLE/VCR/AUX switch to AUX.
- 2** Set the LEARN-USE switch to LEARN. LEARN USE
- 3** Hold down the button of the function to cancel on the Remote Control for about **1** second until the LEARN indicator lights up.
- 4** Hold down RECALL and RESET at the same time for about 6 seconds until the LEARN indicator goes off after blinking.

Note:

You cannot cancel the programming if you release the button while the indicator is blinking.

- 5** Set the LEARN-USE switch to USE. LEARN USE