


Chapter 3: Using the remote control

Preparing the remote control for use


The remote control can operate your TV/DVD and control the basic functions of connected audio/video devices if you connect a REGZA-LINK[®] compatible audio receiver or playback device (Page 47).

Installing the remote control batteries

 - 1 Remove the battery cover from the back of the remote control.

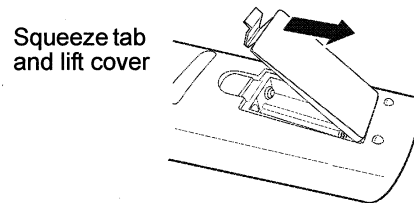

 - 2 Install two AAA size batteries. Match the + and - symbols on the batteries to the symbols on the battery compartment.

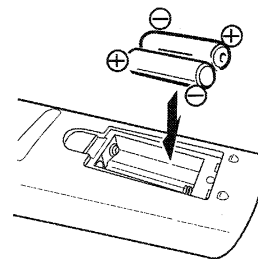

- 3 Close the battery cover on the remote control until the tab snaps.

 
Caution: Batteries must not be exposed to excessive heat such as sunshine, fire or the like.

Note:

- Be sure to use AAA size batteries.
- Dispose of batteries in a designated disposal area.
- Batteries should always be disposed of with the environment in mind. Always dispose of batteries in accordance with applicable laws and regulations.
- If the remote control does not operate correctly, or if the operating range becomes reduced, replace batteries with new ones.
- When necessary to replace batteries in the remote control, always replace both batteries with new ones. Never mix battery types or use new and used batteries in combination.
- Always remove batteries from the remote control if they are dead or if the remote control is not to be used for an extended period of time. This will prevent battery acid from leaking into the battery compartment.


Learning about the remote control

The buttons used for operating the TV/DVD are described here. For the REGZA-LINK® remote control functions, see the section “Using REGZA-LINK®” (☞ Page 47).

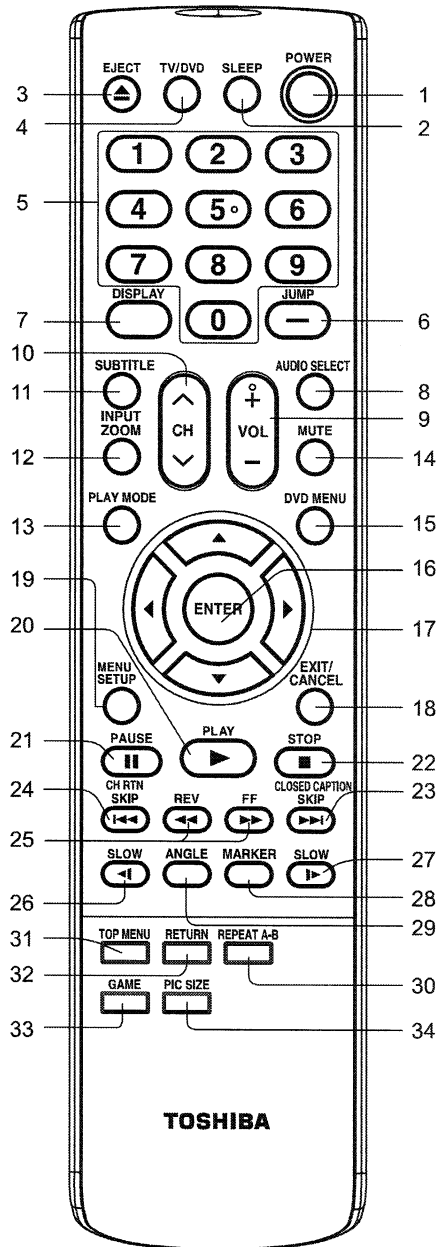



 Note: The error message “NOT AVAILABLE” may appear if you press a key for a function that is not available.

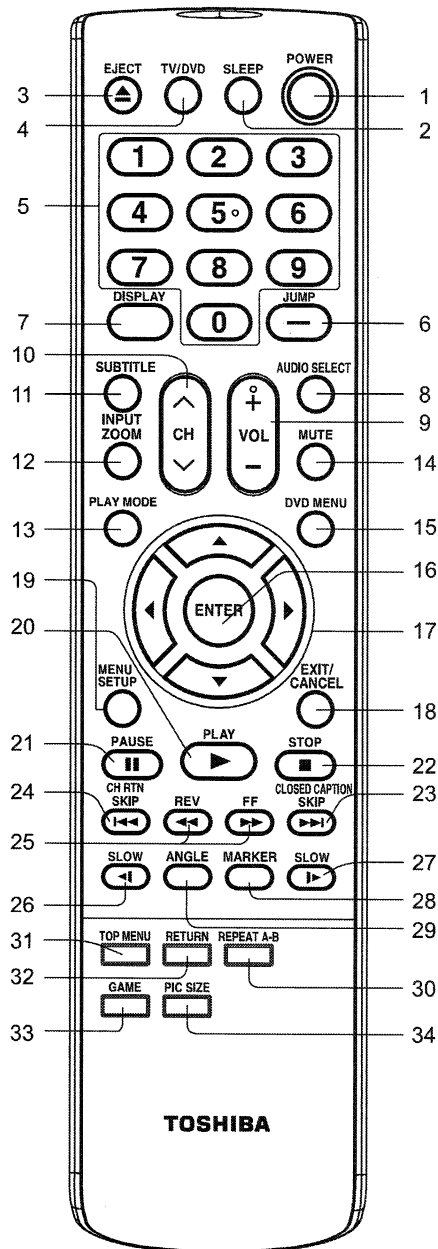
- 1 POWER** turns the TV on and off. When the TV is on, the Power LED indicator on the TV front will be illuminated in green.
- 2 SLEEP** accesses the sleep timer (☞ Page 47).
- 3 EJECT** ejects the disc from the disc slot.
- 4 TV/DVD** switches to TV or DVD mode.
- 5 Channel Numbers** directly tune channels.
- 6 JUMP** selects or locates a specific point with the disc playback (☞ Page 59); tunes to a digital sub-channel as a “dash”.
- 7 DISPLAY** displays setting or playback information (☞ Page 49, 63).
- 8 AUDIO SELECT** selects the DVD soundtrack language or VCD audio channel (☞ Page 63).
- 9 VOL + –** adjusts the volume level.
- 10 CH ^ ∨** cycles through programmed channels when no menu is on-screen (☞ Page 34).
- 11 SUBTITLE** selects the subtitle language or switches subtitle off (☞ Page 63).
- 12 INPUT/ZOOM** selects the video input source (☞ Page 33); zooms into the center of the image during disc playback (☞ Page 59).
- 13 PLAY MODE** sets the disc playback repeat mode (☞ Page 60).
- 14 MUTE** reduces or turns off the sound (☞ Page 40).
- 15 DVD MENU** accesses the DVD menu (☞ Page 62).
- 16 ENTER** activates highlighted items in the main menu system.
- 17 Arrow buttons** (▲ ▼ ◀ ▶) select or adjust programming menus when a menu is on-screen.
- 18 EXIT/CANCEL** closes on-screen menus.
- 19 MENU/SETUP** accesses the main TV menu system (☞ Page 27); configures the disc playback settings (☞ Page 70).
- 20 PLAY** begins playback of the loaded disc (☞ Page 56).
- 21 PAUSE** suspends disc playback temporarily or plays back disc frame by frame (☞ Page 56, 57).
- 22 STOP** stops playback of the loaded disc (☞ Page 56).



- 23 **CLOSED CAPTION/SKIP** **▶▶** accesses the Closed Caption menu (☞ Page 39); skips forward to locate later DVD chapters (☞ Page 58).
- 24 **CH RTN/SKIP** **◀◀** returns to the last viewed channel or source (☞ Page 35); skips back to beginning of current DVD chapter or locate previous chapters (☞ Page 58).
- 25 **FF** **▶▶** fast-forwards playback of the disc (☞ Page 57).
REV **◀◀** fast-reverses playback of the disc (☞ Page 57).
- 26 **SLOW** **◀** slow-reverses playback of the disc (☞ Page 57).
- 27 **SLOW** **▶** slow-forwards playback of the disc (☞ Page 57).
- 28 **MARKER** bookmarks specific points in the playback range for later access (☞ Page 60).
- 29 **ANGLE** changes the scene angle when playing back a DVD recorded with multi-angle scenes (☞ Page 62).
- 30 **REPEAT A-B** repeats playback of a specific section between two set points (☞ Page 61).
- 31 **TOP MENU** accesses the top menu of DVDs that contain two or more titles (☞ Page 62).
- 32 **RETURN** returns to the root directory in Audio CD playback (☞ Page 66); returns to previous directory from Media Player sub-folder or sub-menu (☞ Page 53).
- 33 **GAME** displays the Game mode screen when using the TV as display device for video game consoles (☞ Page 51).
- 34 **PIC SIZE** cycles through the picture sizes (☞ Page 35).

REGZA-LINK® Player Control menu functions



- 1 From the **Preferences** menu, press ▲ or ▼ to select **REGZA-LINK Player Control** and then press .
- 2 Press ▲ or ▼ to select the item you want to control and then press .

Item	Description
Power	Turns the selected device on and off.
Root Menu	Accesses the top menu of the selected device.
Contents Menu	Accesses the contents list when you press  . At this time, the REGZA-LINK Player Control menu will disappear.
Setup Menu	Accesses the setup menu of a DVD player.
Top Menu	Accesses the top menu of a DVD during playback.
Menu	Accesses the menu of a DVD during playback.

Note:




- These functions depend on the devices that are connected.
- The **REGZA-LINK Player Control** item will be grayed out in the following conditions:
 - A non-HDMI input is currently selected.
 - The **Enable REGZA-LINK** item is set to **Off**.
 - The connected CEC device is not a playback or recording device.

REGZA-LINK® input source selection

If a REGZA-LINK® device with HDMI switching capability (e.g. Audio Receiver) is connected to the HDMI input, you can select another REGZA-LINK® device that is connected to the master HDMI device using  on the remote control or the TV control panel ( Page 33).

VOLUME and MUTE controls of Audio Receiver

With your TV's remote control, you can adjust or mute the sound volume of the Audio Receiver.

-   adjust the volume level.
-  turns off the sound.

Note:

- To use this function:
 - Set **Speaker Preference to Audio Receiver** in the **REGZA-LINK Setup menu**.
 - Confirm that a connected REGZA-LINK® device (such as DVD player, etc.) is selected for the Audio Receiver input source.
- You can also use this function when the audio receiver is connected to the TV's **DIGITAL AUDIO OUT** terminal (not HDMI connection). In this case, select a digital audio input mode on the Audio Receiver.
- These functions depend on the device connected.




Other REGZA-LINK® functions

When the **Enable REGZA-LINK** and each item in the **REGZA-LINK Setup** menu are set to **On**, the following functions will be enabled.

Item	Description
TV Auto Input Switch	If a connected HDMI device starts playing video or audio, the TV will automatically switch to the appropriate HDMI input.
TV Auto Power On	If a device is turned on, the TV turns on automatically.
Device Auto Standby	If the TV is turned off, the TV will send a message to turn off all of the devices connected to the TV.
Speaker Preference	From this item, you can set your audio output preference to the TV speakers or the audio receiver speakers. When this item is set to Audio Receiver , the TV remote can be used to adjust or mute the volume of the audio receiver. This item will be grayed out unless a REGZA-LINK® compatible audio receiver is connected.


Note: When you turn on the audio receiver, change its input source, or adjust the sound volume, the sound will be output from the audio receiver's speakers even if **TV Speakers** has been selected. Turn the TV off and on again to output the sound from the TV speakers.

To set the REGZA-LINK® Setup:

- From the **Setup** menu, press ▲ or ▼ to select **REGZA-LINK Setup** and then press .
- Press ▲ or ▼ to select **Enable REGZA-LINK** and then press ◀ or ▶ to select **On**.
Note: If you select **Enable REGZA-LINK Off**, the other items will be grayed out.
- Press ▲ or ▼ to select the **REGZA-LINK Setup** item you want to use and then press ◀ or ▶ to select **On** or desired mode.
 - TV Auto Input Switch: On/Off
 - TV Auto Power: On/Off
 - Device Auto Standby: On/Off
 - Speaker Preference: TV Speakers/Audio Receiver
- To save the new settings, highlight **Done** and then press .
To revert to the factory defaults, highlight **Reset** and then press .

Displaying TV status information

 
To display TV status information using DISPLAY:

Press  on the remote control.

The following information will display (if applicable):

- Current input (**ANT/CABLE**, **Video**, etc.)
- If ANT/CABLE is the current input, either "CABLE" (for cable TV) or "ANT" (for over-the-air broadcasts).
- Channel number (if in **ANT/CABLE** mode)
- Channel label (if set)
- Digital signal strength indicator (bar graph in lower right corner of box; for ATSC signal only)
- Stereo, Mono or SAP audio status (when HDMI input mode, Dolby Digital or PCM)
- Video resolution

- Aspect ratio of incoming video signal (4:3 or 16:9)
- V-Chip rating status
- GameTimer (if set)

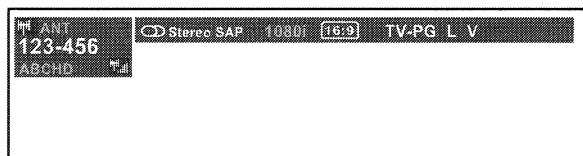


To display more TV information:

Press  on the remote control again.

The following additional information will display for off air digital channels (if applicable):

 - Title
- Duration
- Detailed description

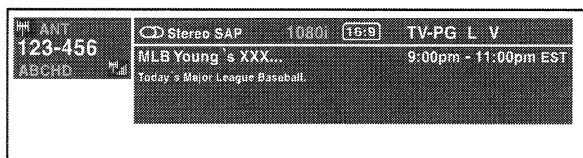

Note: The location of the banner can be moved to the top or bottom of the screen by pressing ▲ or ▼ while the **DISPLAY** is on-screen.

Understanding the auto power off feature

The TV will automatically turn itself off after approximately 15 minutes if it is tuned to a vacant channel or a station that completes its broadcast for the day. This feature functions in **ANT/CABLE** mode only.

Understanding the last mode memory feature

If the power is cut off while you are viewing the TV, the **Last Mode Memory** feature automatically turns on the TV when the power is resupplied.

Note: If it's possible, and you will be away from the TV for an extended period of time, you should unplug the power cord.