 


1.10 - VIZIO L15 Remote Control

 
1.10.1 - Remote Control Description

1. **Video Source** - Press this button to select the video input source: PC mode, Video and TV (AIR).
2. **Audio Source** - Press this button to select the video input source: Audio 1: PC, Audio 2: AV and TV.
3. **Status** - Press this button to display the current system status (i.e., channel, input source, etc.).
4. **Picture/AUTO** - Press this button to Auto adjust the PC function. Also press this button to adjust some of the LCD TV monitor picture menu items. Please see Section 3.4.2.5 – Image Adjust, page 23 for additional details regarding the PC functions.
5. **Sleep** - Press this button to set the LCD TV Monitor to turn itself off within a certain time. Choose from the following options: 30, 60, 90 or 120 minutes. Please see Section 3.4.2.4a- Features for TV and Video Mode, page 22 for additional details.

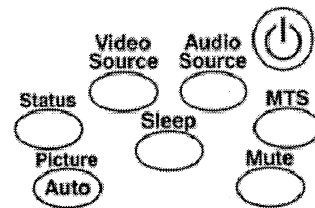


6. **MTS** - Press this button to select a sound mode if available with the TV programming: Mono, Stereo and SAP. Please see Section 3.4.2.3 - Sound, page 21 for additional details.
7. **Mute** - Press this button to eliminate or restore the LCD TV Monitor sound. Mute on will appear on the screen when the sound is muted.

8. **VOL (-/+)** - Press these buttons to decrease or increase the sound. Also press to select or adjust items in the OSD (on-screen display) menu.
9. **CH (UP/DN)** - Press these buttons to adjust the channel up or down. Also press to select or adjust items in the OSD (on-screen display) menu.
10. **Menu** - Press this button to open the OSD (on-screen display) menu. Also this button will allow you to exit the OSD menu.

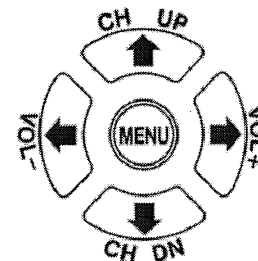

 11. **Favorites** - Press this button to store your favorite channel. Please see Section 3.4.2.1 – TV Install, page 20 for additional details.
12. **Number buttons** - Press this button to select TV channels. When selecting single-digit channels, then press the number of the desired channel. *Note: The LCD TV monitor will pause for a few seconds then tune to the selected channel.*
13. **A/CH button** - Press this button to alternate from current channel selection to previous channel selection.

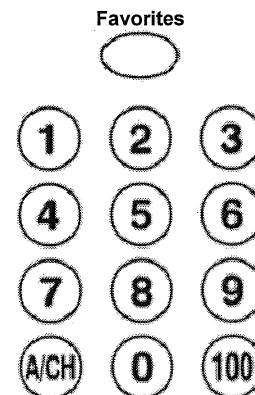

Note: The remote control layout is for reference only.

 


1.10.2 - Insertion of Batteries in the Remote Control

Insert two AAA batteries into the remote control. Make sure that you match the (+) and (-) symbols on the batteries with the (+) and (-) symbols inside the battery compartment. Re-attach the battery cover.

Precautionary Tips for Inserting the Batteries:

- Only use the specified AAA batteries.
- Do not mix new and old batteries. This may result in cracking or leakage that may pose a fire risk or lead to personal injury.
- Inserting the batteries incorrectly may result in cracking or leakage that may pose a fire risk or lead to personal injury.
- Dispose of the batteries in accordance with local laws and regulations.
- Keep the batteries away from children and pets.

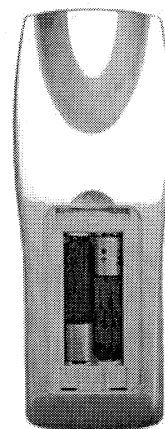

1.10.3 - Remote Control Range

- Point the remote control at the remote control sensor to transmit the commands.
- Do not place any obstacles between the remote control and the receiver window.
- The effective range of the remote control is approximately 6 feet (2 meters) from the front of the receiver window, 30° to the left and right, 20° up and down.

1.10.4 - Precautions for the VIZIO Remote Control

- Remote control should be kept dry and away from heat sources. Avoid humidity.
- If the display responds erratically to the remote control or does not respond at all, check the batteries. If the batteries are low or exhausted, replace them with fresh batteries.
- When not using the remote control for a long period of time, remove the batteries.
- Do not take apart the batteries, heat them, or throw them into a fire.
- Do not subject the remote control to undue physical stress, such as striking or dropping it.
- Do not attempt to clean the remote control with a volatile solvent. Wipe it with a clean, damp cloth.

