

BORA Remote key function translation used with L6 (key program code 10885)		
KEY	FUNCTION	DETAIL
SET	Setup	Enters the programming mode
POWER	Power	Power the selected device On/Off
TV	TV Device	Selects TV as controlled device
VCR	VCR Device	Selects VCR as controlled device
CABLE	Cable Device	Selects Cable Box as controlled device
DVD	DVD Device	Selects DVD as controlled device
1-0	Numeric keys	Direct channel input
INPUT	Video Input	Selects video input in sequential order
ENTER	NA	Not Implemented
CH+	Channel Up	Increment Channel
CH -	Channel Down	Decrement Channel
LAST	Last Channel	Toggle previous channel viewed
MUTE	Mute	Audio Mute
VOL+	Volume Up	Increase Volume
VOL -	Volume Down	Decrease Volume
MENU	OSD Menu	Turn On-Screen Menu On/Off
INFO	OSD Info	Displays Input Mode or Channel on screen
< ^ v >	Navigation Keys	With OSD active, <> selects menu page, ^ v selects items in menu, then <> adjusts selected function
OK	Select	Selects the Current Menu Page when OSD is active
GUIDE	NA	Not Implemented
EXIT	Exit	Exit Menu
WIDE/RECORD	NA	Not Implemented
SLEEP/PAUSE	NA	Not Implemented
MTS/PLAY	NA	Not Implemented
CC/STOP	NA	Not Implemented
NTSC TV/PREV	NA	Not Implemented
AV/REV	NA	Not Implemented
ANALOG HD/FWD	NA	Not Implemented
DIGITAL HD/NEXT	NA	Not Implemented
ZOOM -	PIP	Turn PIP On/Off
ZOOM +	NA	Not Implemented
FREEZE	SWAP	Swaps Main and PIP screens
RGB	NA	Not Implemented
PIP	NA	Not Implemented
PIP CH -	NA	Not Implemented
PIP CH +	NA	Not Implemented
AUDIO	NA	Not Implemented
PIP INPUT	NA	Not Implemented
PIP SIZE	NA	Not Implemented
LANG	NA	Not Implemented
SWAP	NA	Not Implemented