

VIZIO Universal Remote Control

The VIZIO Universal Remote Control is a comprehensive remote that can be used to control up to four different devices. The remote button functions are explained on the following pages.

Remote LED – Blinks when the remote operates.



SET - This button starts all programming of the Remote Control.



POWER - Press this button to turn the device on from the Standby mode. Press it again to return to the Standby mode.



DVD - This button selects a programmed DVD player.



AUDIO - This button selects a programmed Audio Receiver/Amp/Home Theatre System.



CABLE - This button selects a programmed cable TV set-top box or a satellite TV set-top box.



TV - This button has been pre-programmed to select the codes to operate the VIZIO HDTV.



1 thru 0 - Use these buttons to select a channel or enter a password.

 


INPUT - This button allows the user to cycle through the inputs.



— The DASH button is for the DTV mode. When selecting a digital channel directly use this button for the separation of main and sub-channels. For example, channel 28-2 would be selected by the button sequence 2 8 DASH 2.

***NOTE:** This is a programmable remote supporting up to 4 devices (see TV, VCR, CABLE, DVD buttons at the top of the remote). If the remote is not working with your VIZIO TV, press the TV button on the remote to set the functions back to TV.

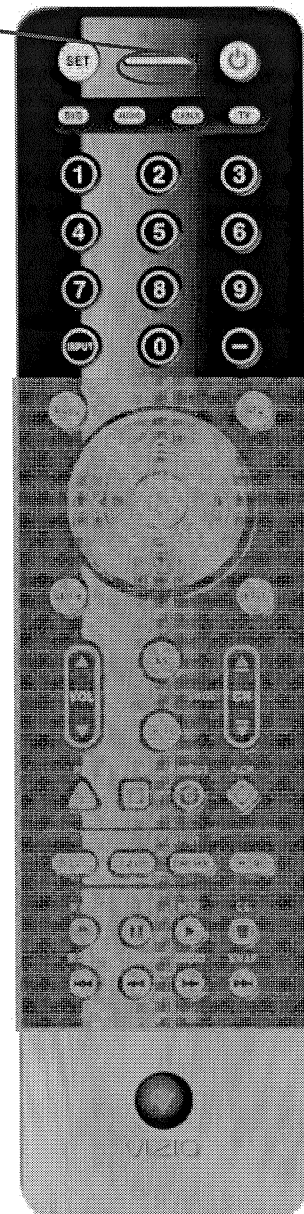




MENU — Use this button for the On-Screen Display (OSD) menus.



 INFO — This button turns the image and system information display on or off.

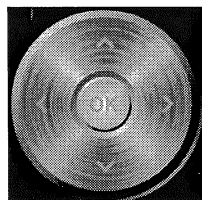

Use the Wheel to navigate the On-Screen Display (OSD) after it has been activated by pressing the **MENU** button.

Use the **OK** button to select your chosen option in the On-Screen Display (OSD) menus.



GUIDE — This button displays program information banner. Please see page 40 for details. Note: this button is only functional for DTV.



EXIT — This button exits the On-Screen Display (OSD) menus.



VOL (+ or -) — These buttons turn the volume up or down.



 
LAST — This button recalls the previously viewed channel.



MUTE — This button turns the sound on and off.



CH (+ or -) — These buttons change the channels up or down.

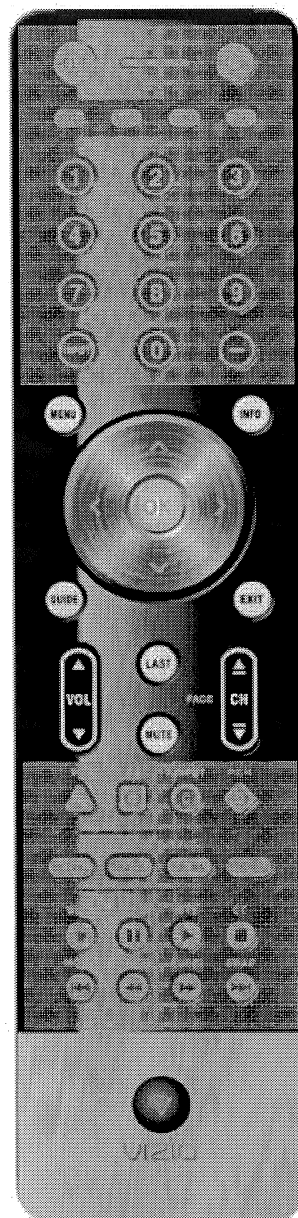



A/PIP — When CABLE is selected and the code to match your Cable Box has been entered, this button will operate the Cable Box the same as this button on your Cable Remote. When used with the TV, this button is used to select PIP (Picture-in-Picture), POP (Picture-on-Picture) and Off.



B/P.SIZE — When CABLE is selected and the code to match your Cable Box has been entered, this button will operate the Cable Box the same as this button on your Cable Remote. When used with the TV, this button is used to select PIP Size: Small, Medium or Large.



C/P.INPUT — When CABLE is selected and the code to match your Cable Box has been entered, this button will operate the Cable Box the same as this button on your Cable Remote. If you have a Satellite Box and the code to match your Satellite Box has been entered, this button will operate the Satellite Box the same as this button on your Satellite Remote. When used the TV, this button is used to select PIP Input. Please refer to page 61 for PIP Input combinations.



D/P.CH — When CABLE is selected and the code to match your Satellite Box has been entered, this button will operate the Satellite Box the same as this button on your Satellite Remote. When used with the TV, this button is used to select PIP channel when TV is selected as the PIP source.



TV — Press this button to select TV Tuner input.



AV — Repeated pressing of this button will switch between AV1 and AV2 inputs.



COMPONENT — Repeated pressing of this button will switch between Component 1 and Component 2 inputs.



HDMI — Repeated pressing of this button will cycle through HDMI 1, HDMI 2, HDMI 3, HDMI 4 and HDMI 5.



 
WIDE/RECORD — This button cycles through the available screen formats. The options are Wide, Normal, Zoom, Panoramic. *Note:* in RGB/PC and HDMI modes the options are 4:3 and 16:9. This button also starts recording when using the remote to control your Cable/Satellite Box or VCR.



SLEEP/PAUSE — This button allows the user to select the sleep options by adjusting the timer in 30-minute increments up to 120 minutes. This button also pauses playback when using the remote to control your Cable/Satellite Box DVR, VCR or DVD Player.



MTS/PLAY — This button will select the MTS options of Stereo, SAP or Mono in standard TV mode and alternate audio channels, where available, in DTV mode. This button also starts Playback when using the remote to control your Cable/Satellite Box DVR, VCR or DVD Player.

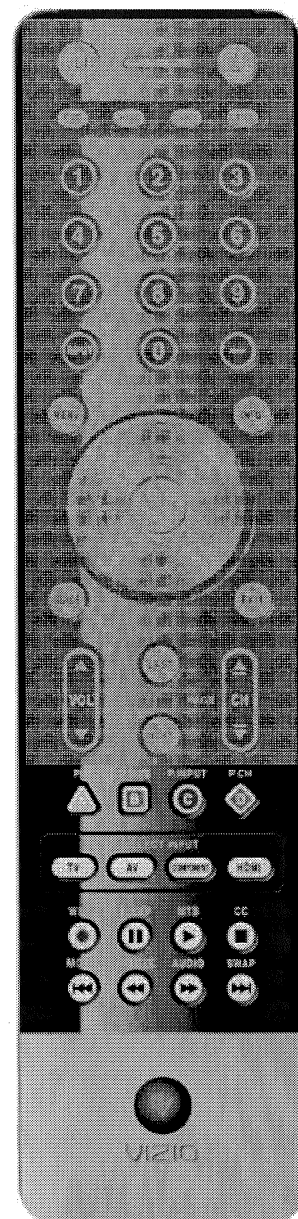



CC/STOP — This button will select the Closed Caption mode. The options are OFF, CC1, CC2, CC3, CC4, TEXT1, TEXT2, TEXT3 OR TEXT4. This button also Stops playback/recording when using the remote to control your Cable/Satellite Box DVR, VCR or DVD Player.



FREEZE/REV — Press this button to "Freeze-Frame" the current screen. Press this button again to display live video. This button also applies reverse play when using the remote to control your Cable/Satellite Box DVR, VCR or DVD Player.



MODE/LAST — Pressing this button repeatedly toggles the through the picture **presets**

This button also applies reverse play when using the remote to control your Cable/Satellite Box DVR, VCR or DVD Player



AUDIO/FF — Press this button to switch the audio from the main screen to the sub-screen while in PIP or POP mode. This button also applies fast play when using the remote to control your Cable/Satellite Box DVR, VCR or DVD Player.



SWAP/NEXT — While in PIP/POP mode used to swap the inputs from the main screen and the sub-screen. This button also skips to the next chapter when using the remote to control your Cable/Satellite Box DVR, or DVD Player or FF when using the remote to control your VCR.

Insertion of Batteries in the Remote Control

Insert two AA batteries into the remote control. Make sure that you match the (+) and (-) symbols on the batteries with the (+) and (-) symbols inside the battery compartment. Re-attach the battery cover.

Precautionary Tips for Inserting the Batteries:

 
Only use the specified AA batteries.

Do not mix new and old batteries. This may result in cracking or leakage that may pose a fire risk or lead to personal injury.

Inserting the batteries incorrectly may also result in cracking or leakage that may pose a fire risk or lead to personal injury.

Dispose of the batteries in accordance with local laws and regulations.

Keep the batteries away from children and pets.

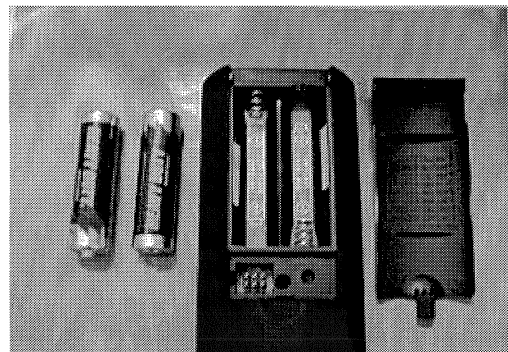

Remote Control Range

Point the remote control at the remote control sensor to transmit the commands.

Do not place any obstacles between the remote control and the receiver window.

The effective range of the remote control is approximately 30 feet (10 meters) from the front of the receiver window, 30° to the left and right, 20° up and down.

VIZIO Remote Control Precautions

The remote control should be kept dry and away from heat sources. Avoid humidity.

If the TV responds erratically to the remote control or does not respond at all, check the batteries. If the batteries are low or exhausted, replace them with fresh batteries.

When not using the remote control for a long period of time, remove the batteries.

Do not take the batteries apart, heat them, or throw them into a fire.

Do not subject the remote control to undue physical stress, such as striking or dropping it.

Do not attempt to clean the remote control with a volatile solvent. Wipe it with a clean, damp cloth.

Cleaning the Housing and Remote Control

1. Use the VIZIO soft cloth (included) for cleaning.
2. If the housing or remote control is seriously contaminated, use a soft cloth moistened with diluted neutral cleaner to clean the display. Wring water out of the cloth before cleaning to prevent water from penetrating into the housing. Wipe the display with a dry cloth after cleaning.



Chapter 5 Programming the VIZIO Universal Remote Control

You can program the remote control to work with up to four different pieces of equipment including your VIZIO HDTV. Listed below are the steps for programming your VCR, Cable Box and DVD Player.

Programming for VCR

1. Manually turn on the VCR.
2. Press the DVD button on the remote control. **NOTE:** If you do not intend to program the remote for a DVD player, use the DVD device button. If you plan to also program the remote for a DVD player, the AUDIO device button may be used as a substitute.
3. Press and hold the SET button until the LED LIGHT flashes twice.
4. Find the programming code for your VCR in the code list in the back of this book and enter it using the Number Buttons. If the code is accepted, the LED flashes twice after the last digit is entered.
If the LED does not flash twice, repeat Steps 2 through 4 with the next code listed for the component and manufacturer.
5. Point the remote control at the VCR and press the POWER button. The VCR will turn off.

Note:

- If your VCR does not respond, try all the codes for your VCR brand. If the codes do not work, or your brand is not listed, see "Searching for Component Codes."
- Sometimes a code listed will only include limited functions. Try other codes that may include more functionality.

Programming for Cable or Satellite Set-Top Box

1. Manually turn on the Cable Box.
2. Press the CABLE button on the remote control.
3. Press and hold the SET button until the LED LIGHT flashes twice.
4. Find the programming code for your Cable Box in the code list in the back of this book and enter it using the Number Buttons. If the code is accepted, the LED flashes twice after the last digit is entered.
If the LED does not flash twice, repeat Steps 2 through 4 with the next code listed for the component and manufacturer.
5. Point the remote control at the Cable Box and press the POWER button. The Cable Box will turn off.
If the LED does not flash twice, repeat Steps 2 through 4 with the next code listed for the component and manufacturer.

Note:

- If your Cable Set-Top Box does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, see "Searching for Component Codes."
- Sometimes a code listed will only include limited functions. Try other codes that may include more functionality.



Programming for DVD Player

1. Manually turn on the DVD Player.
2. Press the DVD button on the remote control.
3. Press and hold the SET button until the LED LIGHT flashes twice.
4. Find the programming code for your DVD player in the code list in the back of this book and enter it using the Number Buttons. If the code is accepted, the LED flashes twice after the last digit is entered.
If the LED does not flash twice, repeat Steps 2 through 4 with the next code listed for the component and manufacturer.
5. Point the remote control at the DVD Player and press the POWER button. The DVD Player will turn off.

Note:

- If your DVD player does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, see "Searching for Component Codes."
- Sometimes a code listed will only include limited functions. Try other codes that may include more functionality.

Programming for Audio Amp/Receiver

1. Manually turn on the Receiver.
2. Press the AUDIO button on the remote control.
3. Press and hold the SET button until the LED LIGHT flashes twice.
4. Find the programming code for your Receiver in the code list in the back of this book and enter it using the Number Buttons. If the code is accepted, the LED flashes twice after the last digit is entered.
5. If the LED does not flash twice, repeat Steps 2 through 4 with the next code listed for the component and manufacturer.
6. Point the remote control at the Receiver and press the POWER button. The Receiver will turn off.

Note:

- If your Receiver does not respond, try all the codes for your Receiver brand. If the codes do not work, or your brand is not listed, see "Searching for Component Codes."
- Sometimes a code listed will only include limited functions. Try other codes that may include more functionality.



Searching for Component Codes

If you cannot find the manufacturer in the component list or the program code does not work, you can use the remote control to search for the correct component code.

To search for a component code:

1. Turn on the component.
2. Press the matching component button on the remote control.
3. Press and hold the SET button until the LED flashes twice.
4. Press 9 9 1. The LED flashes twice.
5. Point the remote control at the component and then alternate between pressing the POWER button and the component button on the remote control until the component turns off. If the component still does not respond, clear the component button, then repeat the search procedure.

Using a Cable or Satellite Remote

Your VIZIO remote uses codes 000, 047, 050, 067, 329, 331 and 339 to work your LCD HDTV. To use a cable or satellite remote to work the LCD HDTV, refer to your cable or satellite remote user guide for more information on how to program the remote. If your cable or satellite remote uses a 5-digit code (like most Direct TV units), first try 11758 and then, if that does not work, 10178. If your cable or satellite remote uses a 4-digit code, try 1758 and then 0178 as an alternative. If your cable or satellite remote uses a 3-digit code (EchoStar or Dish Network for example), use code 627.

Note: Some buttons may not function as expected on your cable or satellite remote. Typically power, volume and mute will work.

