


A-S1000

Controls and functions

■ Remote control

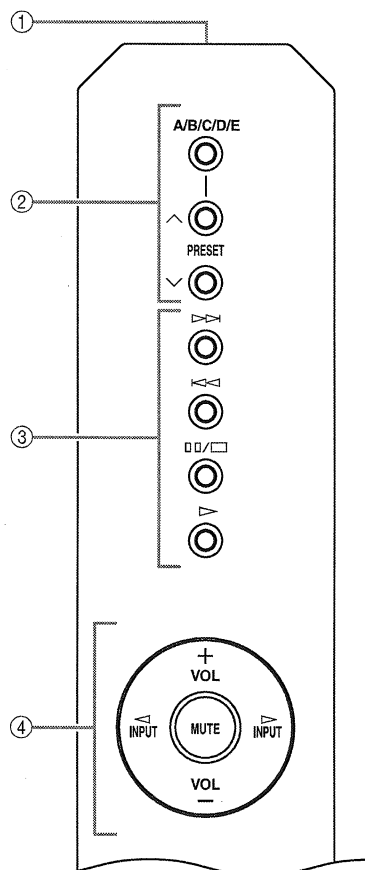

① Infrared signal transmitter

Outputs infrared control signals.

② Yamaha tuner control buttons

Controls functions of Yamaha tuner. Refer to the owner's manual of your tuner for details.

Note

Not all Yamaha tuners can be controlled by this remote control.

③ Yamaha CD player control buttons

Control various functions of Yamaha CD player. Refer to the owner's manual of your CD player for details.



Press the pause symbol once to pause and twice to stop playback.

Note

Not all Yamaha CD players can be controlled by this remote control.

④ Amplifier control buttons

INPUT ◀ / ▶

Selects the input source you want to listen to.

Notes

- When MAIN DIRECT is selected as the input source, no signals are output at the MONITOR and SPEAKER jacks.
- If headphones are plugged into the PHONES jack when MAIN DIRECT is selected as the input source, no audio is output at the SPEAKER jacks.

VOL +/-

Controls the volume level.

Note

The SLEEP control does not affect when you select MAIN DIRECT as the input source. Adjust the volume level using the volume control on the preamplifier connected to the SLEEP jacks.


MUTE

Reduces the current volume level by approximately 60 dB. Press again to restore the audio output to the previous volume level.



You can also press VOL +/- to resume the audio output.

■ Installing batteries in the remote control

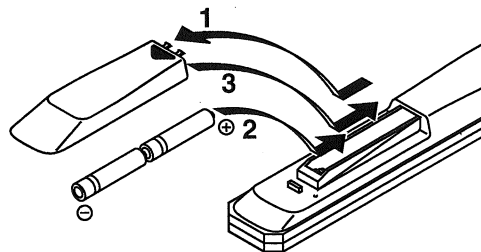

1 Press the ▼ part and slide the battery compartment cover off.

2 Insert the two supplied batteries (AA, R6, UM-3) according to the polarity markings (+ and -) on the inside of the battery compartment.

3 Slide the cover back until it snaps into place.