


## Your remote control handset is powered by two (2) AAA type batteries



• To insert batteries, turn the remote control over and remove the battery cover.

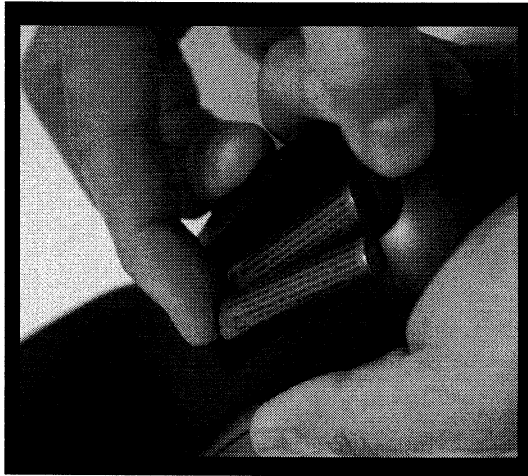


• Place two (2) AAA batteries into the compartment with correct polarity.



• Replace the cover.


- When pointed towards the television, the effective range is approximately 16 feet from the front of the IR receiver, 30° to the left and right, 20° up and down.
- To avoid damage from possible battery chemical leakage, remove the batteries if you do not plan to use the remote control handset for an extended period of time. Do not mix batteries of different age and/or type. Always discard used batteries safely.
- Do not expose remote control to liquids, direct sunlight or sources of excessive heat.
- The IR receiver will not work properly if TV is in direct sunlight, the remote control is pointed off-axis or an object is in the IR path.

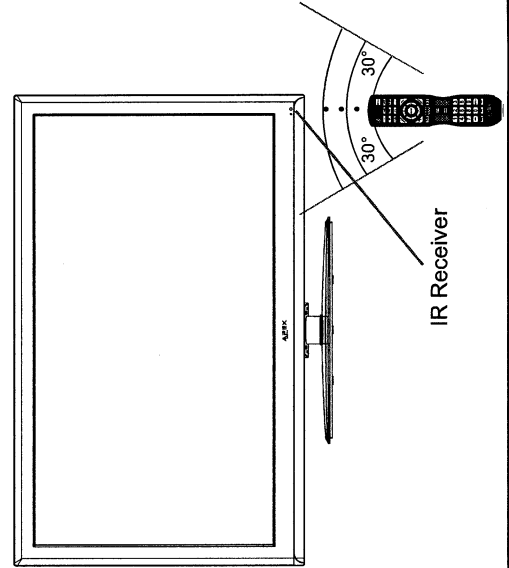

**NOTE: Improper use of batteries can result in a chemical leakage or explosion.**

## Functions can be controlled using the remote control handset

1. **Power** – Turn the LCD display ON or OFF (Standby).
2. **Display** – Provides program information currently viewed.
3. **TV** – Direct access to the television tuner.
4. **HDMI** – Press repeatedly to select HDMI 1, HDMI 2, HDMI 3 inputs.
5. **COMP** – Press repeatedly to select Component 1, 2 inputs.
6. **AV** – Press repeatedly to select AV1, AV2, AV3, S-Video inputs.
7. **VGA** – Direct access to the VGA (PC) input; press again to return to the previously viewed input.
8. **CH LIST** – Press to display a list of channels saved in the TV tuner memory.
9. **Guide** – Press to review scheduled programming for the current channel viewed.
10. **FAV** – Press to display a list of favorite TV channels you have added. (pg. 26)
11. **Freeze** – Pause and still-frame the current image on the display. Press again for live TV.
12. **Picture** – Select from various preset picture modes: Dynamic > Standard > Movie > Personal. (pg. 18)
13. **Temp** – Select the Color Temperature COOL > NORMAL > WARM. (pg. 18)
14. **▼▲▶Arrows/Enter** – Navigate menus to make selections. Press ENTER to confirm.
15. **Exit** – Press to exit a menu that is displayed.
16. **Return** – Press to return to the previous menu displayed.
17. **Sleep** – Press to activate the Sleep function to turn off the TV automatically; 5 Min > 10 Min > 15 Min > 30 Min > 45 Min > 60 Min > 90 Min > 120 Min > 180 Min > 240 Min > OFF.
18. **Menu** – Press to display the Main menu.
19. **Zoom** – Select viewable display options: Normal > Wide > Zoom > Cinema. (pg. 27)
20. **Volume (+/-)** – Adjust volume up (+) or volume down (-).
21. **Last** – Press to select between the current and previously viewed TV channel.
22. **Mute** – Press to temporarily turn sound off. Press again to resume.
23. **Channel – ▲ / ▼** scan channels up (▲) or channels down (▼).
24. **Numbers / Dash** – Select desired TV channel directly. For example: to select digital channel four, press “4” “.” “1” (4-1).
25. **Input** – Press to display all input sources on screen. (pgs. 9-14)
26. **Audio** – Select from various presets sound modes: PERSONAL > STANDARD > MUSIC > MOVIE (pg. 19)
27. **MTS** – Press to select a program's second audio channel (if available). (pg. 19)
28. **CCD** – Select closed caption subtitles (if available) OFF > ON. (pg. 22)

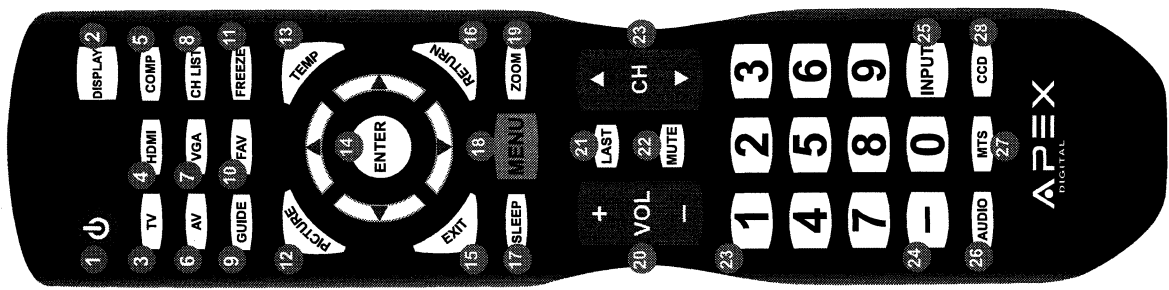

**NOTE: When using the remote control, point it directly at the TV.**