REMOTE CONTROL

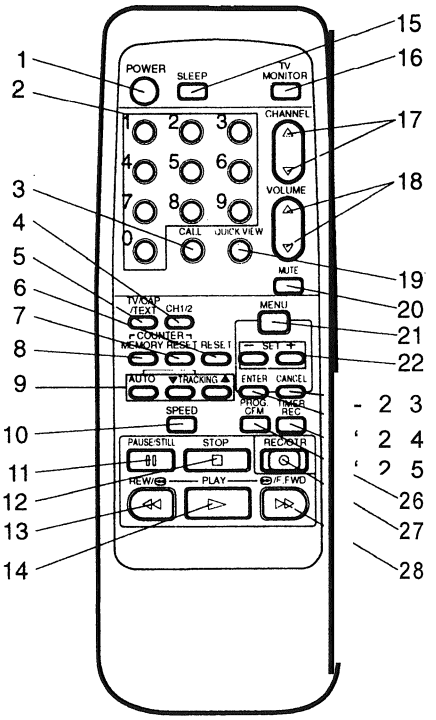

DESCRIPTION OF CONTROLS

1. **POWER Button -** Press to turn the TV/VCR on. Press again to turn the TV/VCR off.
2. **Direct Channel Selection Buttons (O-9)** -Allows direct access to any channel.
3. **CALL Button -** Displays the present time/day of the week, channel, counter, speed selection (and VCR mode if VCR is playing) on the TV screen.
4. **CH. 1/2 Button -** Switches between Channel 1 and Channel 2 in the closed caption mode.
5. **TV/CAP/TEXT Button -** Switches between Caption, Text and TV modes for Closed-Captioned programs.
6. **RESET Button -** Press to reset the On-Screen picture adjustments to their factory preset positions.
7. **COUNTER RESET Button -** Used to reset the counter to 00:00:00.
8. **COUNTER MEMORY Button -** Used to stop the tape when the counter reaches 00:00:00 (00 Hours, 00 Minutes, 00 Seconds).
9. **Digital AUTO TRACKING Buttons** -Allows automatic or manual adjustment of tracking to minimize picture noise during playback.
10. **Tape SPEED SP/LP/SLP Selector Button -** Sets the tape speed for recording.
11. **PAUSE/STILL Button -** During recording, this button temporarily stops the tape. During playback, it stops the tape and displays a still image on the TV screen.
12. **STOP Button -** Press once to stop the tape.
13. **REW (Rewind) Button -** In the Stop mode, this button rapidly winds the tape backwards. In the Play mode, this button activates reverse search.
14. **PLAY Button -** Press to play a prerecorded tape.
15. **SLEEP Button -** Sets the TV to turn off automatically after up to 120 minutes.
16. **TV MONITOR Button -** Used to temporarily view a TV channel selected on the VCR while in the playback mode.
17. **CHANNEL Up/Down Buttons -** Press the Up button to change to a higher numbered channel set into memory. Press the Down button to change to a lower numbered channel set into memory.
18. **VOLUME Up/Down Buttons -** Press the Up button to increase, or the Down button to decrease the volume level.
19. **QUICK VIEW Button -** Switches between the present channel and the last channel selected.
20. **MUTE Button -** Press to turn off the sound. Press again to turn the sound back on.
21. **MENU Button -** Press to display the On-Screen menu function.
22. **SET UP/DOWN Buttons -** Used to set the clock, timer recording, auto repeat, channel set, picture adjustment and language.
23. **CANCEL Button -** Used to clear the selected timer recording program.
24. **ENTER Button -** Use to enter information for timer recording and clock setting.
25. **TIMER REC Button -** Used to set the TV/VCR to start recording at a preset time.
26. **PROG. CFM Button -** Press to confirm the programmed timer recording.
27. **REC/OTR Button -** Press once to start normal recording. Additional presses activate One-Touch Timer Recording.
28. **F.FWD (Fast Forward) Button -** In the Stop mode, this button rapidly winds the tape forward. In the Play mode, this button activates forward search.

REMOTE CONTROL

BATTERY INSTALLATION

1 Slide the battery compartment cover in the direction of the arrow.

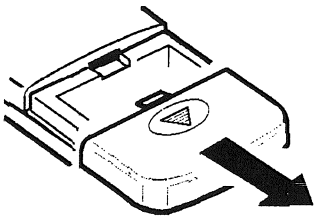

2 Install two "AAA" (penlight size) batteries, paying attention to the polarity diagram in the battery compartment.

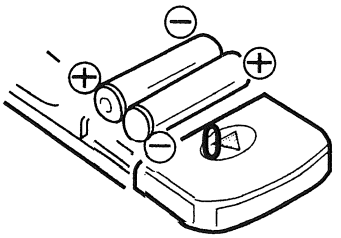

3 Replace the compartment cover.

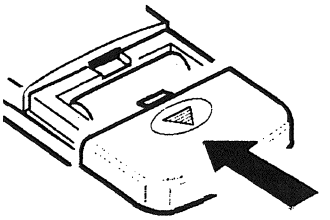

BATTERY PRECAUTIONS

The precautions below should be followed when using batteries in this device:

1. Use only the size and type of batteries specified.
2. Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. Reversed batteries may cause damage to the device.
3. Do not mix different types of batteries together (e.g. Alkaline and Carbon-zinc) or old batteries with fresh ones.
4. If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not try to recharge batteries not intended to be recharged; they can overheat and rupture. (Follow battery manufacturer's directions).

EFFECTIVE DISTANCE OF THE REMOTE CONTROL TRANSMITTER

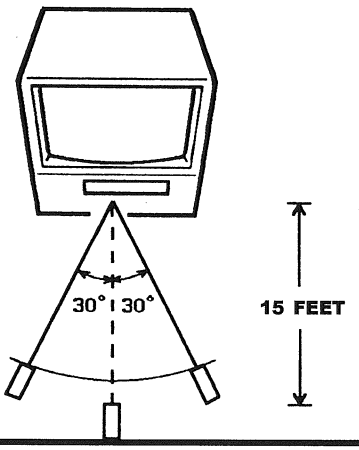

NOTE:
- When there is an obstacle between the TV/VCR and the transmitter, the transmitter may not operate.
- When direct sunlight, an incandescent lamp, fluorescent lamp or any other strong light shines on the REMOTE SENSOR of the TV/VCR, the remote operation may be unstable.