Getting Started

Logos of Discs that can be played

Blu-ray Disc	3D Blu-ray Disc	DTS-HD Master Audio	DivX
BD-LIVE	Dolby TrueHD	NTSC broadcast system in U.S.A, Canada, Korea, Japan	Java

Accessories

Check for the supplied accessories below.

Audio/Video cable (AK39-00148A)	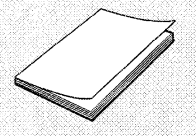 User Manual (AK68-01960U)	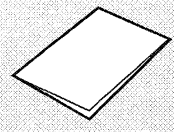 Quick Guide (AK68-01855W)	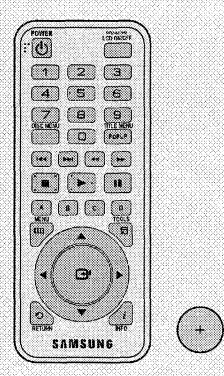 Remote Control with CR2032 Type Lithium-Ion Battery (AK59-00104U)
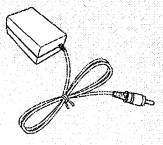 AC power Adapter (AK44-00012A)	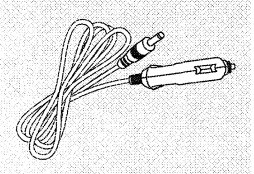 Car Power Cable (AK39-00150A)	 Battery Pack (AK43-01004A)	
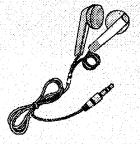 Earphones (AK30-00007A)	Y type Earphone Adapter (3722-003034)	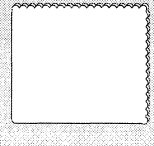 Soft Cloth (AH81-02286C or BN63-02368B)	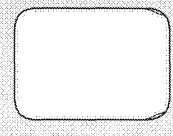 Carrying Case (AK63-00709A)

! CAUTION

- Operating the product while in the carrying case may increase internal temperature, which may damage the product. Do not turn on or operate the product while covered in the carrying case.

Removing the battery pack

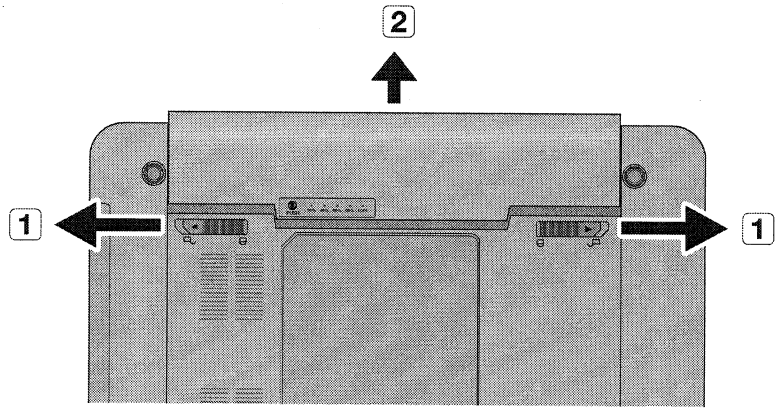

1. Slide the Battery Pack Release Switch in the direction of the arrow.
2. Pull the Battery Pack out.

Remote Control

Tour of the Remote Control

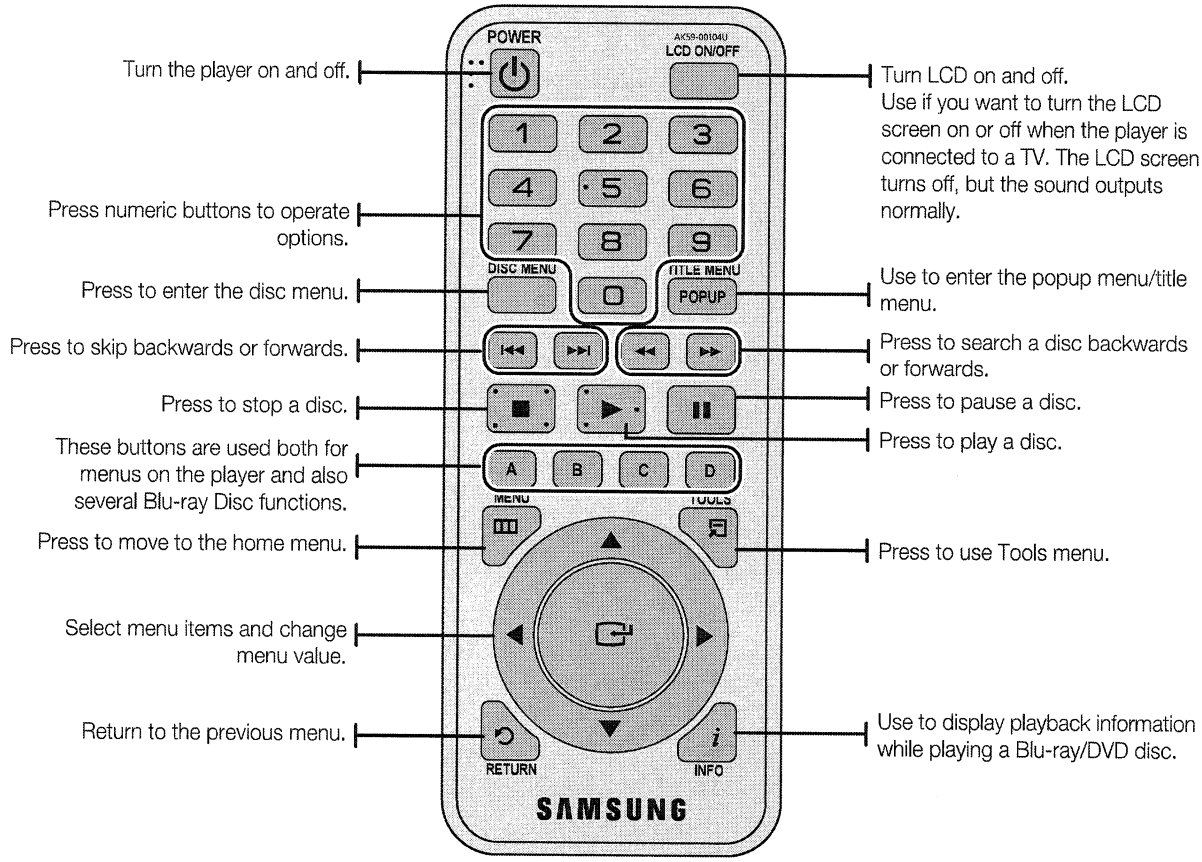

Getting Started

Installing the battery into the remote

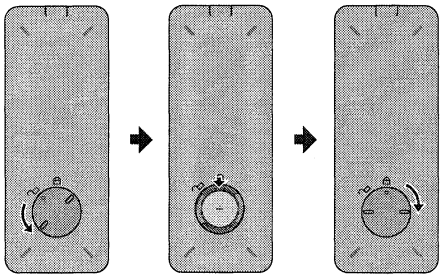

1. Turn the lithium battery's cover counterclockwise, and then remove.
2. Place the lithium battery in the battery compartment plus (+) side facing up. Replace the cover, and then turn it clockwise.
   - Match the polarities (+ and -) on the battery with the marks in the battery compartment. If the battery is inserted in the wrong direction, your remote control will not work correctly.

NOTE

- If the remote does not operate properly :
  - Check the polarity +/– of the battery.
  - Check if the battery is drained.
  - Check if the remote sensor is blocked by obstacles.
  - Check if there is any fluorescent lighting nearby.
  - It may be difficult to operate the remote control unit if the remote control sensor on the Blu-ray player is exposed to direct sunlight or strong artificial light. Operate the remote away from such light sources.
  - After battery replacement, your remote control unit may not work. If this occurs, remove the battery and re-insert.
  - Remove the battery when you are not planning to use the remote control for a long period of time.

! CAUTION

- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type

Using the AC adapter

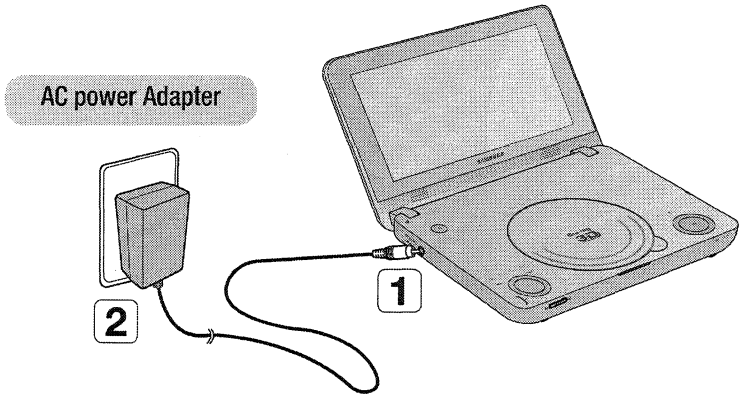

1. Connect the jack of the AC power adapter to the DC IN jack.
2. Plug the other end of the AC power adapter into an AC outlet.

! CAUTION

- Be sure to use the supplied AC adapter. Using a different type of adapter may cause a malfunction or damage to the product.
- When the AC adapter is used for prolonged periods of time, the adapter may heat up. This is normal and is not a cause for concern.
- When not using the adapter, unplug it from the wall outlet.
- Keep the AC adapter free from moisture, cold, and dust. Otherwise, there is a risk of fire or electric shock..
- Be sure to unwind the AC power adapter cable before using, as electromagnetic interference may cause problems with other devices.

Listening to Music

Buttons on the Remote Control used for Music Playback

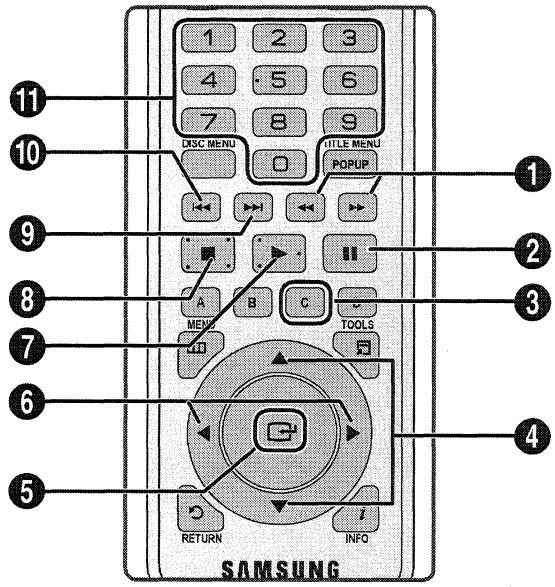

❶	**SEARCH** buttons : Fast Play. (Audio CD (CD-DA) only)
❷	**PAUSE** button : Pauses playback.
❸	**YELLOW (C)** button : Select or deselect a track in the music list.
❹	▲▼ buttons : Selects a track in the Music List or Playlist.
❺	**ENTER** button : Plays and pauses the selected track.
❻	◄► buttons : Jump Play. (except for the Audio CD (CD-DA))
❼	**PLAY** button : Plays the currently selected track.
❽	**STOP** button : Stops a track.
❾	**SKIP** button : During playback, moves to the next page in the Music List or moves to the next track in the Playlist.
❿	**SKIP** button : During playback, moves to the previous page in the Music List or moves to the previous track in the Playlist. If you press this button after three seconds of playback in the Playlist, the current track is replayed from the beginning. But, if you press this button within three seconds after playback starts in the Playlist, the previous track is played.
⓫	**NUMBER** buttons : During the Playlist playback, press the desired track number. The selected track is played.

Adjusting the volume using the volume control on the player

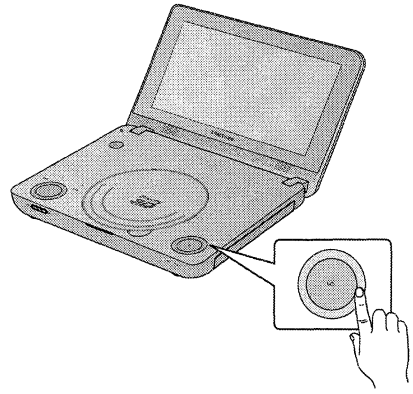

- Touch anywhere on the outer circle of the volume control with a finger tip and, keeping in contact with the circle:
  - Move your finger to the left (counterclockwise) or right (clockwise) at least 90 degrees to change volume. If you don't move your finger at least 90 degrees, the volume may not change.
- If you want adjust volume by one step (+1 or -1), move your finger about a quarter-circle.
- Moving left (counterclockwise) reduces the volume and moving right (clockwise) increases the volume.

NOTE

- Touch buttons may not function if you use a fingernail or other instruments such as a ballpoint pen. Please only use your finger tip.
- You can adjust the volume on the player only. The remote has no volume control.
- The speaker volume and the earphone volume are controlled separately.