Getting Started

Supported DivX subtitle file formats

*.ttxt, *.smi, *.srt, *.sub, *.txt

Music File Support

File Extension	Container	Audio Codec	Support Range
*.mp3	MP3	MP3	-
*.wma	WMA	WMA	Compliant with WMA version 10 * Sampling rates (in kHz) - 8, 11, 16, 22, 32, 44.1, 48 * Bit rates - All bit-rates in the range 5kbps to 384kbps

Logos of Discs the player can play

Blu-ray Disc	3D Blu-ray Disc	DTS-HD Master Audio	DivX
BD-LIVE	Dolby TrueHD	NTSC broadcast system in U.S.A, Canada, Korea, Japan	Java

Accessories

Check for the supplied accessories below.

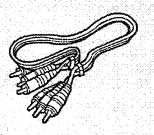	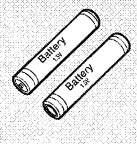	
Audio/Video cable (AC39-00073A)	Batteries for Remote Control (AAA Size) (AC43-12002H)	Remote Control (AK59-00122A)
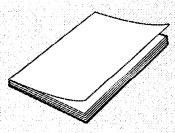	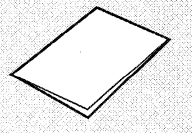	
User Manual (AK68-02026A)	Quick Guide (AK68-01996D)	

Tour of the Remote Control

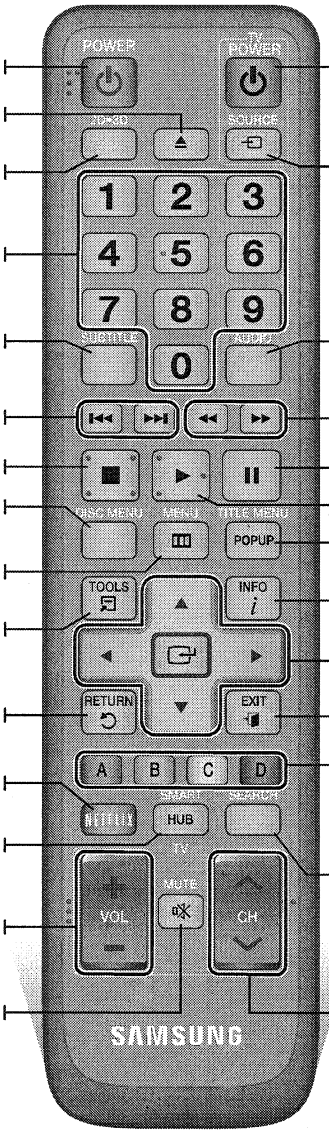

Turn the player on and off.

Press to eject a disc.

Press this when you want to use 3D function.

Press numeric buttons to operate options.

Press to switch the Blu-ray Disc/DVD's subtitle language.

Press to skip backwards or forwards.

Press to stop a disc.

Use to enter the disc menu.

Press to move to the home menu.

Press to use Tools menu.

Return to the previous menu.

Press to use Netflix.

Press to use Smart Hub.

TV volume adjustment.

Mutes the speakers of your TV.

Turn the TV on and off.
(To operate your TV, please refer to page 20)

After setup, allows you to set the input source on your TV.

Use to access various audio functions on a disc (Blu-ray Disc/DVD).

Press to search a disc backwards or forwards.

Press to pause a disc.

Press to play a disc.

Use to enter the popup menu/title menu.

Use to display the playback information during playing a Blu-ray Disc/DVDs.

Use to select menu items and change menu value.

Press to exit the menu.

These buttons are used both for menus on the player and also several Blu-ray Disc functions.

Press to search contents.

Use to select a TV channel.

Installing batteries

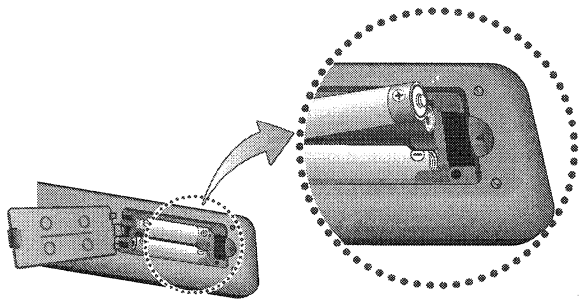

NOTE

- If the remote does not operate properly:
  - Check the polarity +/– of the batteries.
  - Check if the batteries are drained.
  - Check if the remote sensor is blocked by obstacles.
  - Check if there is any fluorescent lighting nearby.

! CAUTION

- Dispose of batteries according to local environmental regulations. Do not put them in the household trash.

Setting the Remote Control to Operate Your TV

You can control certain functions of your TV with this remote control.

Button	Function
TV POWER	Used to switch the television on and off.
TV SOURCE	Used to select an external source connected to the TV.
TV VOL (+/–)	Used to adjust the volume of the television.
TV CH (∧/∨)	Used to select the desired channel.
TV MUTE	Used to toggle the sound on and off.

✎ **NOTE**

- The functions listed above will not necessarily work on all televisions. If you encounter problems, use the TV remote control.

To determine whether your television is compatible, follow the instructions below.

1. Switch your television on.
2. Point the remote control towards the television.
3. Press and hold the **TV POWER** button, and then enter the two-figure code in the table to the right that corresponds to the brand of your television by pressing the appropriate number buttons.
   If your television is compatible with the remote control, it will switch off.
   The remote is now programmed to operate the TV.

✎ **NOTE**

- If several codes are listed for your television brand, try each one in turn until you find one that works.
- If you replace the remote control's batteries, you must set the brand code again.

TV Control Codes

Brand	Code
SAMSUNG	TV POWER+01, +02, +03, +04, +05, +06, +07, +08, +09
AIWA	TV POWER+82
ANAM	TV POWER+10, +11, +12, +13, +14, +15, +16, +17, +18
BANG & OLUFSEN	TV POWER+57
BLAUPUNKT	TV POWER+71
BRANDT	TV POWER+73
BRIONVEGA	TV POWER+57
CGE	TV POWER+52
CONTINENTAL EDISON	TV POWER+75
DAEWOO	TV POWER+19, +20, +23, +24, +25, +26, +27, +28, +29, +30, +31, +32, +33, +34
EMERSON	TV POWER+64
FERGUSON	TV POWER+73
FINLUX	TV POWER+06, +49, +57
FORMENTI	TV POWER+57
FUJITSU	TV POWER+84
GRADIENTE	TV POWER+70
GRUNDIG	TV POWER+49, +52, +71
HITACHI	TV POWER+60, +72, +73, +75
IMPERIAL	TV POWER+52
JVC	TV POWER+61, +79
LG	TV POWER+06, +19, +20, +21, +22, +78
LOEWE	TV POWER+06, +69
LOEWE OPTA	TV POWER+06, +57
MAGNAVOX	TV POWER+40
METZ	TV POWER+57
MITSUBISHI	TV POWER+06, +48, +62, +65
MIVAR	TV POWER+52, +77
NEC	TV POWER+83
NEWSAN	TV POWER+68

Brand	Code
NOBLEX	TV POWER+66
NOKIA	TV POWER+74
NORDMENDE	TV POWER+72, +73, +75
PANASONIC	TV POWER+53, +54, +74, +75
PHILIPS	TV POWER+06, +55, +56, +57
PHONOLA	TV POWER+06, +56, +57
PIONEER	TV POWER+58, +59, +73, +74
RADIOLA	TV POWER+06, +56
RADIOMARELLI	TV POWER+57
RCA	TV POWER+45, +46
REX	TV POWER+74
SABA	TV POWER+57, +72, +73, +74, +75
SALORA	TV POWER+74
SANYO	TV POWER+41, +42, +43, +44, +48
SCHNEIDER	TV POWER+06
SELECO	TV POWER+74
SHARP	TV POWER+36, +37, +38, +39, +48
SIEMENS	TV POWER+71
SINGER	TV POWER+57
SINUDYNE	TV POWER+57
SONY	TV POWER+35, +48
TELEAVA	TV POWER+73
TELEFUNKEN	TV POWER+67, +73, +75, +76
THOMSON	TV POWER+72, +73, +75
THOMSON ASIA	TV POWER+80, +81
TOSHIBA	TV POWER+47, +48, +49, +50, +51, +52
WEGA	TV POWER+57
YOKO	TV POWER+06
ZENITH	TV POWER+63