Getting Started

Logos of Discs that can be played

Blu-ray Disc	DTS-HD Master Audio	DivX	BD-LIVE
Dolby TrueHD	NTSC broadcast system in U.S.A, Canada, Korea, Japan	Java	

Accessories

Check for the supplied accessories below.

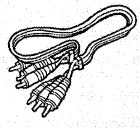	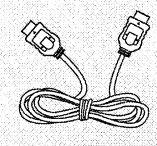	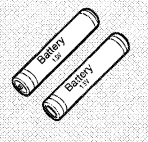
Audio/Video cable (AC39-00073A)	HDMI cable (BD-C5500C only) (MF39-00299A)	Batteries for Remote Control (AAA Size) (AC43-12002H)
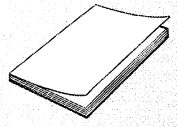	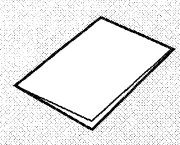	
User Manual (AK68-01854A)	Quick Guide (AK68-01855A)	Remote Control (AK59-00104R)

Getting Started

Remote Control

Tour of the Remote Control

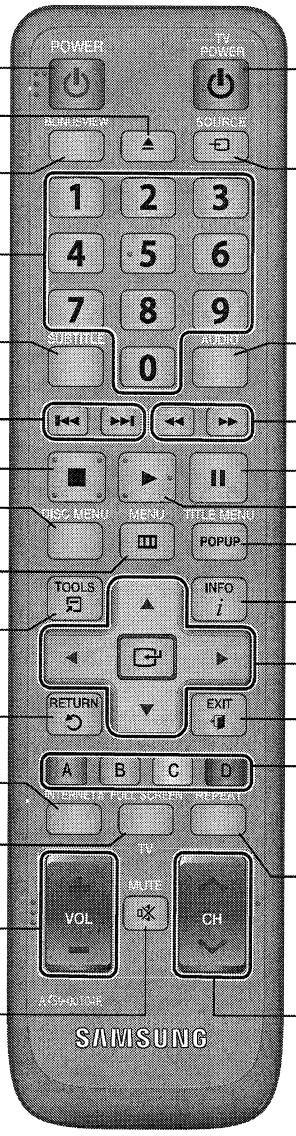

Turn the player on and off.

To open and close the disc tray.

Press this to use Bonusview function.

Press numeric buttons to operate options.

Press this to switch the Blu-ray Disc/DVD's subtitle language.

Press to skip backwards or forwards.

Press to stop a disc.

Use this to enter the disc menu.

Press this to move to the home menu.

Press this to use Tools menu.

Return to the previous menu.

Press this to link to various Internet@TV services.

Press this to see the full screen on a TV.

TV volume adjustment.

Mutes the speakers of your TV.

Turn the TV on and off.
(To operate your TV, please refer to page 19)

After setup, allows you to set the input source on your TV.

Use this to access various audio functions on a disc (Blu-ray Disc/DVD).

Press to search a disc backwards or forwards.

Press to pause a disc.

Press to play a disc.

Use this to enter the popup menu/title menu.

Use this to display the playback information during playing a Blu-ray/DVD disc.

Select menu items and change menu value.

Press this to exit the menu.

These buttons are used both for menus on the player and also several Blu-ray Disc functions.

Allows you to repeat a title, chapter, track or disc.

Use this to select a TV program.

Installing batteries

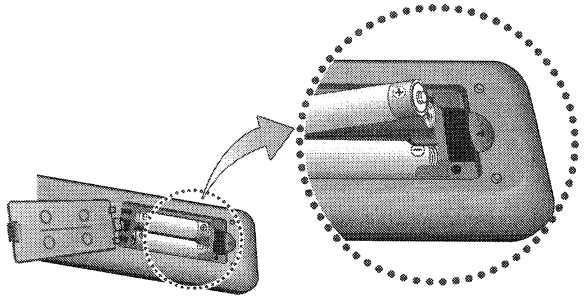

NOTE

- If the remote does not operate properly :
  - Check the polarity +/– of the batteries (Dry-Cell)
  - Check if the batteries are drained.
  - Check if remote sensor is blocked by obstacles.
  - Check if there is any fluorescent lighting nearby.

Setting the Remote Control

You can control certain functions of your TV with this remote control.

Button	Function
TV POWER	Used to switch the television on and off.
TV SOURCE	Used to select an external source connected to the TV.
TV VOL (+/–)	Used to adjust the volume of the television.
TV CH (∧/∨)	Used to select the desired channel.
TV MUTE	Used to toggle the sound on and off.

✎ **NOTE**

- The functions listed above will not necessarily work on all televisions. If you encounter problems, operate the television directly.

To determine whether your television is compatible, follow the instructions below.

1. Switch your television on.
2. Point the remote control towards the television.
3. Press and hold the **TV POWER** button and enter the two-figure code corresponding to the brand of your television by pressing the appropriate number buttons.
   If your television is compatible with the remote control, it will switch off.
   It is now programmed to operate with the remote control.

✎ **NOTE**

- If several codes are listed for your television brand, try each one in turn until you find one that works.
- If you replace the remote control's batteries, you must set the brand code again.

Controllable TV Codes

Brand	Code
SAMSUNG	TV POWER+01, +02, +03, +04, +05, +06, +07, +08, +09
AIWA	TV POWER+82
ANAM	TV POWER+10, +11, +12, +13, +14, +15, +16, +17, +18
BANG & OLUFSEN	TV POWER+57
BLAUPUNKT	TV POWER+71
BRANDT	TV POWER+73
BRIONVEGA	TV POWER+57
CGE	TV POWER+52
CONTINENTAL EDISON	TV POWER+75
DAEWOO	TV POWER+19, +20, +23, +24, +25, +26, +27, +28, +29, +30, +31, +32, +33, +34
EMERSON	TV POWER+64
FERGUSON	TV POWER+73
FINLUX	TV POWER+06, +49, +57
FORMENTI	TV POWER+57
FUJITSU	TV POWER+84
GRADIENTE	TV POWER+70
GRUNDIG	TV POWER+49, +52, +71
HITACHI	TV POWER+60, +72, +73, +75
IMPERIAL	TV POWER+52
JVC	TV POWER+61, +79
LG	TV POWER+06, +19, +20, +21, +22, +78
LOEWE	TV POWER+06, +69
LOEWE OPTA	TV POWER+06, +57
MAGNAVOX	TV POWER+40
METZ	TV POWER+57
MITSUBISHI	TV POWER+06, +48, +62, +65
MIVAR	TV POWER+52, +77
NEC	TV POWER+83
NEWSAN	TV POWER+68

Brand	Code
NOBLEX	TV POWER+66
NOKIA	TV POWER+74
NORDMENDE	TV POWER+72, +73, +75
PANASONIC	TV POWER+53, +54, +74, +75
PHILIPS	TV POWER+06, +55, +56, +57
PHONOLA	TV POWER+06, +56, +57
PIONEER	TV POWER+58, +59, +73, +74
RADIOLA	TV POWER+06, +56
RADIOMARELLI	TV POWER+57
RCA	TV POWER+45, +46
REX	TV POWER+74
SABA	TV POWER+57, +72, +73, +74, +75
SALORA	TV POWER+74
SANYO	TV POWER+41, +42, +43, +44, +48
SCHNEIDER	TV POWER+06
SELECO	TV POWER+74
SHARP	TV POWER+36, +37, +38, +39, +48
SIEMENS	TV POWER+71
SINGER	TV POWER+57
SINUDYNE	TV POWER+57
SONY	TV POWER+35, +48
TELEAVA	TV POWER+73
TELEFUNKEN	TV POWER+67, +73, +75, +76
THOMSON	TV POWER+72, +73, +75
THOMSON ASIA	TV POWER+80, +81
TOSHIBA	TV POWER+47, +48, +49, +50, +51, +52
WEGA	TV POWER+57
YOKO	TV POWER+06
ZENITH	TV POWER+63