# REMOTE CONTROL

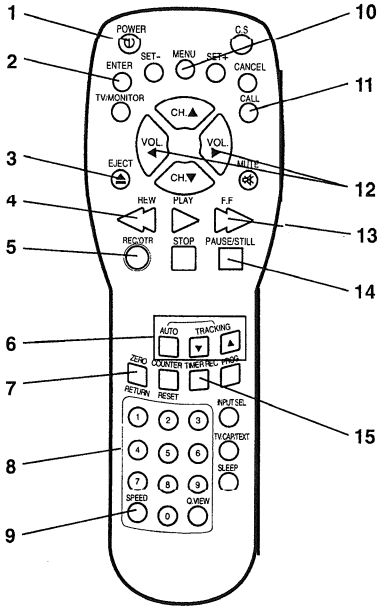


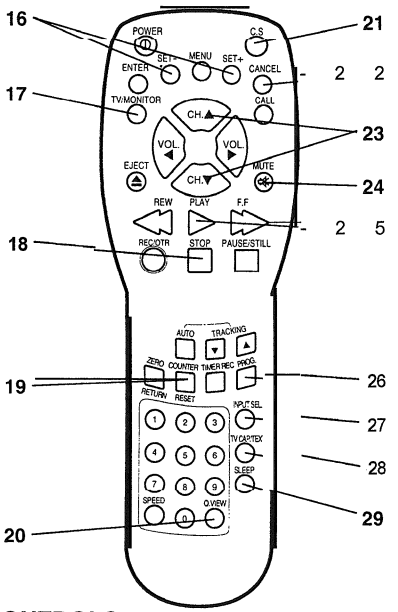


ENGLISH

## DESCRIPTION OF CONTROLS

1. **POWER Button -** Press to turn the TV/VCR on. Press again to turn the TV/VCR off.
2. **ENTER Button -** Press to enter or select information for On-Screen operations.
3. **EJECT Button -** Press to eject the tape.
4. **REW (Rewind) Button -** In the Stop mode, this button rapidly winds the tape backwards. In the Play mode, this button activates reverse search.
5. **REC/OTR Button -** Press once to start normal recording. Additional presses activate One-touch Timer Recording.
6. **Digital TRACKING Buttons** -Allows automatic or manual adjustment of tracking to minimize picture noise during playback.
7. **ZERO RETURN Button -** Use to stop the tape when the counter reaches 00:00:00.
8. **Direct Channel Selection Buttons** (O-9) -Allows direct access to any channel.
9. **SPEED Button -** Sets the tape speed for recording.,
10. **MENU Button -** Press to display the On-Screen menu function.
11. **CALL Button -** Displays the present time/day of the week, channel, counter, speed selection (and VCR mode if VCR is playing) on the TV screen.
12. **VOL.(Volume) ◀ / ▶ Buttons -** Press the ▶ button to increase, or the ◀ button to decrease the volume level.
13. **F.F (Fast Forward) Button -** In the Stop mode, this button rapidly winds the tape forward. In the Play mode, this button activates forward search.
14. **PAUSE/STILL Button -** During recording, this button temporarily stops the tape. During playback, it stops the tape and displays a still image on the TV screen.
15. **TIMER REC Button -** Used to set the TV/VCR to start recording at a preset time.
16. **SET + / – Buttons -** Used to set or adjust in the menu mode.
17. **TV/MONITOR Button -** Used to temporarily view a TV channel selected on the VCR while in the playback mode.
18. **STOP Button -** Press once to stop the tape.
19. **COUNTER RESET Button -** Used to reset the counter to oo:oo:oo.
20. **Q.VIEW Button -** Switches between the present channel and the last channel selected.
21. **C.S Button -** Press in the playback mode to search forward in 30 seconds increments to a maximum of 3 minutes.
22. **CANCEL Button -** Used to clear the selected program and to move the cursor backward.
23. **CH.(Channel) ▲ / ▼ Buttons -** Press the A button to change to a higher numbered channel set into memory. Press the ▼ button to change to a lower numbered channel set into memory.
24. **MUTE Button -** Press to turn off the sound. Press again to turn the sound back on.
25. **PLAY Button -** Press to play a prerecorded tape.
26. **PROG. Button -** Press to confirm the programmed timer recording and ON/OFF timer.
27. **INPUT SEL. Button -** Switches the program for viewing between the VCR and external input sources.
28. **TV/CAP/TEXT Button -** Switches between Caption, Text and TV modes for Closed-Captioned programs.
29. **SLEEP Button -** Sets the TV to turn off automatically after up to 120 minutes.

# REMOTE CONTROL

## BATTERY INSTALLATION

Slide the battery compartment cover.

Install two "AA" batteries (not supplied), paying attention to the polarity diagram in the battery compartment.

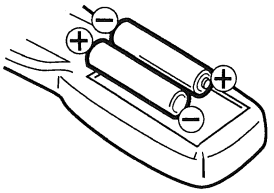

Replace the compartment cover.

## BATTERY PRECAUTIONS

The precautions below should be followed when using batteries in this device:

1 Use only the size and type of batteries specified

2 Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. Reversed batteries may cause damage to the device.

3 Do not mix different types of batteries together (e.g. Alkaline and Carbon-zinc) or old batteries with fresh ones.

4 If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.

5 Do not try to recharge batteries not intended to be recharged; they can overheat and rupture (Follow battery manufacturer's directions).

## EFFECTIVE DISTANCE OF THE REMOTE CONTROL

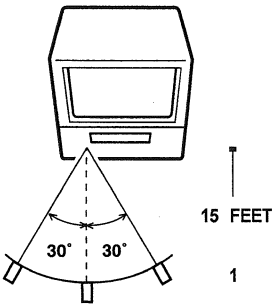


**NOTES:**
- When there is an obstacle between the TVA/CR and the remote control, the remote control may not operate.
- When direct sunlight, an incandescent lamp, fluorescent lamp or any other strong light shines on the Remote sensor of the TV/VCR, the remote operation may be unstable.

# POWER SOURCES

Use the AC polarized line cord provided for operation on AC. Insert the AC cord plug into a standard 120V 60Hz polarized AC outlet.

**NOTES:**
- Never connect the AC line cord plug to anything other than the specified voltage (120V 60Hz). Use the attached power cord only.
- If the polarized AC cord does not fit into a nonpolarized AC outlet, do not attempt to file or cut the blade. It is the user's responsibility to have an electrician replace the obsolete outlet.
- If you cause a static discharge when touching the unit, and the unit fails to function, simply unplug the unit from the wall outlet, wait one hour and plug it back in. The unit should return to normal operation.

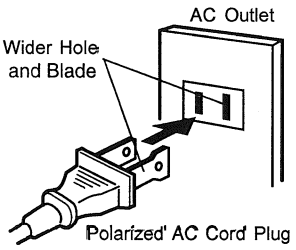


## TO USE DC POWER

By using the DC car cord supplied with the TV/VCR, you can operate this TV/VCR from a cigarette lighter socket in any car that utilizes a negative ground system.
The fused 12V DC car cord has been designed to power the set from the external DC power (12 volt negative ground) through the TV/VCR DC input jack.
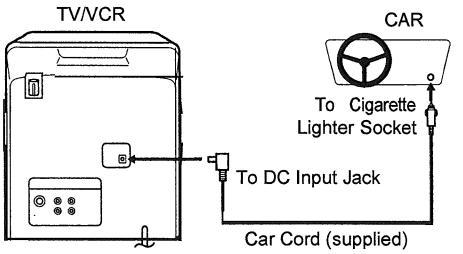
Connect the smaller plug on the end of the cord to the DC input jack on the rear of the TV/VCR, then insert the other end of the car cord into the cigarette lighter socket of your car. Make sure that the cord makes a firm connection.
It may be necessary to try several insertions, rotating the plug for proper electrical connection.