Getting Started

Music File Support

File Extension	Container	Audio Codec	Support Range
*.mp3	MP3	MP3	-
*.wma	WMA	WMA	Compliant with WMA version 10 * Sampling rates (in kHz) - 8, 11, 16, 22, 32, 44.1, 48 * Bit rates - All bit-rates in the range 5kbps to 384kbps

Logos of Discs the player can play

Blu-ray Disc

DTS-HD Master Audio

DivX

BD-LIVE

Dolby TrueHD

NTSC broadcast system in U.S.A, Canada, Korea, Japan

Java

Accessories

Check for the supplied accessories below.

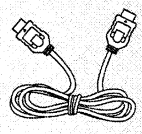

HDMI cable
(MF39-00299A)
(Only for BD-D5250C)

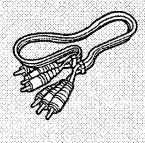

Audio/Video cable
(AC39-00073A)

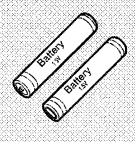

Batteries for Remote Control
(AAA Size)
(AC43-12002H)

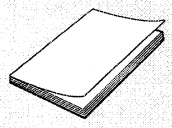

User Manual
(AK68-01984A)

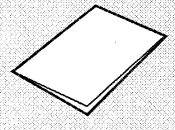

Quick Guide
(AK68-01985A)



Remote Control
(AK59-00113A)

Tour of the Remote Control

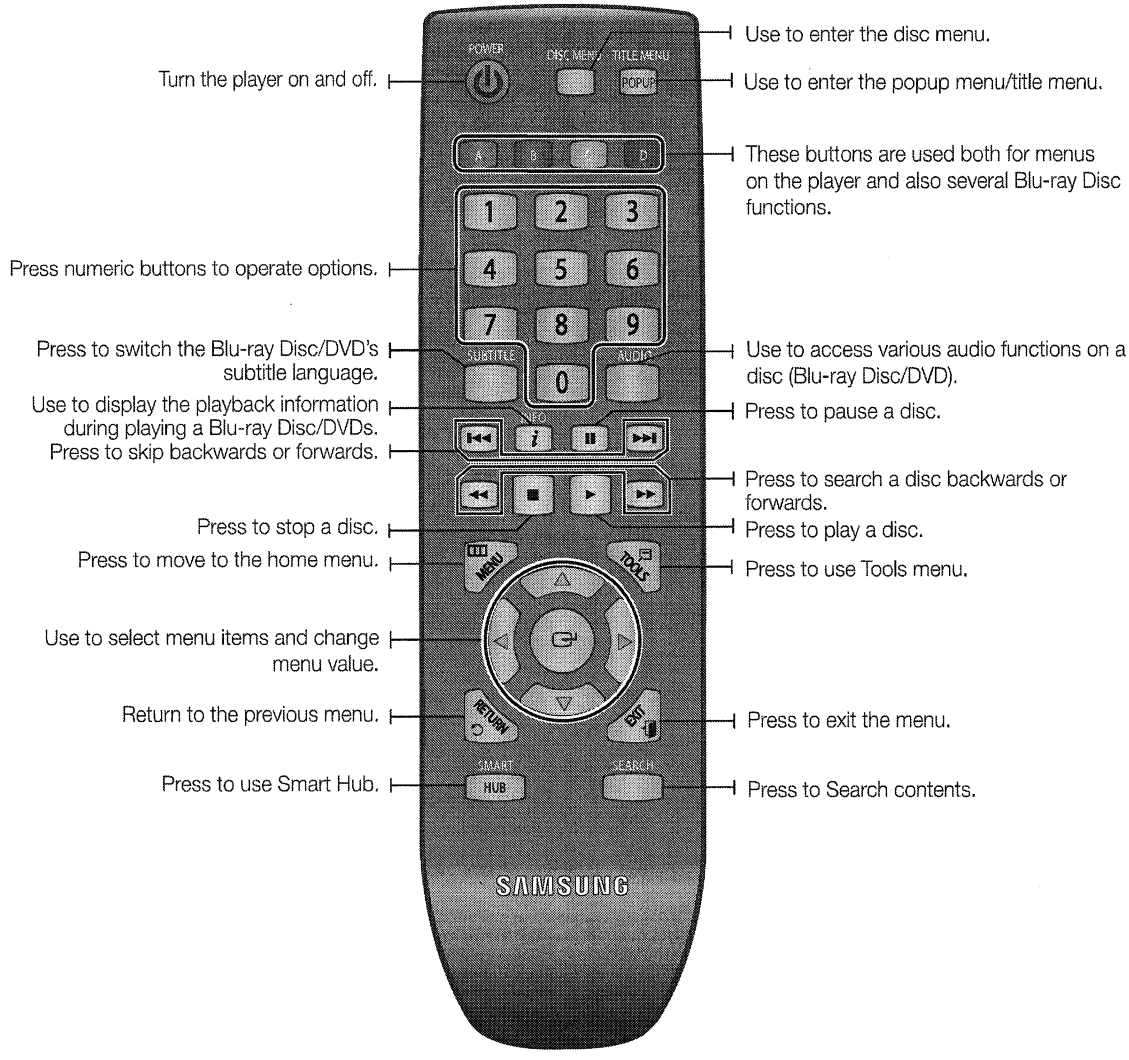

Installing batteries

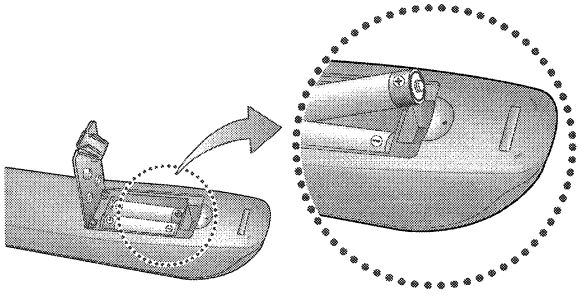

NOTE

- If the remote does not operate properly:
  - Check the polarity +/– of the batteries.
  - Check if the batteries are drained.
  - Check if the remote sensor is blocked by obstacles.
  - Check if there is any fluorescent lighting nearby.

! CAUTION

- Dispose of batteries according to local environmental regulations. Do not put them in the household trash.

General

Front Display

Change the brightness of the front panel.

- **Auto** : Dim during playback.
- **Dim** : Dim the display window.
- **Bright** : Brighten the display window.

Network Remote Control

The Network Remote Control function lets you control your Blu-ray Disc player from a remote device such as a smart phone through a wireless connection to your local area network.

To use the Network Remote Control function, follow these steps:

1. Select **On** in the Network Remote Control menu.
2. Install the Samsung network remote control application to control your player on your compatible portable device.
3. Make sure your portable device and your player are connected to the same wireless router.
4. Start the application on your portable device. The application should find your player and display it on a list.
5. Select the player.
6. If this is the first time you are using the function, it will ask you to allow or deny remote control of the player. Select Allow.
7. Follow the instructions that came with the application to control the player.

Support

Software Upgrade

The Software Upgrade menu allows you to upgrade the player's software for performance improvements or additional services. You can upgrade in four ways:

- By Internet
- By USB
- By Disc
- By Downloaded (File)

The four methods are explained below.

By Internet

To upgrade by Internet, follow these steps:

1. Select **By Internet**, and then press the **ENTER** button. The Connecting to Server message appears.
2. If there is a download available, the Download pop-up appears with a progress bar and the download starts.
3. When the download is complete, the Upgrade Query window appears with three choices: Upgrade Now, Upgrade Later, or Don't Upgrade.
4. If you select Upgrade Now, the player upgrades the software, turns off, and then turns on automatically.
5. If you do not make a selection in one minute or select Upgrade Later, the player stores the new upgrade software. You can upgrade the software later using the By Downloaded function.
6. If you select Don't Upgrade, the player cancels the upgrade.

✎ **NOTE**

- Your player must be connected to the Internet to use the By Internet function.
- The upgrade is complete when the player turns off, and then turns on again by itself.
- Never turn the player off or back on manually during the update process.

Buttons on the Remote Control used for Music Playback

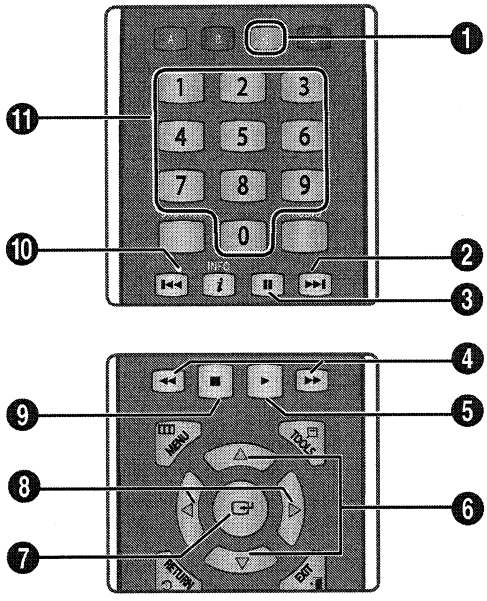

❶	**YELLOW (C)** button : Displays check box in the music list.
❷	**SKIP** button : During playback, moves to the next page in the Music List or moves to the next track in the Playlist.
❸	**PAUSE** button : Pauses playback.
❹	**SEARCH** buttons : Fast Play. (Audio CD (CD-DA) only)
❺	**PLAY** button : Plays the currently selected track.
❻	▲▼ buttons : Select a track in the Music List or Playlist.
❼	**ENTER** button : Plays the selected track.
❽	◄► buttons : Jump Play. (except for Audio CD (CD-DA))
❾	**STOP** button : Stops a track.
❿	**SKIP** button : During playback, moves to the previous page in the Music List or moves to the previous track in the Playlist. If you press this button after three seconds of playback in the Playlist, the current track is replayed from the beginning. But, if you press this button less than three seconds after playback starts in the Playlist, the previous track is played.
⓫	**NUMBER** buttons : During the Playlist playback, press the desired track number. The selected track is played.

Playing an Audio CD (CD-DA)/MP3

1. Insert an Audio CD (CD-DA) or an MP3 Disc into the disc tray.
   - For an Audio CD (CD-DA), the first track plays automatically.
   - For an MP3 disc, press the ▲▼ buttons to select **Music**, then press the **ENTER** button.

Audio CD (CD-DA)/MP3 Screen Elements

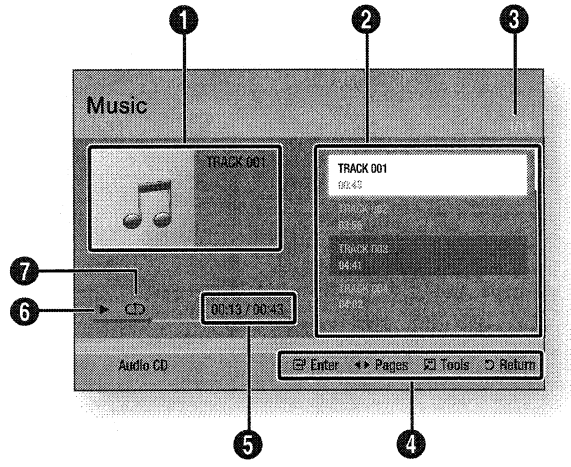

❶	Displays the music information.
❷	Displays the playlist.
❸	Display the current track/total tracks.
❹	Displays buttons available.