key features of your blu-ray disc player

WHAT'S INCLUDED

Check for the supplied accessories below.



Adapter
(BN44-00139A)



Adapter Cable
(3903-000085)

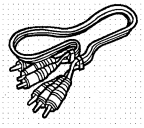

Composite (Video), Audio L/R Cable
(AC39-00073A)

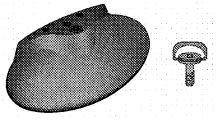

Assy Holder-Stand
(AK97-02476A)

Assy Bracket-Set & Bracket-Wall
(AK97-02475A)

Wireless LAN Adapter
(AK98-01080A)



Remote Control
(AK59-00104L)

Batteries for Remote Control (AAA Size)
(AC43-12002H)

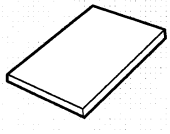

User Manual
(AK68-01799A)

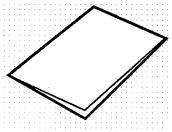

Quick Guide
(AK68-01800A)

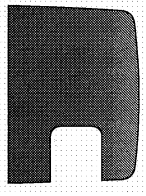

COVER-JACK
(AK96-01144A)

※ Screws for the bracket-wall are not included. Purchase screws appropriate for your type of wall.

TOUR OF THE REMOTE CONTROL

Installing batteries in the Remote Control

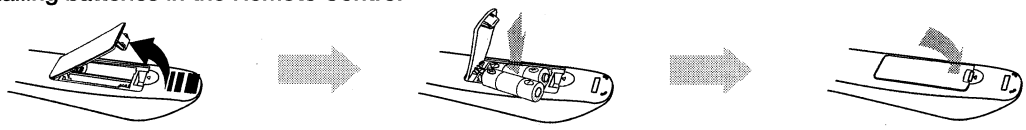

1. **Lift the cover at the back of the remote control upward as shown.**
2. **Install two AAA size batteries.**
   Make sure to match the "+" and "–" ends of the batteries with the diagram inside the compartment.
3. **Replace the cover.**
   Assuming typical TV usage, the batteries last for about one year.

EJECT Button
To open and close the disc tray.

POWER Button

SUBTITLE Button
Press this to switch the Blu-ray Disc/DVD's subtitle language.

AUDIO Button
Use this to access various audio functions on a disc (Blu-ray Disc/DVD).

NUMBER Buttons

CANCEL Button

BONUSVIEW Button
Use this to turn the BONUSVIEW function on or off with supported Blu-ray Discs.

REVERSE/FORWARD SKIP Buttons
Press to skip backwards or forwards.

STOP Button
Press to stop a disc.

TV VOL Button
TV volume adjustment

TV MUTE Button
Mutes the speakers of your TV.

MENU Button
Brings up the Blu-ray Disc Player's setup menu.

INFO Button
Displays current setting or disc status.

DISC MENU Button
Use this to enter the disc menu.

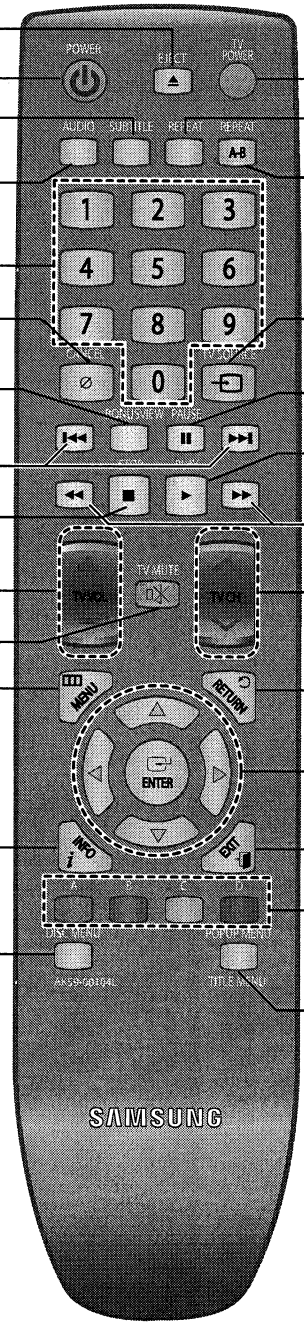

TV POWER Button

REPEAT Button
Allows you to repeat a title, chapter, track or disc.

REPEAT A-B Button
Allows you to repeat playback of a certain section.

TV SOURCE Button
After setup, allows you to set the input source on your TV.

PAUSE Button
Press to pause a disc.

PLAY Button
Press to play a disc.

REVERSE/FORWARD SEARCH Buttons
Press to search a disc backwards or forwards.

TV CH Button
Use this to select a TV program.

RETURN Button

ENTER/DIRECTION Buttons

EXIT Button

COLOR Buttons : RED(A), GREEN (B), YELLOW(C), BLUE(D)
Used to access special features on BD-J discs (disc dependent).

POPUP MENU/TITLE MENU Button
Use this to enter the popup menu/title menu.

SETTING THE REMOTE CONTROL

You can control certain functions of your TV with this remote control.

Control function buttons include : **TV POWER**, **TV CH ∧/∨**, **TV VOL +/–**, **TV MUTE**, **TV SOURCE** button.

To determine whether your television is compatible, follow the instructions below.

1. Switch your television on.
2. Point the remote control towards the television.
3. Press and hold the **TV POWER** button and enter the two-figure code corresponding to the brand of your television by pressing the appropriate number buttons. (see the next page for the code list).

   If your television is compatible with the remote control, it will switch off.
   It is now programmed to operate with the remote control.

- If several codes are indicated for your television brand, try each one in turn until you find one that works.
- If you replace the remote control's batteries, you must set the brand code again.

You can then control the television using the following buttons after pressing the TV button.

Button	Function
TV POWER	Used to switch the television on and off.
TV SOURCE	Used to select an external source.
TV VOL (+/–)	Used to adjust the volume of the television.
TV CH (∧/∨)	Used to select the desired channel.
TV MUTE	Used to toggle the sound on and off.

- The functions listed above will not necessarily work on all televisions. If you encounter problems, operate the television directly.

REGARDING THE BATTERY

If the remote does not operate properly:

- Check the polarity +/– of the batteries (Dry-Cell)
- Check if the batteries are drained.
- Check if remote sensor is blocked by obstacles.
- Check if there is any fluorescent lighting nearby.

Dispose of batteries according to local environmental regulations. Do not put them in the household trash.

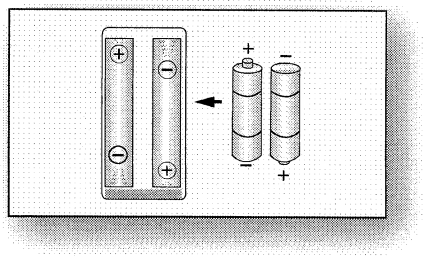

CONTROLLABLE TV CODES

Brand	Code
SAMSUNG	TV POWER+01, +02, +03, +04, +05, +06, +07, +08, +09
AIWA	TV POWER+82
ANAM	TV POWER+10, +11, +12, +13, +14, +15, +16, +17, +18
BANG & OLUFSEN	TV POWER+57
BLAUPUNKT	TV POWER+71
BRANDT	TV POWER+73
BRIONVEGA	TV POWER+57
CGE	TV POWER+52
CONTINENTAL EDISON	TV POWER+75
DAEWOO	TV POWER+19, +20, +23, +24, +25, +26, +27, +28, +29, +30, +31, +32, +33, +34
EMERSON	TV POWER+64
FERGUSON	TV POWER+73
FINLUX	TV POWER+06, +49, +57
FORMENTI	TV POWER+57
FUJITSU	TV POWER+84
GRADIENTE	TV POWER+70
GRUNDIG	TV POWER+49, +52, +71
HITACHI	TV POWER+60, +72, +73, +75
IMPERIAL	TV POWER+52
JVC	TV POWER+61, +79
LG	TV POWER+06, +19, +20, +21, +22, +78
LOEWE	TV POWER+06, +69
LOEWE OPTA	TV POWER+06, +57
MAGNAVOX	TV POWER+40
METZ	TV POWER+57
MITSUBISHI	TV POWER+06, +48, +62, +65
MIVAR	TV POWER+52, +77
NEC	TV POWER+83
NEWSAN	TV POWER+68
NOBLEX	TV POWER+66
NOKIA	TV POWER+74
NORDMENDE	TV POWER+72, +73, +75
PANASONIC	TV POWER+53, +54, +74, +75
PHILIPS	TV POWER+06, +55, +56, +57
PHONOLA	TV POWER+06, +56, +57
PIONEER	TV POWER+58, +59, +73, +74
RADIOLA	TV POWER+06, +56
RADIOMARELLI	TV POWER+57
RCA	TV POWER+45, +46
REX	TV POWER+74
SABA	TV POWER+57, +72, +73, +74, +75
SALORA	TV POWER+74
SANYO	TV POWER+41, +42, +43, +44, +48
SCHNEIDER	TV POWER+06
SELECO	TV POWER+74
SHARP	TV POWER+36, +37, +38, +39, +48
SIEMENS	TV POWER+71
SINGER	TV POWER+57
SINUDYNE	TV POWER+57
SONY	TV POWER+35, +48
TELEAVA	TV POWER+73
TELEFUNKEN	TV POWER+67, +73, +75, +76
THOMSON	TV POWER+72, +73, +75
THOMSON ASIA	TV POWER+80, +81
TOSHIBA	TV POWER+47, +48, +49, +50, +51, +52
WEGA	TV POWER+57
YOKO	TV POWER+06
ZENITH	TV POWER+63